YAMAHA

# PARTS CATALOGUE

# MT07 (BD81) MALAYSIA

1PBD8-440E1

( )

YAMAHA GENUINE Parts & Accessories

MT07
PARTS CATALOGUE
©2015 by Yamaha Motor Co., Ltd.
1st edition, April 2015
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.
Printed in Japan.

# FOREWORD

This Parts Catalogue is related to the parts for the model(s) on the cover page. When you are ordering replacement parts, please refer to this Parts Catalogue and quote both part numbers and part names correctly.

1. Modifications or additions which have been made after the issue of the Parts Catalogue will be announced in the Parts News.
   It is advisable that you make the necessary corrections to the Parts Catalogue according to the Parts News.

2. Abbreviations
   The following abbreviations are used in this Parts Catalogue.

   "UR" Use specified parts number.
   "UN" Use as many as needed.
   "AP" Alternate Parts
   "LM" Locally Made (Parts need to be ordered locally)
   "F#" Frame No. (Applicable machine No.)
   "O/S" Over Size

3. The number of components for assembly
   - Parts, which are to be supplied in an assembly, are listed with a dot (.) in front of the part name as shown below.
   - The numeral appearing to the right of each component part indicates the quantity of parts for each assembly unit.

| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|---|---|---|---|
| 2F5–83310–60 | FRONT FLASHER LIGHT ASSY | 2 | |
| 115–83311–60 | .BULB (6V–18W) | 1 | |

4. Applicable colours of graphics are represented in the "REMARKS" as shown below.

| PART NO. | DESCRIPTION | Q'TY | REMARKS |
|---|---|---|---|
| 2N4–24110–00–X5 | FUEL TANK COMP. | 2 | MXR |
| 3J1–24240–10 | .GRAPHIC, FUEL TANK | 1 | FOR MXR |


5. Note that the illustrations for reference in finding parts numbers are not to be used for assembling. When assembling, please use the applicable service manual.

6. The asterisk (*) before a reference number indicates modified items after the first edition.


# FOREWORD

7. Applicable Serial No.

Frame Serial No.

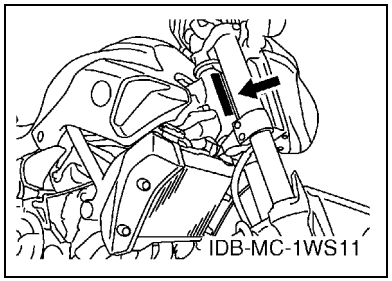


Engine Serial No.

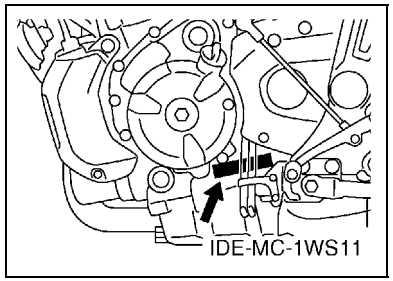


8. Applicable Colour Code (The (*) mark shows Model colour.)

| Abbreviation | Colour Name | Colour Code |
|---|---|---|
| MBL2 | MAT BLACK 2 | 0582 |
| RYC1(*) | REDDISH YELLOW COCKTAIL 1 | 0251 |
| VDVM1(*) | VERY DARK VIOLET METALLIC 1 | 0961 |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

9. Applicable Starting Serial No.

Frame Serial No.

| Serial No. | Name Of Q'ty Column | Model Code |
|---|---|---|
| | | |
| | | |
| | | |
| | | |
| | | |

Engine Serial No.

| Serial No. | Name Of Q'ty Column | Model Code |
|---|---|---|
| | | |
| | | |
| | | |
| | | |
| | | |

# CONTENTS

## ENGINE



CYLINDER HEAD ..... 1
CRANKSHAFT & PISTON ..... 2
VALVE ..... 4
CAMSHAFT & CHAIN ..... 6
WATER PUMP ..... 7
RADIATOR & HOSE ..... 9
OIL PUMP ..... 11
OIL CLEANER ..... 12
INTAKE ..... 13
INTAKE 2 ..... 15
EXHAUST ..... 16
CRANKCASE ..... 17
CRANKCASE COVER 1 ..... 18
STARTER ..... 19
CLUTCH ..... 20
TRANSMISSION ..... 21
SHIFT CAM & FORK ..... 23
SHIFT SHAFT ..... 24


## CHASSIS


FRAME ..... 25
FENDER ..... 27
SIDE COVER ..... 29
REAR ARM ..... 31
REAR SUSPENSION ..... 33
STEERING ..... 34
FRONT FORK ..... 35
FUEL TANK ..... 37
FUEL TANK 2 ..... 39
SEAT ..... 42
FRONT WHEEL ..... 43
FRONT BRAKE CALIPER ..... 44
REAR WHEEL ..... 45
REAR BRAKE CALIPER ..... 47
STEERING HANDLE & CABLE ..... 48
FRONT MASTER CYLINDER ..... 49
STAND & FOOTREST ..... 51
STAND & FOOTREST 2 ..... 54
REAR MASTER CYLINDER ..... 56
GENERATOR ..... 57
STARTING MOTOR ..... 58
FLASHER LIGHT ..... 59
METER ..... 60
HEADLIGHT ..... 61
TAILLIGHT ..... 62
HANDLE SWITCH & LEVER ..... 63
ELECTRICAL 1 ..... 64
ELECTRICAL 2 ..... 66


## INDEX



NUMERICAL INDEX ..... 68

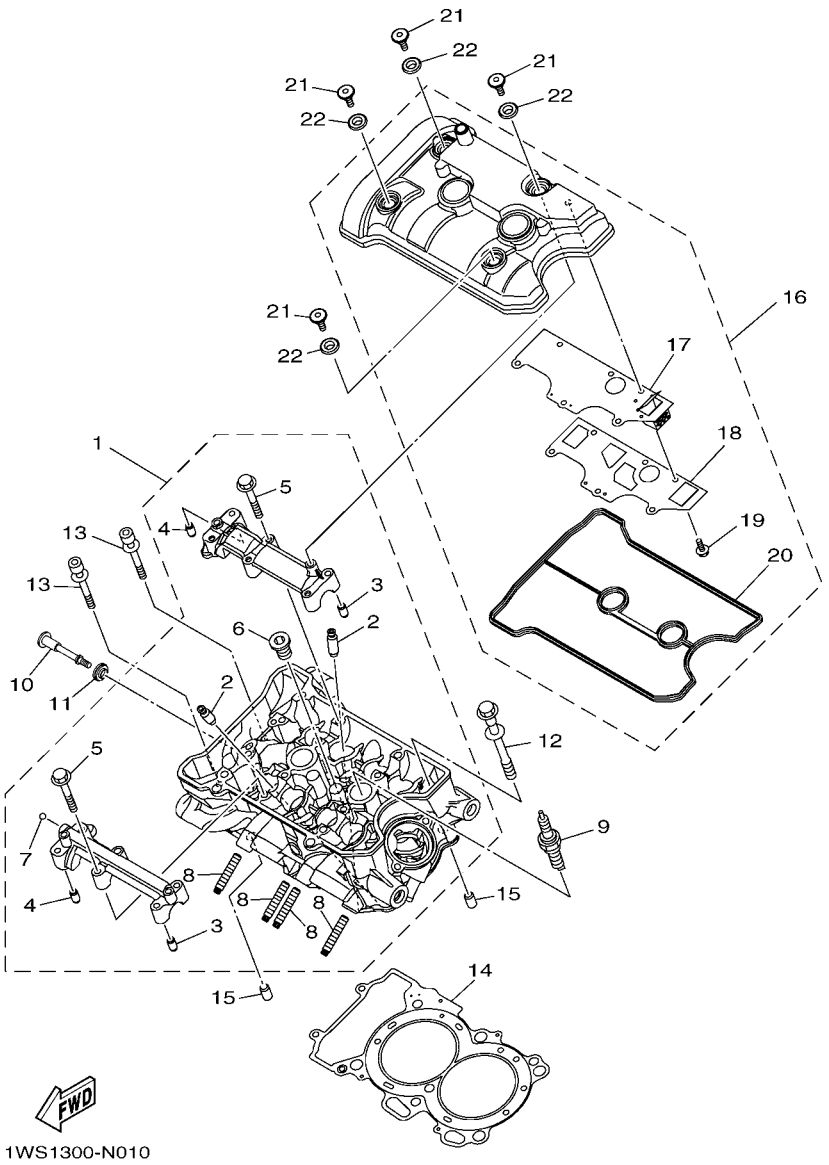

1WS1300-N010


## FIG. 1 CYLINDER HEAD

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–11101–09 | CYLINDER HEAD ASSY | 1 | | | | | |
| 2 | 4D9–11133–10 | .GUIDE, VALVE 1 | 8 | | | | | |
| 3 | 91808–16023 | .PIN, DOWEL | 2 | | | | | |
| 4 | 91808–16023 | .PIN, DOWEL | 2 | | | | | |
| 5 | 90105–06027 | .BOLT, FLANGE | 12 | | | | | |
| 6 | 90340–18002 | .PLUG, STRAIGHT SCREW | 1 | | | | | |
| 7 | 93501–04011 | .BALL | 1 | | | | | |
| 8 | 90116–08087 | .BOLT, STUD | 4 | | | | | |
| 9 | 94701–00436 | PLUG, SPARK (NGK LMAR8A-9) | 2 | | | | | |
| 10 | 90109–06293 | BOLT | 1 | | | | | |
| 11 | 5VY–1111G–00 | RUBBER, MOUNT 1 | 1 | | | | | |
| 12 | 90119–10056 | BOLT, WITH WASHER | 6 | | | | | |
| 13 | 90110–06081 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 14 | 1WS–11181–00 | GASKET, CYLINDER HEAD 1 | 1 | | | | | |
| 15 | 99530–10114 | PIN, DOWEL | 2 | | | | | |
| 16 | 1WS–11190–00 | COVER, CYLINDER HEAD 1 | 1 | | | | | |
| 17 | 1WS–11165–00 | .PLATE, BREATHER | 1 | | | | | |
| 18 | 1WS–11169–00 | .GASKET, BREATHER COVER | 1 | | | | | |
| 19 | 90105–05024 | .BOLT, FLANGE | 6 | | | | | |
| 20 | 1WS–11193–01 | .GASKET, HEAD COVER 1 | 1 | | | | | |
| 21 | 90109–066F0 | BOLT | 4 | | | | | |
| 22 | 5VY–1111G–00 | RUBBER, MOUNT 1 | 4 | | | | | |

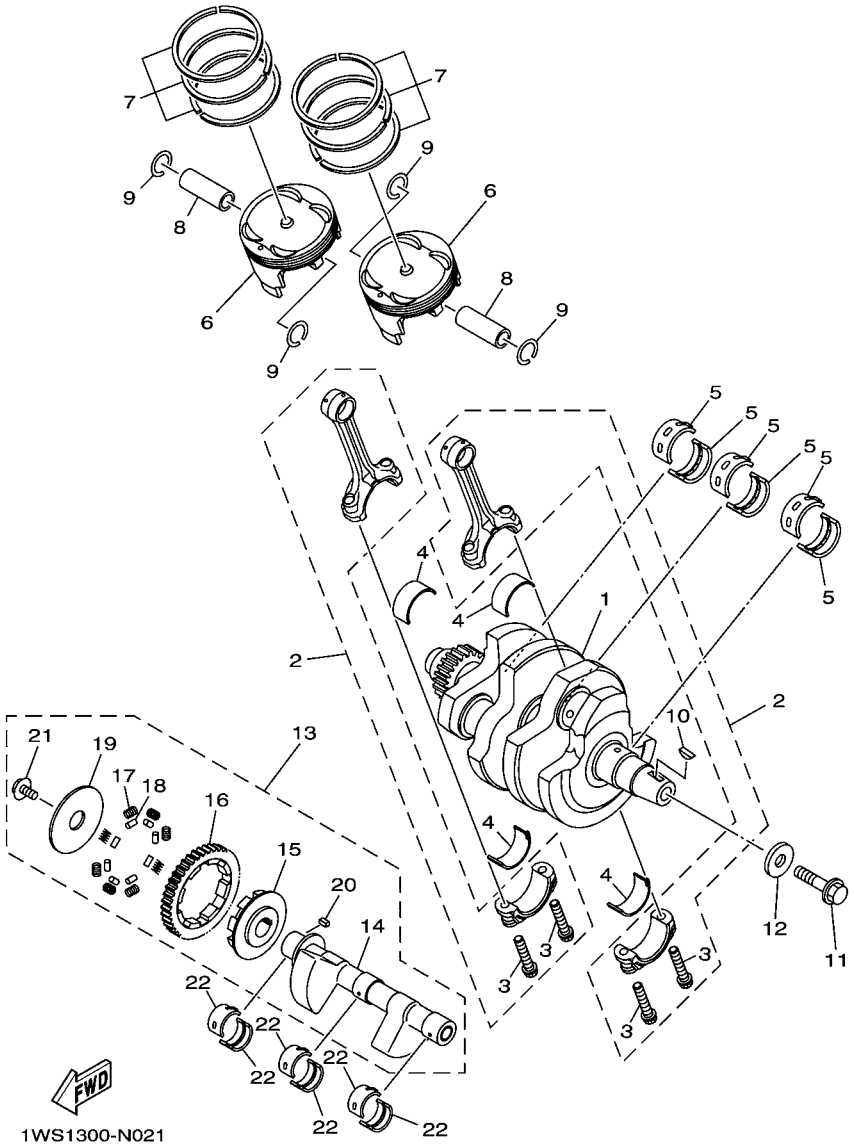


## FIG. 2 CRANKSHAFT & PISTON

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–11400–00 | CRANKSHAFT ASSY | 1 | | | | | |
| 2 | 1WS–11650–00 | CONNECTING ROD ASSY | 2 | | | | | |
| 3 | 1RC–11654–00 | .BOLT, CONNECTING ROD | 2 | | | | | |
| 4 | 1RC–11656–00 | PLANE BEARING, CONNECTING ROD | 4 | | | | | UR BLUE |
| | 1RC–11656–10 | PLANE BEARING, CONNECTING ROD | 4 | | | | | UR BLACK |
| | 1RC–11656–20 | PLANE BEARING, CONNECTING ROD | 4 | | | | | UR BROWN |
| | 1RC–11656–30 | PLANE BEARING, CONNECTING ROD | 4 | | | | | UR GREEN |
| 5 | 3GM–11416–B0 | PLANE BEARING, CRANKSHAFT 1 | 6 | | | | | UR PURPLE |
| | 3GM–11416–A0 | PLANE BEARING, CRANKSHAFT 1 | 6 | | | | | UR WHITE |
| | 3GM–11416–00 | PLANE BEARING, CRANKSHAFT 1 | 6 | | | | | UR BLUE |
| | 3GM–11416–10 | PLANE BEARING, CRANKSHAFT 1 | 6 | | | | | UR BLACK |
| | 3GM–11416–20 | PLANE BEARING, CRANKSHAFT 1 | 6 | | | | | UR BROWN |
| 6 | 1WS–11631–00 | PISTON (STD) | 2 | | | | | |
| 7 | 1WS–11603–00 | PISTON RING SET (STD) | 2 | | | | | |
| 8 | 1WS–11633–00 | PIN, PISTON | 2 | | | | | |
| 9 | 93450–19052 | CIRCLIP | 4 | | | | | |
| 10 | 90280–05029 | KEY, WOODRUFF | 1 | | | | | |
| 11 | 90105–126A8 | BOLT, FLANGE | 1 | | | | | |
| 12 | 90201–12008 | WASHER, PLATE | 1 | | | | | |
| 13 | 1WS–11500–00 | BALANCER ASSY | 1 | | | | | |
| 14 | 1WS–11454–00 | .WEIGHT 1 | 1 | | | | | |
| 15 | 1WS–11496–00 | .BOSS, BUFFER | 1 | | | | | |
| 16 | 1WS–11531–00 | .GEAR, BALANCE WEIGHT | 1 | | | | | |
| 17 | 90501–22721 | .SPRING, COMPRESSION | 8 | | | | | |
| 18 | 93605–10090 | .PIN, DOWEL | 8 | | | | | |
| 19 | 1WS–11533–00 | .PLATE, ABSORBER | 1 | | | | | |
| 20 | 90282–04001 | .KEY, STRAIGHT | 1 | | | | | |

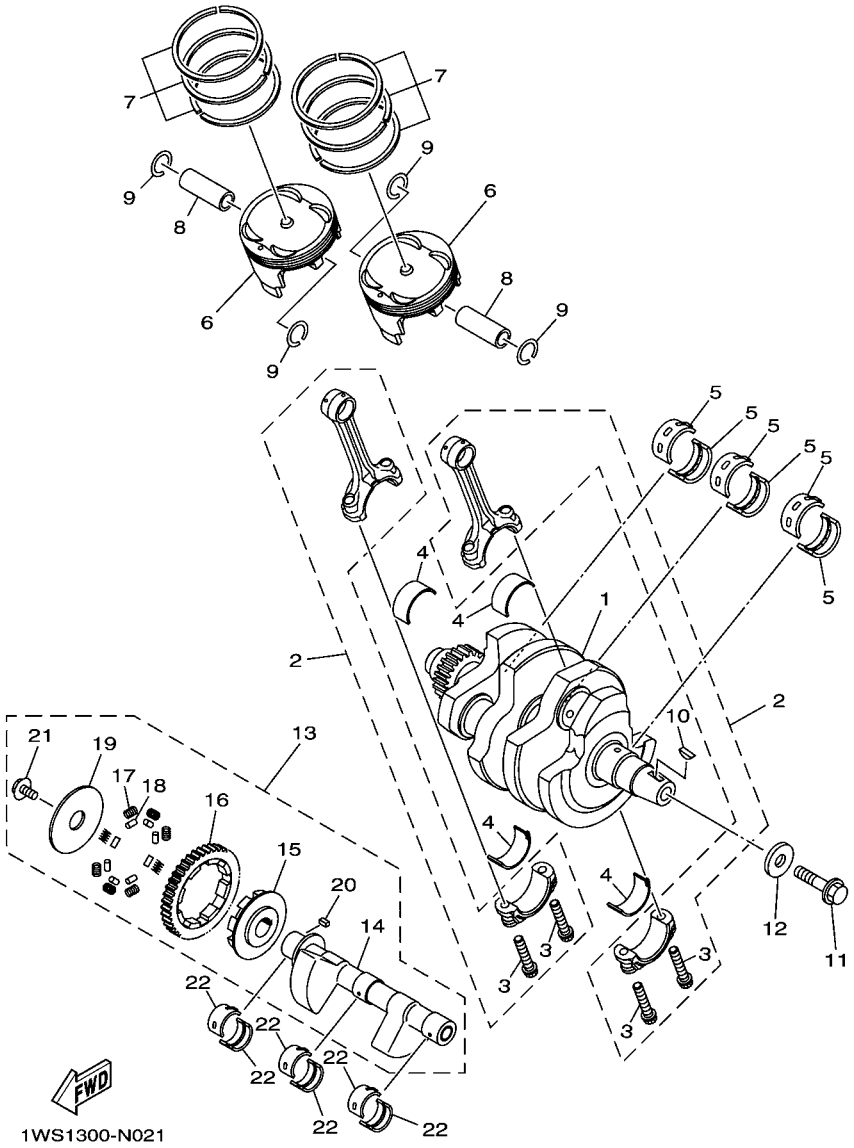


## FIG. 2 CRANKSHAFT & PISTON

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 21 | 90105–10445 | .BOLT, FLANGE | 1 | | | | | |
| 22 | 2S3–11413–00 | METAL, BALANCE WEIGHT | 6 | | | | | UR BLUE |
| | 2S3–11413–10 | METAL, BALANCE WEIGHT | 6 | | | | | UR BLACK |
| | 2S3–11413–20 | METAL, BALANCE WEIGHT | 6 | | | | | UR BROWN |
| | 2S3–11413–30 | METAL, BALANCE WEIGHT | 6 | | | | | UR GREEN |
| | 2S3–11413–40 | METAL, BALANCE WEIGHT | 6 | | | | | UR YELLOW |


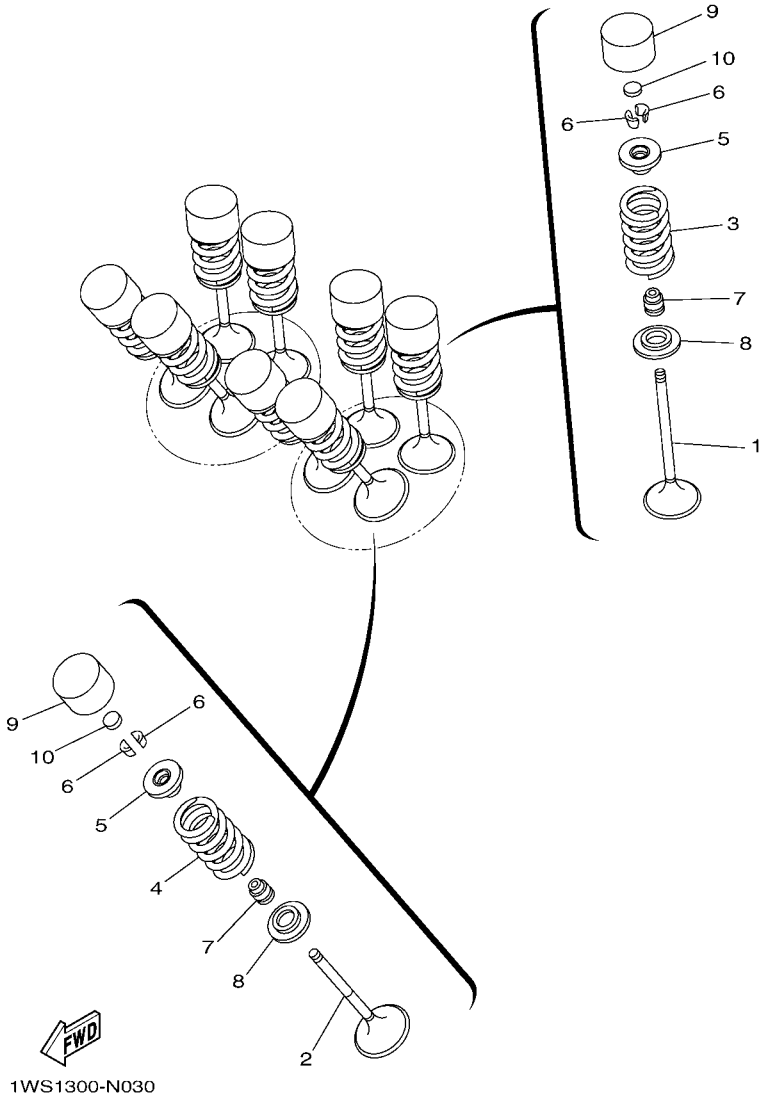



**FIG. 3 VALVE**

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–12111–00 | VALVE, INTAKE | 4 | | | | | |
| 2 | 1WS–12121–00 | VALVE, EXHAUST | 4 | | | | | |
| 3 | 1WS–12113–01 | SPRING, VALVE INNER | 4 | | | | | |
| 4 | 1WS–12114–00 | SPRING, VALVE OUTER | 4 | | | | | |
| 5 | 1WS–12117–00 | RETAINER, VALVE SPRING | 8 | | | | | |
| 6 | 1WG–12118–00 | LOCK, VALVE SPRING RETAINER | 16 | | | | | |
| 7 | 4TE–12119–00 | SEAL, VALVE STEM | 8 | | | | | |
| 8 | 1WS–12116–00 | SEAT, VALVE SPRING | 8 | | | | | |
| 9 | 4C8–12153–10 | LIFTER, VALVE | 8 | | | | | YELLOW |
| | 4C8–12153–09 | LIFTER, VALVE (O/S) | 8 | | | | | AP GREEN |
| 10 | 1HX–12168–F0 | PAD, ADJUSTING 2 (1.50) | 8 | | | | | UR |
| | 1HX–12168–H1 | PAD, ADJUSTING 2 (1.55) | 8 | | | | | UR |
| | 1HX–12168–K1 | PAD, ADJUSTING 2 (1.60) | 8 | | | | | UR |
| | 1HX–12168–M1 | PAD, ADJUSTING 2 (1.65) | 8 | | | | | UR |
| | 1HX–12168–R1 | PAD, ADJUSTING 2 (1.70) | 8 | | | | | UR |
| | 1HX–12168–U1 | PAD, ADJUSTING 2 (1.75) | 8 | | | | | UR |
| | 1HX–12168–W1 | PAD, ADJUSTING 2 (1.80) | 8 | | | | | UR |
| | 1HX–12168–Y1 | PAD, ADJUSTING 2 (1.85) | 8 | | | | | UR |
| | 1HX–12169–11 | PAD, ADJUSTING 2 (1.90) | 8 | | | | | UR |
| | 1HX–12169–31 | PAD, ADJUSTING 2 (1.95) | 8 | | | | | UR |
| | 1HX–12169–50 | PAD, ADJUSTING 2 (2.00) | 8 | | | | | UR |
| | 1HX–12169–70 | PAD, ADJUSTING 2 (2.05) | 8 | | | | | UR |
| | 1HX–12169–90 | PAD, ADJUSTING 2 (2.10) | 8 | | | | | UR |
| | 1HX–12169–E0 | PAD, ADJUSTING 2 (2.15) | 8 | | | | | UR |
| | 1HX–12169–G0 | PAD, ADJUSTING 2 (2.20) | 8 | | | | | UR |
| | 1HX–12169–J0 | PAD, ADJUSTING 2 (2.25) | 8 | | | | | UR |
| | 1HX–12169–L0 | PAD, ADJUSTING 2 (2.30) | 8 | | | | | UR |

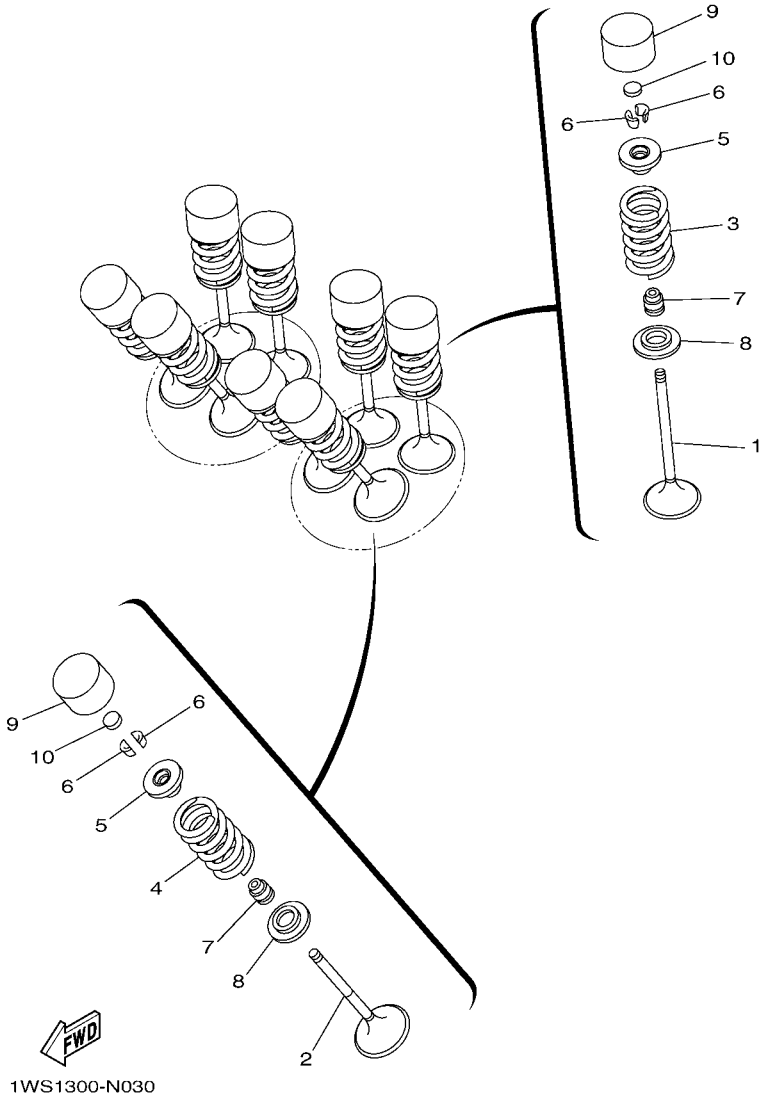


1WS1300-N030

**FIG. 3 VALVE**


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 10 | 1HX–12169–N0 | PAD, ADJUSTING 2 (2.35) | 8 | | | | | UR |
| | 1HX–12169–T0 | PAD, ADJUSTING 2 (2.40) | 8 | | | | | UR |

## FIG. 4 CAMSHAFT & CHAIN

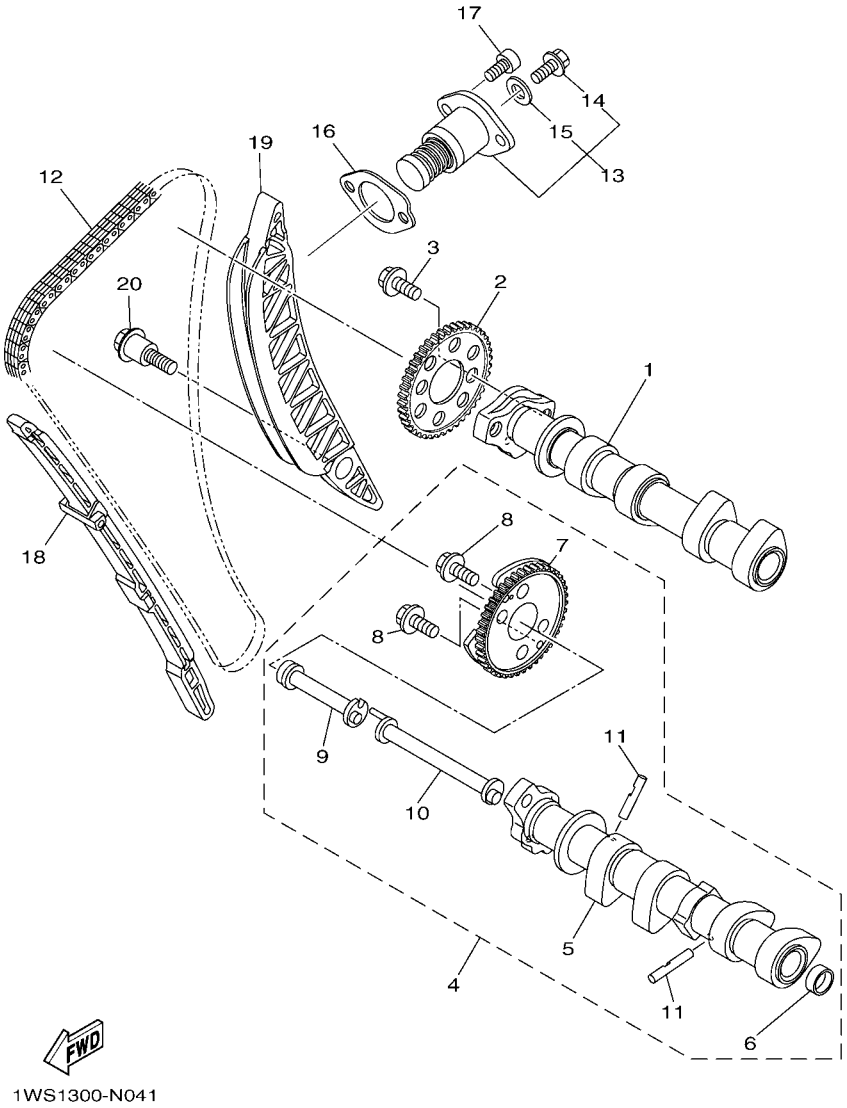


1WS1300-N041


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–12170–00 | CAMSHAFT ASSY 1 | 1 | | | | | |
| 2 | 2C0–12176–00 | SPROCKET, CAM CHAIN | 1 | | | | | |
| 3 | 90105–07006 | BOLT, FLANGE | 2 | | | | | |
| 4 | 1WS–12180–00 | CAMSHAFT ASSY 2 | 1 | | | | | |
| 5 | 1WS–12181–00 | .CAMSHAFT 2 | 1 | | | | | |
| 6 | 90331–16001 | .PLUG | 1 | | | | | |
| 7 | 1WS–12280–00 | .DECOMPRESSION ASSY | 1 | | | | | |
| 8 | 90105–07006 | .BOLT, FLANGE | 2 | | | | | |
| 9 | 1WS–12247–00 | .SHAFT, TENSIONER | 1 | | | | | |
| 10 | 1WS–12257–00 | .SHAFT 2 | 1 | | | | | |
| 11 | 1PD–12288–00 | .CAM, DECOMPRESSION | 2 | | | | | |
| 12 | 94591–61134 | CHAIN (T098XRH2015-134P) | 1 | | | | | |
| 13 | 1WS–12210–02 | TENSIONER ASSY, CAM CHAIN | 1 | | | | | |
| 14 | 5EL–12228–00 | .BOLT | 1 | | | | | |
| 15 | 5SL–12214–00 | .GASKET | 1 | | | | | |
| 16 | 1WS–12213–00 | GASKET, TENSIONER CASE | 1 | | | | | |
| 17 | 90110–06396 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 18 | 1WS–12251–00 | DAMPER, CHAIN 1 | 1 | | | | | |
| 19 | 1WS–12252–00 | DAMPER, CHAIN 2 | 1 | | | | | |
| 20 | 90109–06295 | BOLT | 1 | | | | | |

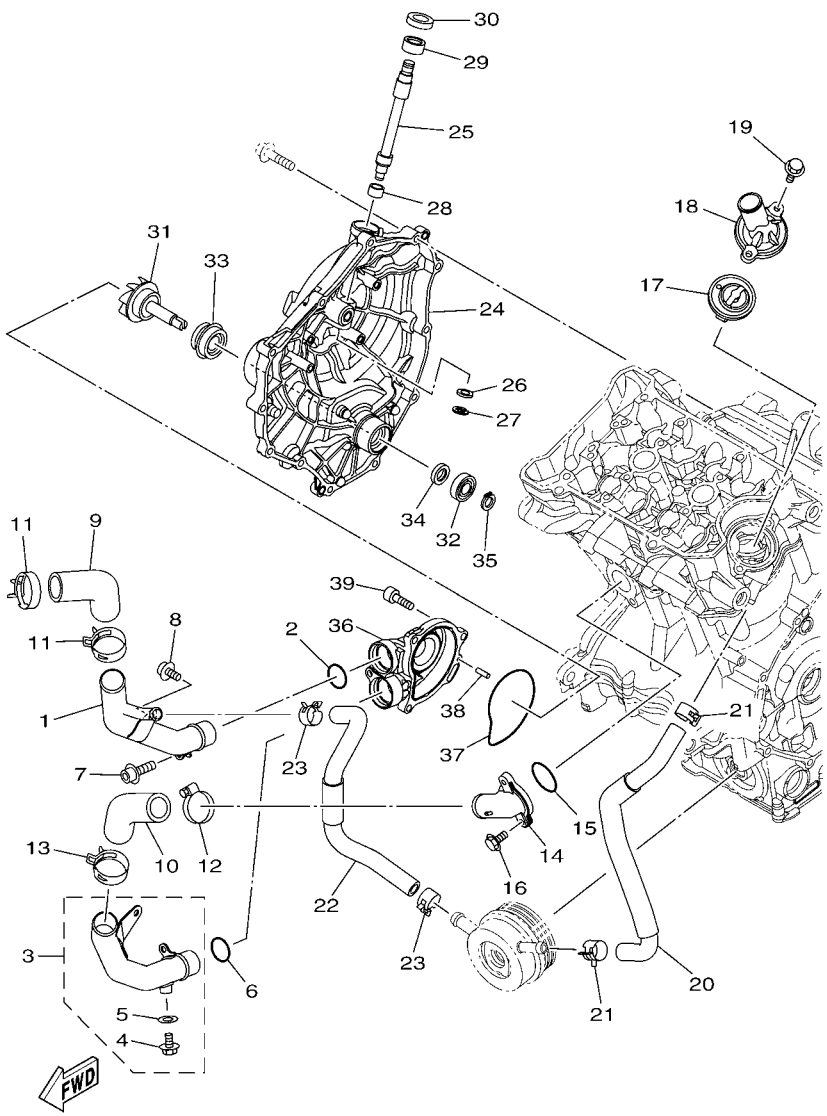

1WSG300-N050

**FIG. 5 WATER PUMP**


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–12481–00 | PIPE 1 | 1 | | | | | |
| 2 | 93210–235A1 | O-RING | 1 | | | | | |
| 3 | 1WS–12482–00 | PIPE 2 | 1 | | | | | |
| 4 | 95022–06010 | .BOLT, FLANGE | 1 | | | | | |
| 5 | 90430–06014 | .GASKET | 1 | | | | | |
| 6 | 93210–235A1 | O-RING | 1 | | | | | |
| 7 | 91314–06014 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 8 | 90110–06152 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 9 | 1WS–12576–00 | HOSE 1 | 1 | | | | | |
| 10 | 1WS–12576–00 | HOSE 1 | 1 | | | | | |
| 11 | 90467–290A0 | CLIP | 2 | | | | | |
| 12 | 90450–35001 | HOSE CLAMP ASSY | 1 | | | | | |
| 13 | 90467–290A0 | CLIP | 1 | | | | | |
| 14 | 1WS–12469–00 | JOINT 1 | 1 | | | | | |
| 15 | 93210–33786 | O-RING | 1 | | | | | |
| 16 | 95812–06020 | BOLT, FLANGE | 2 | | | | | |
| 17 | 1WS–12410–00 | THERMOSTAT ASSY | 1 | | | | | |
| 18 | 1WS–12413–00 | COVER, THERMOSTAT | 1 | | | | | |
| 19 | 95817–06020 | BOLT, FLANGE | 2 | | | | | |
| 20 | 1WS–12588–00 | HOSE 5 | 1 | | | | | |
| 21 | 90467–170A6 | CLIP | 2 | | | | | |
| 22 | 1WS–12589–00 | HOSE 6 | 1 | | | | | |
| 23 | 90467–170A6 | CLIP | 2 | | | | | |
| 24 | 1WS–15421–00 | COVER, CRANKCASE 2 | 1 | | | | | |
| 25 | 2D1–16382–00 | AXLE, PUSH LEVER | 1 | | | | | |
| 26 | 92907–08600 | WASHER, PLATE | 1 | | | | | |
| 27 | 99001–07600 | CIRCLIP | 1 | | | | | |

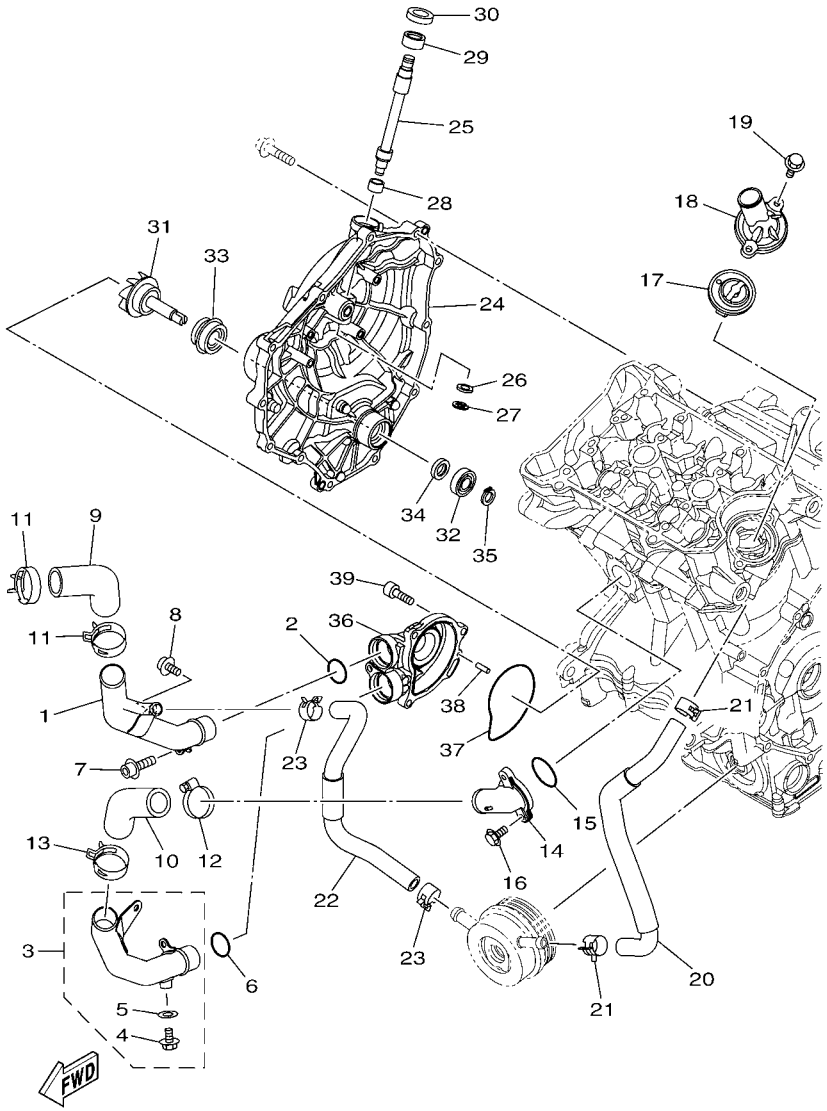

1WSG300-N050


**FIG. 5 WATER PUMP**

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 93317–11096 | BEARING | 1 | | | | | |
| 29 | 93315–21570 | BEARING | 1 | | | | | |
| 30 | 93102–15212 | OIL SEAL | 1 | | | | | |
| 31 | 1WS–12450–00 | IMPELLER SHAFT ASSY | 1 | | | | | |
| 32 | 93306–00106 | BEARING | 1 | | | | | |
| 33 | 5VK–12438–00 | SEAL, MECHANICAL | 1 | | | | | |
| 34 | 93101–12173 | OIL SEAL | 1 | | | | | |
| 35 | 99009–12400 | CIRCLIP | 1 | | | | | |
| 36 | 1WS–12422–00 | COVER, HOUSING | 1 | | | | | |
| 37 | 1WS–12439–00 | O-RING | 1 | | | | | |
| 38 | 93603–12007 | PIN, DOWEL | 1 | | | | | |
| 39 | 90110–06274 | BOLT, HEXAGON SOCKET HEAD | 3 | | | | | |

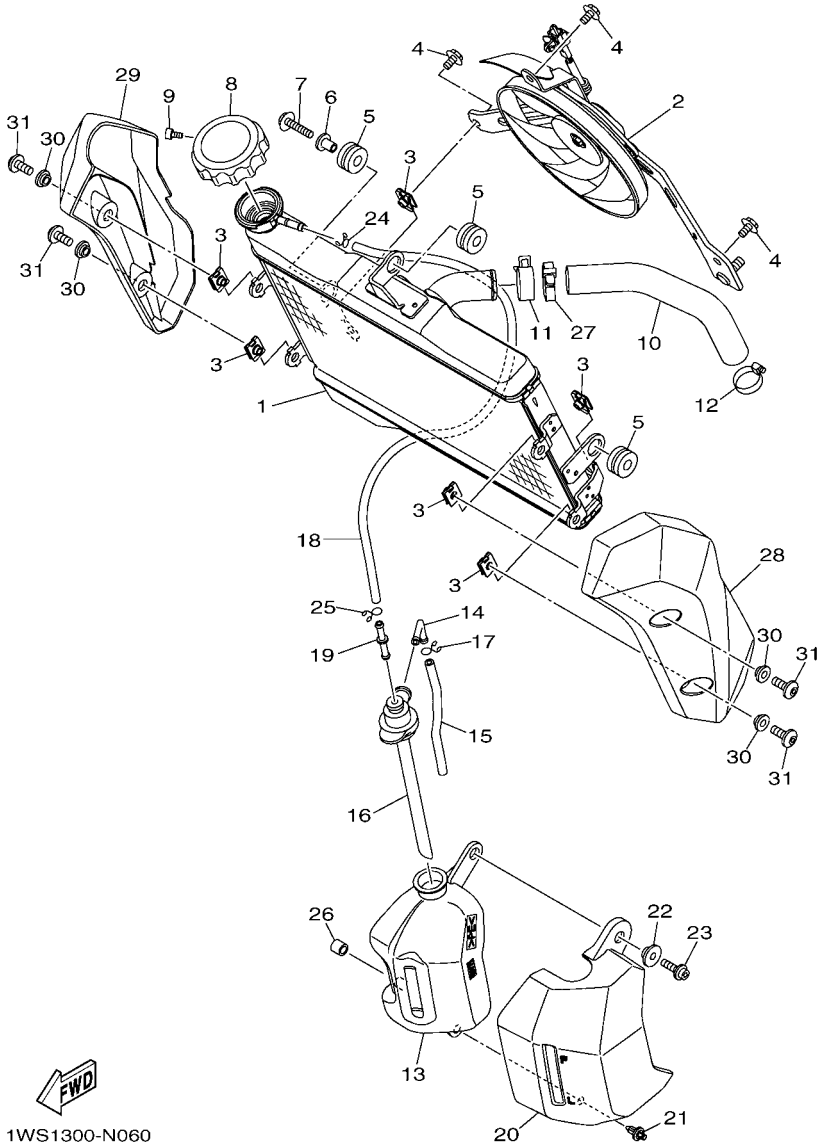



## FIG. 6 RADIATOR & HOSE

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–12461–00 | RADIATOR COMP | 1 | | | | | |
| 2 | 1WS–12405–00 | BLOWER ASSY | 1 | | | | | |
| 3 | 1WS–12671–00 | NUT 1 | 6 | | | | | |
| 4 | 5GJ–12675–00 | BOLT, BLOWER HOLDING | 3 | | | | | |
| 5 | 90480–15363 | GROMMET | 3 | | | | | |
| 6 | 90387–07391 | COLLAR | 1 | | | | | |
| 7 | 95802–06025 | BOLT, FLANGE | 1 | | | | | |
| 8 | 3D7–12462–00 | CAP, RADIATOR | 1 | | | | | |
| 9 | 91317–03006 | BOLT | 1 | | | | | |
| 10 | 1WS–12578–00 | HOSE 3 | 1 | | | | | |
| 11 | 90467–290A0 | CLIP | 1 | | | | | |
| 12 | 90450–35001 | HOSE CLAMP ASSY | 1 | | | | | |
| 13 | 1WS–21871–00 | TANK, RECOVERY | 1 | | | | | |
| 14 | 26H–21828–00 | ELBOW | 1 | | | | | |
| 15 | 90445–08020 | HOSE | 1 | | | | | |
| 16 | 3P6–21875–00 | CAP | 1 | | | | | |
| 17 | 90467–08075 | CLIP | 1 | | | | | |
| 18 | 1WS–21816–00 | PIPE 1 | 1 | | | | | |
| 19 | 4XY–14568–00 | JOINT | 1 | | | | | |
| 20 | 1WS–2172W–00 | COVER | 1 | | | | | |
| 21 | 90269–06008 | RIVET | 1 | | | | | |
| 22 | 90387–06024 | COLLAR | 1 | | | | | |
| 23 | 90110–06163 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 24 | 90467–08075 | CLIP | 1 | | | | | |
| 25 | 90467–08003 | CLIP | 1 | | | | | |
| 26 | 90445–11M08 | HOSE (L10) | 1 | | | | | |
| 27 | 90464–07M40 | CLAMP | 1 | | | | | |

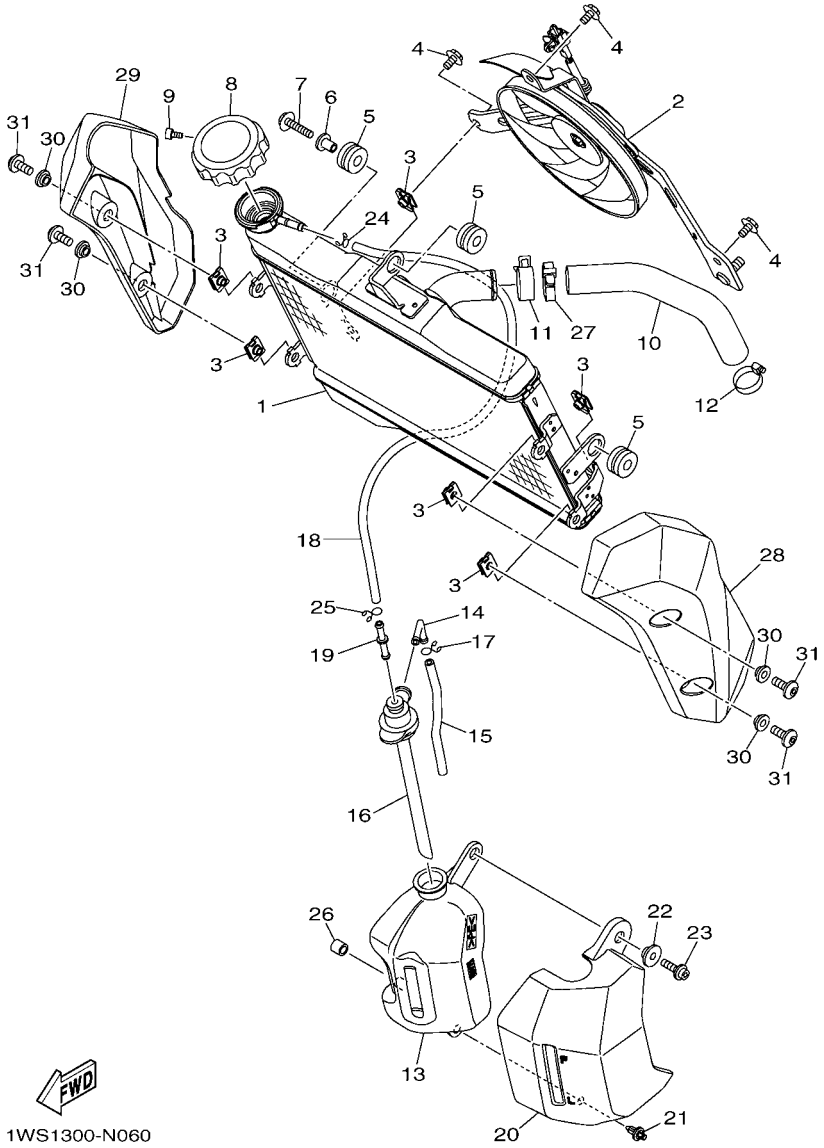


## FIG. 6 RADIATOR & HOSE

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 1WS–21731–00 | COVER, SIDE 3 | 1 | | | | | |
| 29 | 1WS–21741–00 | COVER, SIDE 4 | 1 | | | | | |
| 30 | 90387–06130 | COLLAR | 4 | | | | | |
| 31 | 90111–06151 | BOLT,HEX. SOCKET BUTTON | 4 | | | | | |

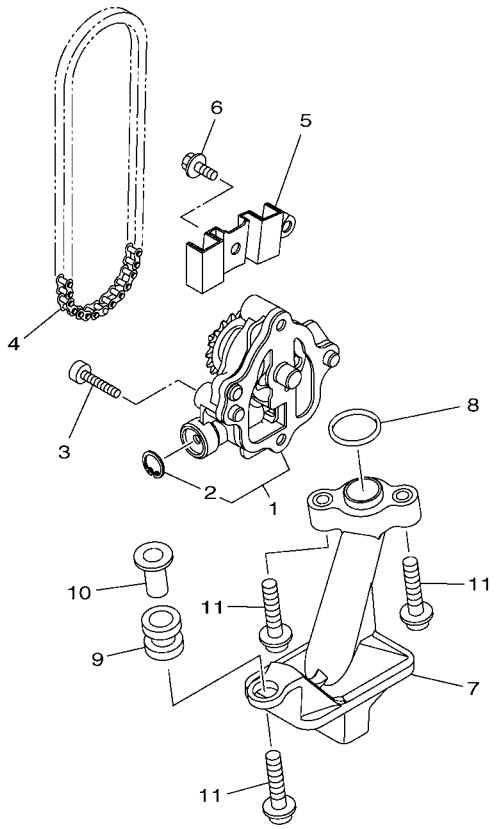



FWD

1WS1300-N071

## FIG. 7 OIL PUMP


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–13300–00 | OIL PUMP ASSY | 1 | | | | | |
| 2 | 99009–15500 | .CIRCLIP | 1 | | | | | |
| 3 | 95812–06040 | BOLT, FLANGE | 4 | | | | | |
| 4 | 94581–79060 | CHAIN (DID25H-66L) | 1 | | | | | |
| 5 | 1WS–13898–00 | HOLDER | 1 | | | | | |
| 6 | 90110–06168 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 7 | 1WS–13410–00 | STRAINER HOUSING ASSY | 1 | | | | | |
| 8 | 93210–207A0 | O-RING | 1 | | | | | |
| 9 | 90480–13010 | GROMMET | 1 | | | | | |
| 10 | 5VY–13117–10 | COLLAR, DISTANCE | 1 | | | | | |
| 11 | 90110–06173 | BOLT, HEXAGON SOCKET HEAD | 3 | | | | | |

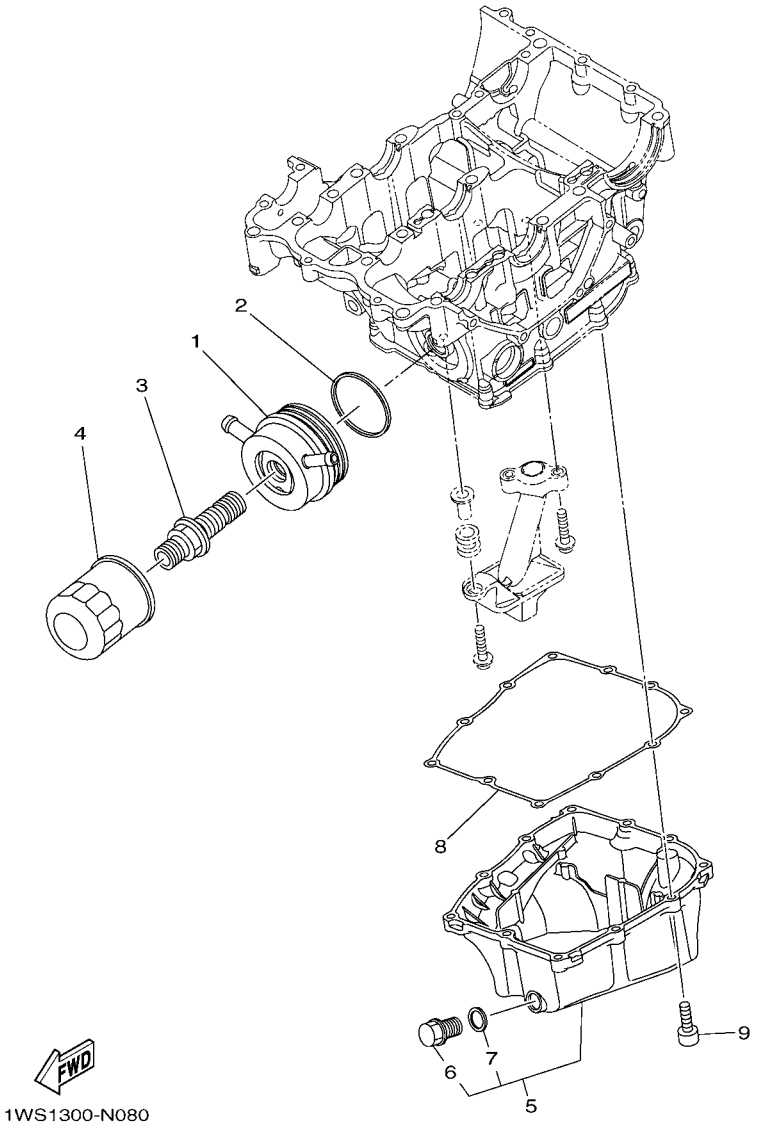

1WS1300-N080

## FIG. 8 OIL CLEANER

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–13470–00 | OIL COOLER ASSY | 1 | | | | | |
| 2 | 1XD–13475–00 | GASKET | 1 | | | | | |
| 3 | 90401–20009 | BOLT, UNION | 1 | | | | | |
| 4 | 5GH–13440–50 | ELEMENT ASSY, OIL CLEANER | 1 | | | | | |
| 5 | 1WS–13400–00 | STRAINER COVER ASSY | 1 | | | | | |
| 6 | 90340–14132 | .PLUG, STRAIGHT SCREW | 1 | | | | | |
| 7 | 214–11198–01 | .GASKET | 1 | | | | | |
| 8 | 1WS–13414–00 | GASKET, STRAINER COVER | 1 | | | | | |
| 9 | 91312–06030 | BOLT | 11 | | | | | |

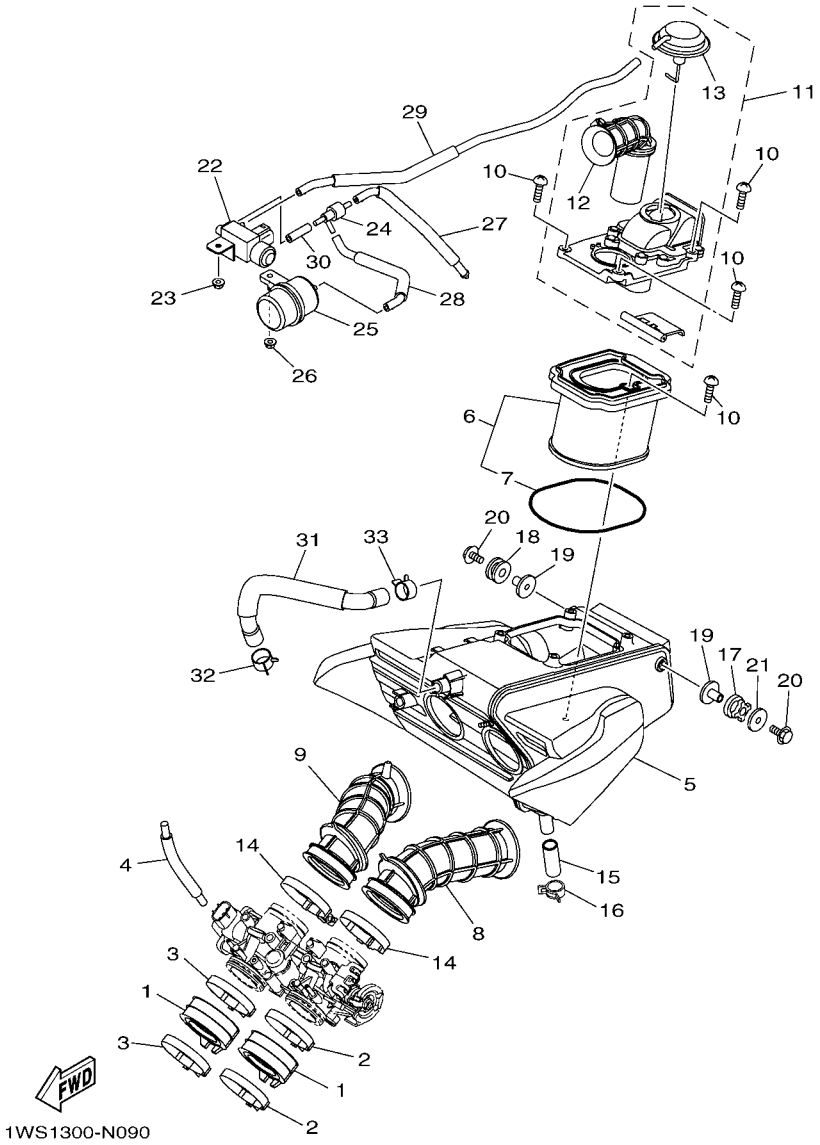


## FIG. 9 INTAKE

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–13635–00 | JOINT, INTAKE 1 | 2 | | | | | |
| 2 | 90450–56011 | HOSE CLAMP ASSY | 2 | | | | | |
| 3 | 90450–56012 | HOSE CLAMP ASSY | 2 | | | | | |
| 4 | 1WS–13542–00 | HOSE, VACUUM SENSING 1 | 1 | | | | | |
| 5 | 1WS–14401–00 | AIR CLEANER CASE ASSY | 1 | | | | | |
| 6 | 1WS–14450–00 | ELEMENT ASSY, AIR CLEANER | 1 | | | | | |
| 7 | 1WS–14452–00 | .SEAL | 1 | | | | | |
| 8 | 1WS–14469–00 | FUNNEL, AIR | 1 | | | | | |
| 9 | 1WS–1446C–00 | FUNNEL 2 | 1 | | | | | |
| 10 | 90160–05013 | SCREW, ROUND TAPPING | 5 | | | | | |
| 11 | 1WS–14430–00 | DUCT ASSY | 1 | | | | | |
| 12 | 1WS–14437–00 | .DUCT | 1 | | | | | |
| 13 | 3D7–14545–00 | .DIAPHRAGM | 1 | | | | | |
| 14 | 90450–56011 | HOSE CLAMP ASSY | 2 | | | | | |
| 15 | 1WS–1443E–00 | PIPE, DRAIN | 1 | | | | | |
| 16 | 90467–13083 | CLIP | 1 | | | | | |
| 17 | 90480–15001 | GROMMET | 1 | | | | | |
| 18 | 90480–15014 | GROMMET | 1 | | | | | |
| 19 | 90387–06300 | COLLAR | 2 | | | | | |
| 20 | 95817–06025 | BOLT, FLANGE | 2 | | | | | |
| 21 | 90201–064K6 | WASHER, PLATE | 1 | | | | | |
| 22 | 5PS–1410H–00 | FUEL CUT SOLENOID VALVE | 1 | | | | | |
| 23 | 95707–05500 | NUT, FLANGE | 1 | | | | | |
| 24 | 5PS–14552–00 | VALVE, CHECK | 1 | | | | | |
| 25 | 5PS–1446E–00 | TANK, SURGE | 1 | | | | | |
| 26 | 95707–05500 | NUT, FLANGE | 1 | | | | | |
| 27 | 1WS–13545–00 | HOSE 1 | 1 | | | | | |


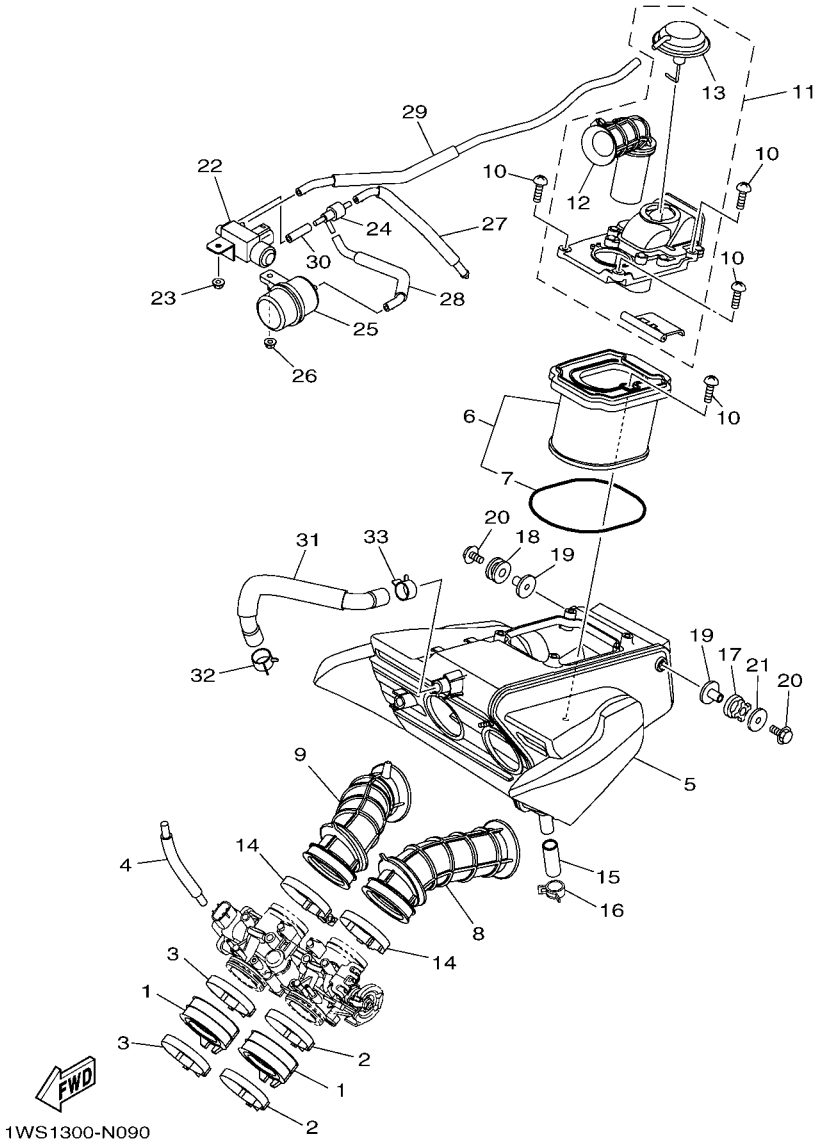



**FIG. 9 INTAKE**

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 1WS–13546–00 | HOSE 2 | 1 | | | | | |
| 29 | 1WS–13547–00 | HOSE 3 | 1 | | | | | |
| 30 | 90445–08010 | HOSE | 1 | | | | | |
| 31 | 1WS–11166–00 | PIPE, BREATHER 1 | 1 | | | | | |
| 32 | 90467–17128 | CLIP | 1 | | | | | |
| 33 | 90467–160A2 | CLIP | 1 | | | | | |


## FIG. 10 INTAKE 2

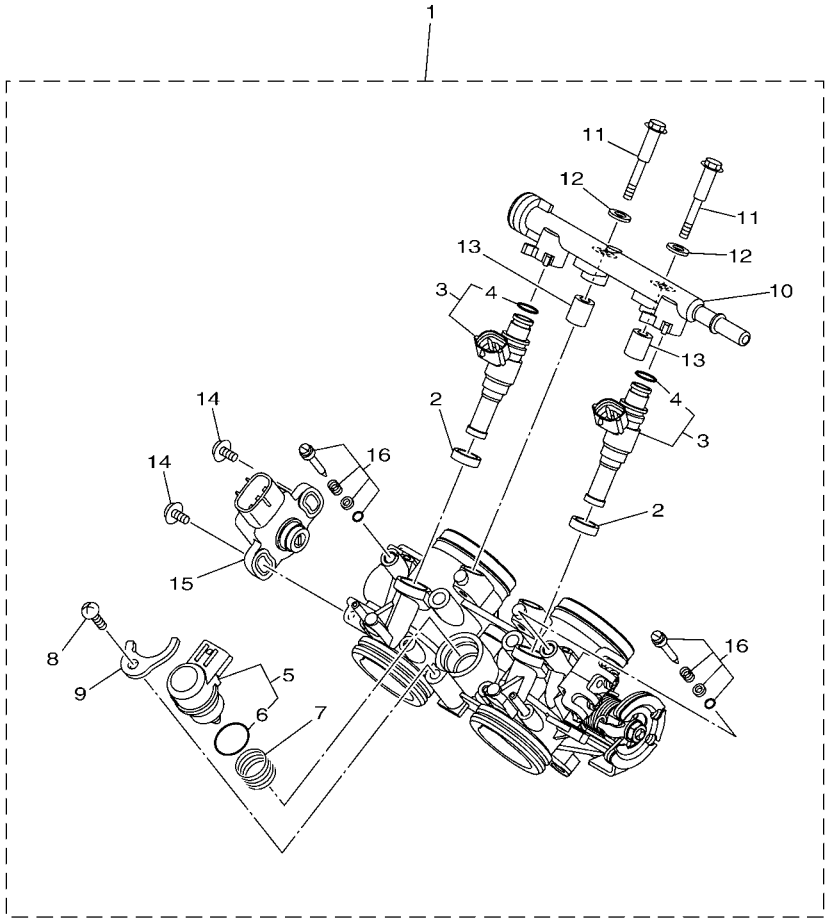


1XBA300-P100


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–13750–00 | THROTTLE BODY ASSY | 1 | | | | | |
| 2 | 8FP–13556–00 | .RUBBER, INJECTOR | 2 | | | | | |
| 3 | 1WS–13761–00 | .INJECTOR | 2 | | | | | |
| 4 | 5PS–14147–00 | ..O-RING | 1 | | | | | |
| 5 | 1WS–85801–00 | .STEPPING MOTOR | 1 | | | | | |
| 6 | 54P–E416A–00 | ..O-RING | 1 | | | | | |
| 7 | 1WS–14335–00 | .SPRING, PLUNGER | 1 | | | | | |
| 8 | 98502–06012 | .SCREW, PAN HEAD | 1 | | | | | |
| 9 | 54P–14243–00 | .PLATE | 1 | | | | | |
| 10 | 1WS–13938–00 | .PIPE | 1 | | | | | |
| 11 | 8HG–13573–00 | .BOLT 1 | 2 | | | | | |
| 12 | 8GL–13571–00 | .WASHER | 2 | | | | | |
| 13 | 8HG–14534–00 | .COLLAR | 2 | | | | | |
| 14 | 8CC–14216–10 | .SCREW | 2 | | | | | |
| 15 | 3B4–85885–00 | .THROTTLE SENSOR ASSY | 1 | | | | | |
| 16 | 2C0–14105–00 | .PILOT SCREW SET | 2 | | | | | |

## FIG. 11 EXHAUST

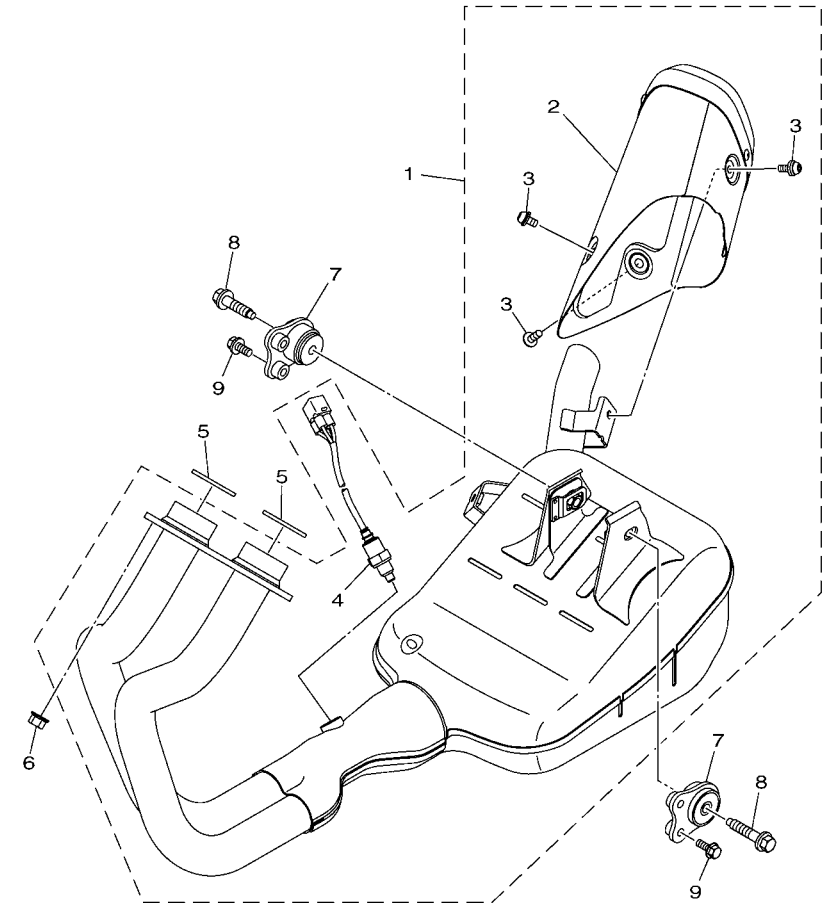



1WS1300-N110

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–14710–00 | MUFFLER ASSY 1 | 1 | | | | | |
| 2 | 1WS–14708–00 | .PROTECTOR ASSY | 1 | | | | | |
| 3 | 90111–06060 | .BOLT HEX. SOCKET BUTTON | 3 | | | | | |
| 4 | 1WS–8592A–00 | .SENSOR, OXYGEN | 1 | | | | | |
| 5 | 3YF–14613–01 | GASKET, EXHAUST PIPE | 2 | | | | | |
| 6 | 90179–08410 | NUT | 4 | | | | | |
| 7 | 20S–21445–01 | STAY, MUFFLER 1 | 2 | | | | | |
| 8 | 90105–08164 | BOLT, FLANGE | 2 | | | | | |
| 9 | 95824–06016 | BOLT, FLANGE | 4 | | | | | |

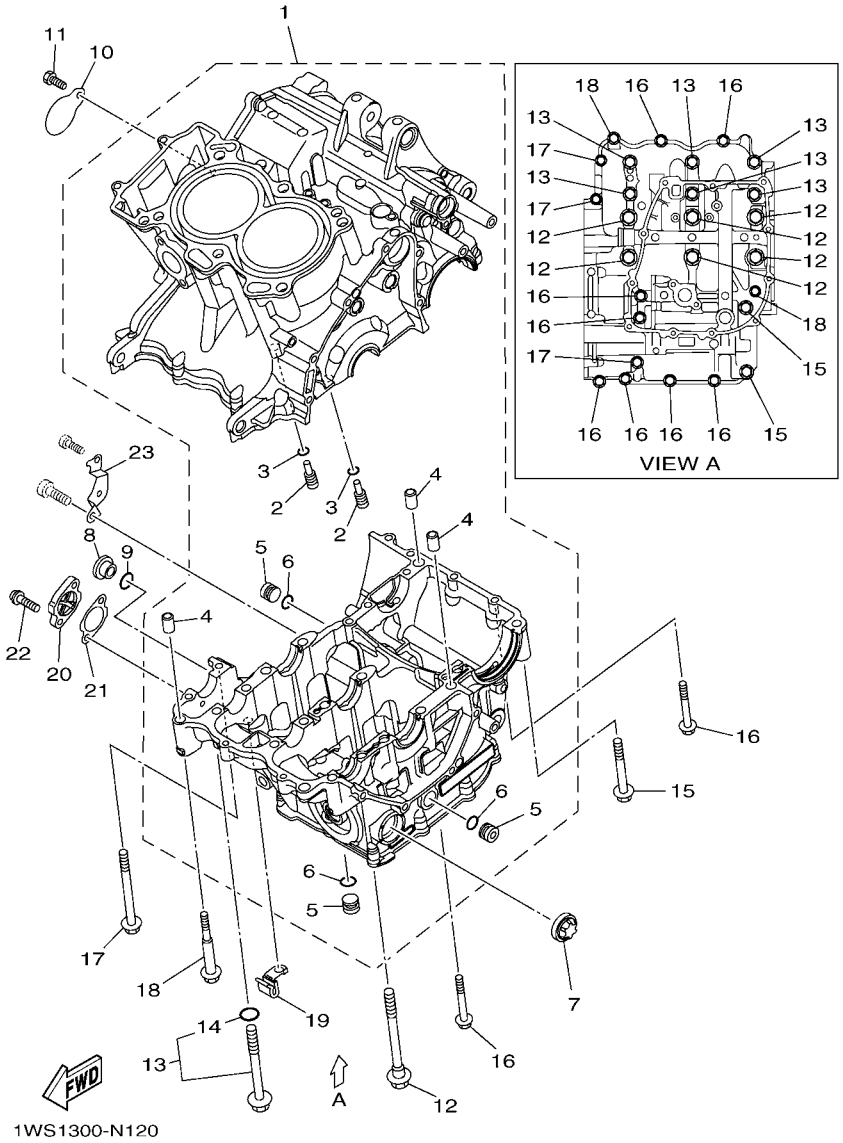



## FIG. 12 CRANKCASE

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–15100–09 | CRANKCASE ASSY | 1 | | | | | |
| 2 | 5EB–15155–00 | .NOZZLE 3 | 2 | | | | | |
| 3 | 93210–04092 | .O-RING | 2 | | | | | |
| 4 | 99530–10014 | .PIN, DOWEL | 3 | | | | | |
| 5 | 90338–16262 | .PLUG | 3 | | | | | |
| 6 | 93210–12790 | .O-RING | 3 | | | | | |
| 7 | 2H7–15361–00 | GAUGE, LEVEL | 1 | | | | | |
| 8 | 36Y–15189–00 | PLUG | 1 | | | | | |
| 9 | 93210–16325 | O-RING | 1 | | | | | |
| 10 | 1WS–15189–00 | PLUG | 1 | | | | | |
| 11 | 90101–06043 | BOLT | 1 | | | | | |
| 12 | 90119–09014 | BOLT, WITH WASHER | 6 | | | | | |
| 13 | 1WS–15156–00 | BOLT, CRANKCASE JOURNAL | 6 | | | | | |
| 14 | 93210–07540 | .O-RING | 1 | | | | | |
| 15 | 95812–08065 | BOLT, FLANGE | 2 | | | | | |
| 16 | 95812–06040 | BOLT, FLANGE | 8 | | | | | |
| 17 | 95812–06060 | BOLT, FLANGE | 3 | | | | | |
| 18 | 90109–06100 | BOLT | 2 | | | | | |
| 19 | 90462–10064 | CLAMP | 1 | | | | | |
| 20 | 1WS–15416–00 | COVER, OIL PUMP | 1 | | | | | |
| 21 | 1WS–15456–00 | GASKET, OIL PUMP COVER 1 | 1 | | | | | |
| 22 | 90110–06395 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 23 | 1WS–15128–00 | HOLDER | 1 | | | | | |

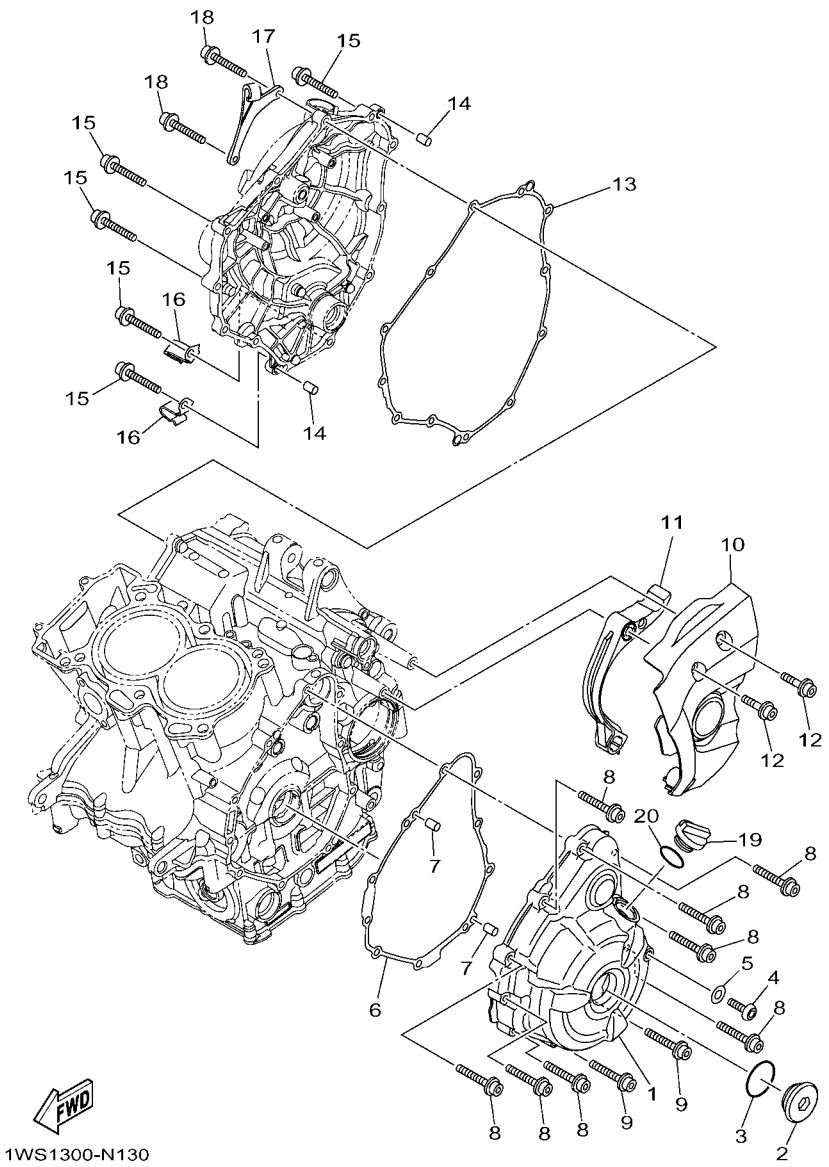


## FIG. 13 CRANKCASE COVER 1


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–15411–00 | COVER, CRANKCASE 1 | 1 | | | | | |
| 2 | 90340–36005 | PLUG, STRAIGHT SCREW | 1 | | | | | |
| 3 | 93210–357A3 | O-RING | 1 | | | | | |
| 4 | 92017–08012 | BOLT, BUTTON HEAD | 1 | | | | | |
| 5 | 90430–08143 | GASKET | 1 | | | | | |
| 6 | 1WS–15451–00 | GASKET, CRANKCASE COVER 1 | 1 | | | | | |
| 7 | 99530–08012 | PIN, DOWEL | 2 | | | | | |
| 8 | 90110–06388 | BOLT, HEXAGON SOCKET HEAD | 8 | | | | | |
| 9 | 90110–06389 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 10 | 1WS–15418–00 | COVER, CHAIN CASE | 1 | | | | | |
| 11 | 1WS–15377–00 | GUIDE, INLET | 1 | | | | | |
| 12 | 90110–06396 | BOLT, HEXAGON SOCKET HEAD | 3 | | | | | |
| 13 | 1WS–15461–00 | GASKET, CRANKCASE COVER 2 | 1 | | | | | |
| 14 | 99530–08012 | PIN, DOWEL | 2 | | | | | |
| 15 | 90110–06388 | BOLT, HEXAGON SOCKET HEAD | 10 | | | | | |
| 16 | 90465–08045 | CLAMP | 2 | | | | | |
| 17 | 1WS–15441–00 | HOLDER, CLUTCH CABLE | 1 | | | | | |
| 18 | 90110–06389 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 19 | 3F9–15362–10 | PLUG, OIL LEVEL | 1 | | | | | |
| 20 | 93210–27194 | O-RING | 1 | | | | | |

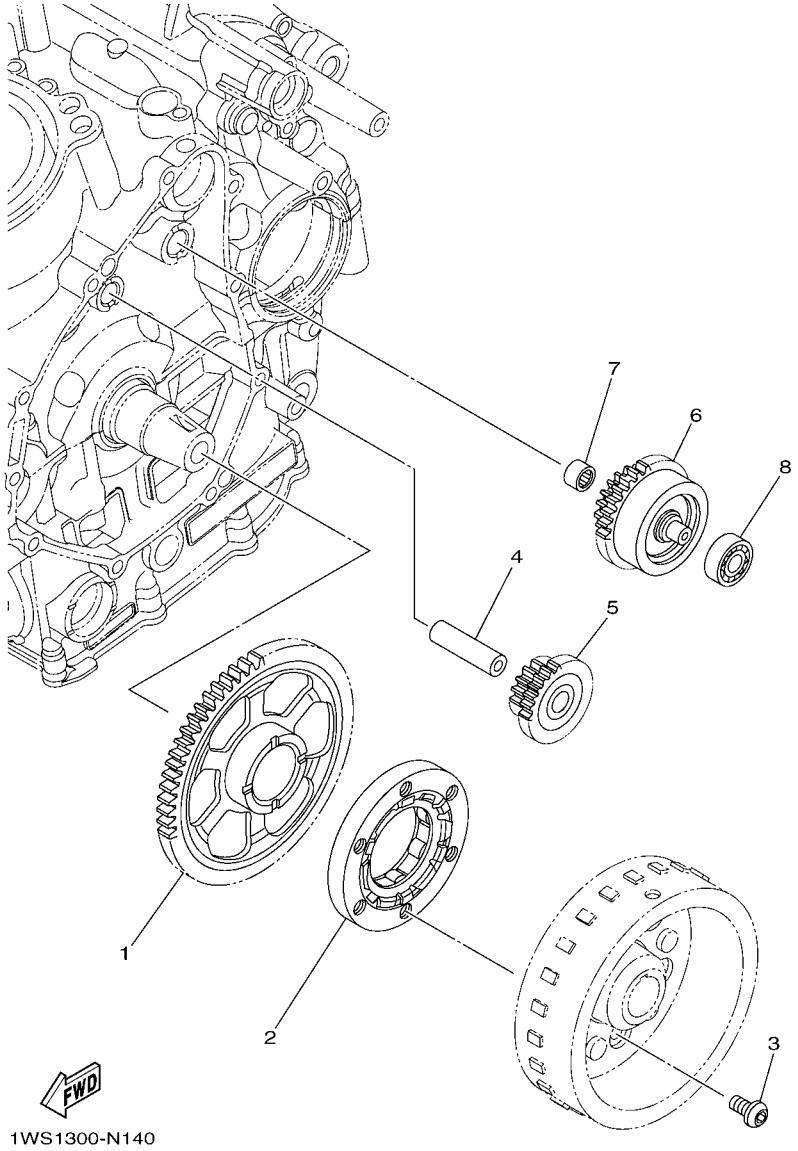

1WS1300-N140


## FIG. 14 STARTER

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–15515–00 | GEAR 3 | 1 | | | | | |
| 2 | 1WS–15590–00 | STARTER ONE-WAY ASSY | 1 | | | | | |
| 3 | 90149–08030 | SCREW | 3 | | | | | |
| 4 | 23P–15521–00 | SHAFT 1 | 1 | | | | | |
| 5 | 1WS–15512–00 | GEAR, IDLER 1 | 1 | | | | | |
| 6 | 1WS–15560–00 | DAMPER ASSY | 1 | | | | | |
| 7 | 93317–11096 | BEARING | 1 | | | | | |
| 8 | 93306–00006 | BEARING | 1 | | | | | |

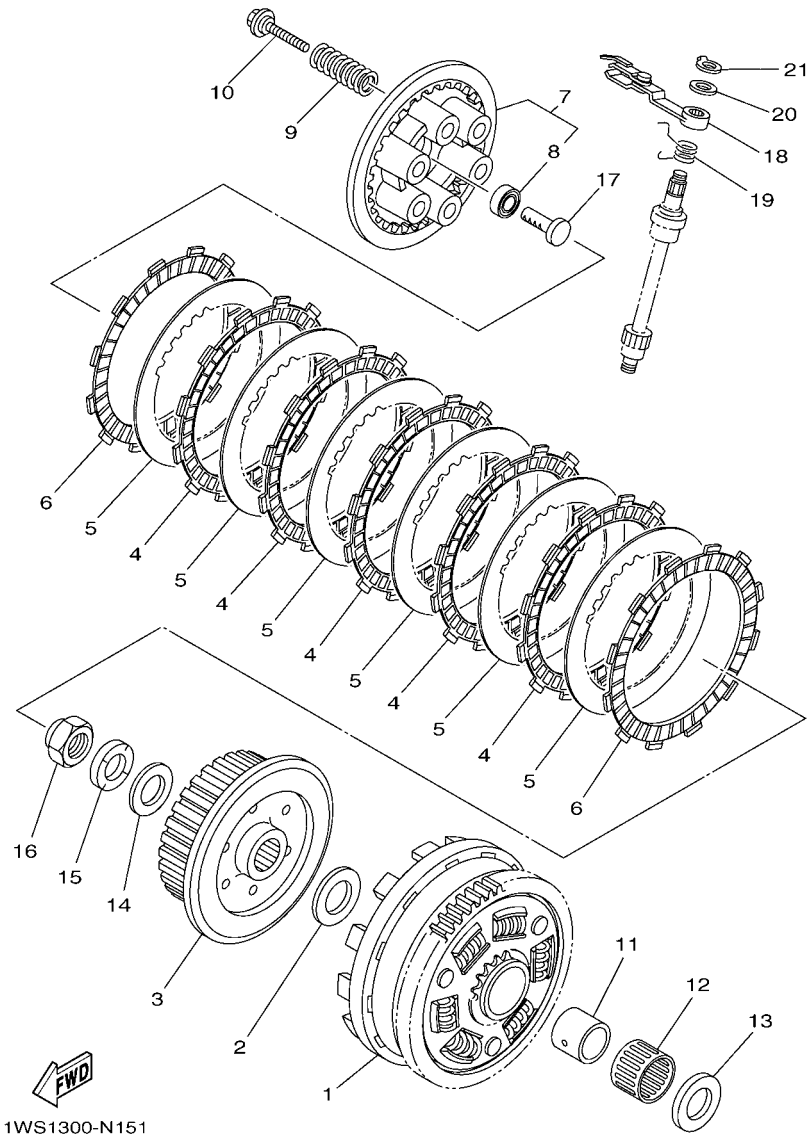


## FIG. 15 CLUTCH


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–16150–00 | PRIMARY DRIVEN GEAR COMP. | 1 | | | | | |
| 2 | 363–16154–00 | PLATE, THRUST 1 | 1 | | | | | |
| 3 | 1WS–16371–00 | BOSS, CLUTCH | 1 | | | | | |
| 4 | 5VY–16321–00 | PLATE, FRICTION | 5 | | | | | |
| 5 | 5VY–16325–00 | PLATE, CLUTCH 2 | 6 | | | | | |
| 6 | 5TG–16321–00 | PLATE, FRICTION | 2 | | | | | |
| 7 | 1WS–16350–00 | PRESSURE PLATE ASSY | 1 | | | | | |
| 8 | 93306–00106 | .BEARING | 1 | | | | | |
| 9 | 90501–230E4 | SPRING, COMPRESSION | 6 | | | | | |
| 10 | 90119–06263 | BOLT, WITH WASHER | 6 | | | | | |
| 11 | 1WS–16181–00 | SPACER 1 | 1 | | | | | |
| 12 | 93310–232R9 | BEARING | 1 | | | | | |
| 13 | 363–16154–00 | PLATE, THRUST 1 | 1 | | | | | |
| 14 | 90201–20030 | WASHER, PLATE | 1 | | | | | |
| 15 | 90208–20001 | WASHER, CONICAL SPRING | 1 | | | | | |
| 16 | 90179–20007 | NUT | 1 | | | | | |
| 17 | 1WS–16356–00 | ROD, PUSH 1 | 1 | | | | | |
| 18 | 1WS–16340–00 | PUSH LEVER ASSY | 1 | | | | | |
| 19 | 90508–18132 | SPRING, TORSION | 1 | | | | | |
| 20 | 90201–10029 | WASHER, PLATE | 1 | | | | | |
| 21 | 99009–10400 | CIRCLIP | 1 | | | | | |

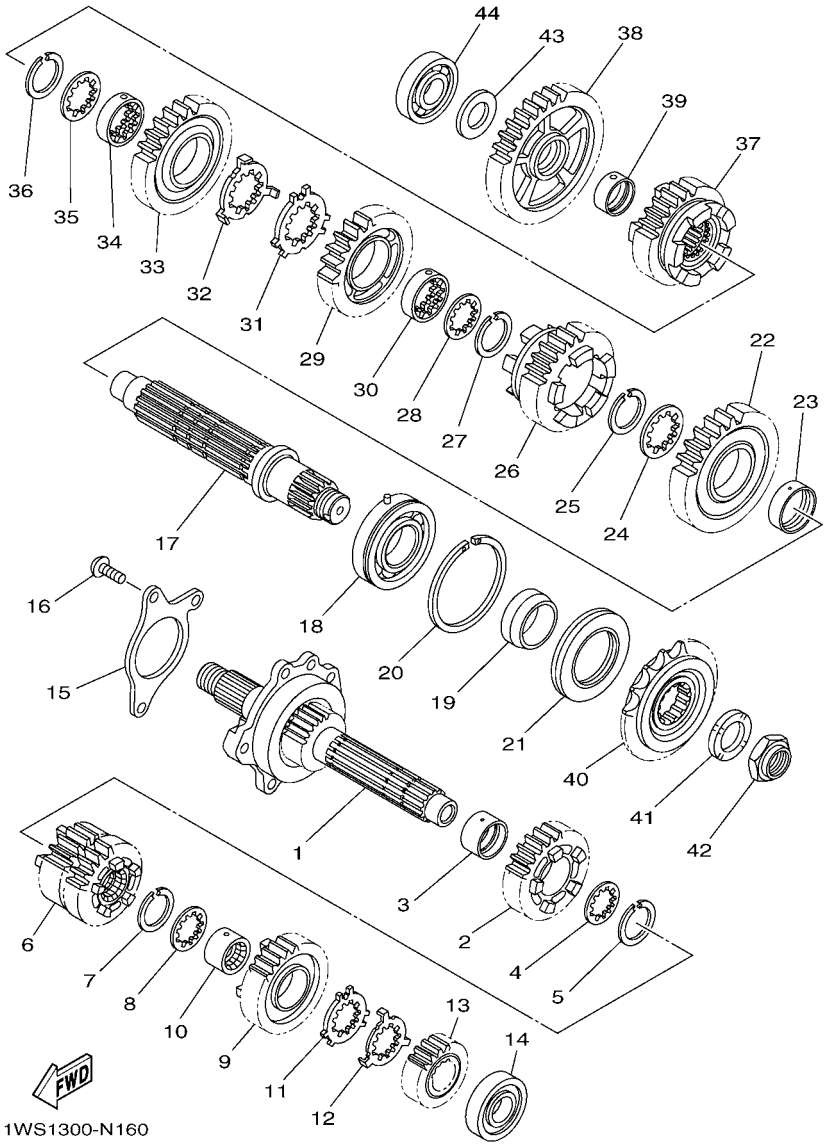



## FIG. 16 TRANSMISSION

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–17401–00 | MAIN AXLE ASSY | 1 | | | | | |
| 2 | 1WS–17151–00 | GEAR, 5TH PINION (22T) | 1 | | | | | |
| 3 | 90387–250R3 | COLLAR | 1 | | | | | |
| 4 | 90209–21332 | WASHER | 1 | | | | | |
| 5 | 93440–25186 | CIRCLIP | 1 | | | | | |
| 6 | 1WS–17131–00 | GEAR, 3RD PINION (20T/19T) | 1 | | | | | |
| 7 | 93440–25186 | CIRCLIP | 1 | | | | | |
| 8 | 90209–21332 | WASHER | 1 | | | | | |
| 9 | 1WS–17161–00 | GEAR, 6TH PINION (28T) | 1 | | | | | |
| 10 | 90387–21003 | COLLAR | 1 | | | | | |
| 11 | 90209–22352 | WASHER | 1 | | | | | |
| 12 | 90209–21351 | WASHER | 1 | | | | | |
| 13 | 1WS–17121–00 | GEAR, 2ND PINION (16T) | 1 | | | | | |
| 14 | 93306–20464 | BEARING | 1 | | | | | |
| 15 | 1WS–17446–00 | PLATE | 1 | | | | | |
| 16 | 90149–06189 | SCREW | 3 | | | | | |
| 17 | 1WS–17421–00 | AXLE, DRIVE | 1 | | | | | |
| 18 | 93306–20663 | BEARING | 1 | | | | | |
| 19 | 90387–30012 | COLLAR | 1 | | | | | |
| 20 | 93440–64199 | CIRCLIP | 1 | | | | | |
| 21 | 93102–40030 | OIL SEAL | 1 | | | | | |
| 22 | 1WS–17221–00 | GEAR, 2ND WHEEL (34T) | 1 | | | | | |
| 23 | 90387–31003 | COLLAR | 1 | | | | | |
| 24 | 90209–28008 | WASHER | 1 | | | | | |
| 25 | 93440–31187 | CIRCLIP | 1 | | | | | |
| 26 | 1WS–17261–00 | GEAR, 6TH WHEEL (27T) | 1 | | | | | |
| 27 | 93440–31187 | CIRCLIP | 1 | | | | | |

## FIG. 16 TRANSMISSION

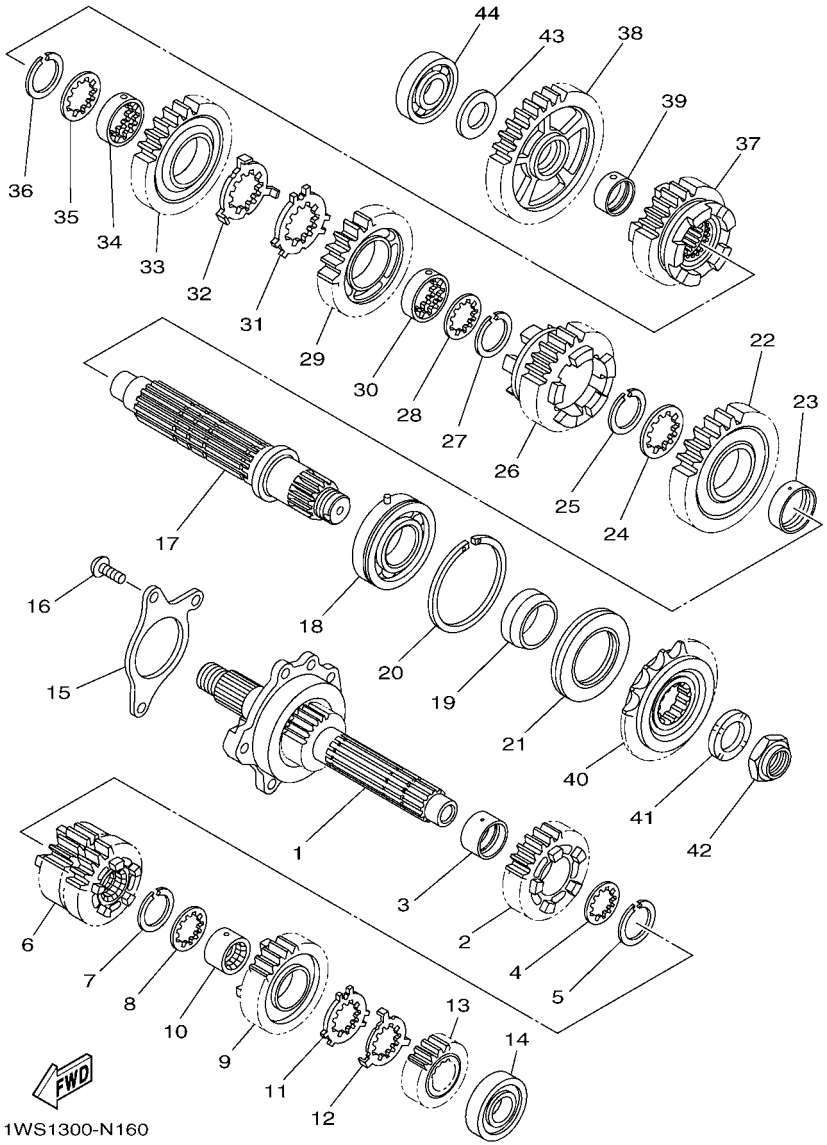



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90209–28008 | WASHER | 1 | | | | | |
| 29 | 1WS–17241–00 | GEAR, 4TH WHEEL (26T) | 1 | | | | | |
| 30 | 90387–28004 | COLLAR | 1 | | | | | |
| 31 | 90214–29002 | WASHER, CLAW | 1 | | | | | |
| 32 | 90214–28002 | WASHER, CLAW | 1 | | | | | |
| 33 | 1WS–17231–00 | GEAR, 3RD WHEEL (31T) | 1 | | | | | |
| 34 | 90387–28004 | COLLAR | 1 | | | | | |
| 35 | 90209–28008 | WASHER | 1 | | | | | |
| 36 | 93440–31187 | CIRCLIP | 1 | | | | | |
| 37 | 1WS–17251–00 | GEAR, 5TH WHEEL (24T) | 1 | | | | | |
| 38 | 1WS–17211–00 | GEAR, 1ST WHEEL (37T) | 1 | | | | | |
| 39 | 90387–25008 | COLLAR | 1 | | | | | |
| 40 | 1WS–17460–00 | SPROCKET, DRIVE (16T) | 1 | | | | | |
| 41 | 90208–22002 | WASHER, CONICAL SPRING | 1 | | | | | |
| 42 | 90179–22018 | NUT | 1 | | | | | |
| 43 | 90201–20008 | WASHER, PLATE | 1 | | | | | |
| 44 | 93306–20464 | BEARING | 1 | | | | | |

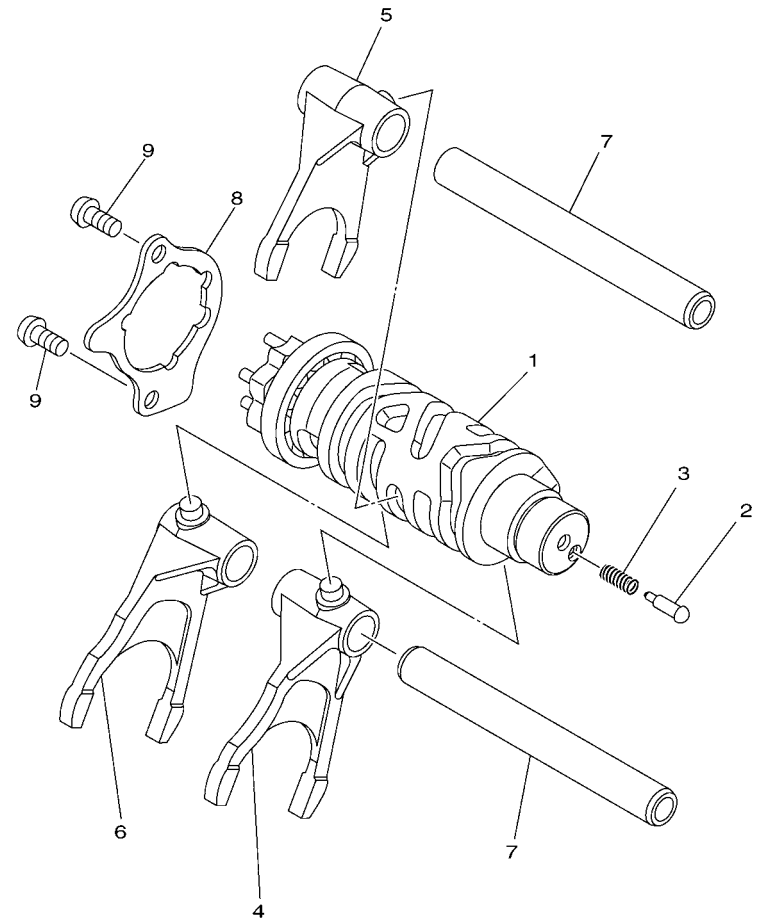


1WS1300-N170

## FIG. 17 SHIFT CAM & FORK

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–18540–00 | SHIFT CAM ASSY | 1 | | | | | |
| 2 | 3D7–18542–00 | POINT, NEUTRAL | 1 | | | | | |
| 3 | 90501–06022 | SPRING, COMPRESSION | 1 | | | | | |
| 4 | 1WS–18511–00 | FORK, SHIFT 1 | 1 | | | | | |
| 5 | 1WS–18512–00 | FORK, SHIFT 2 | 1 | | | | | |
| 6 | 1WS–18513–00 | FORK, SHIFT 3 | 1 | | | | | |
| 7 | 20S–18535–00 | BAR, SHIFT FORK GUIDE 2 | 2 | | | | | |
| 8 | 1WS–18536–00 | STOPPER, SHIFT BAR | 1 | | | | | |
| 9 | 90149–06158 | SCREW | 2 | | | | | |

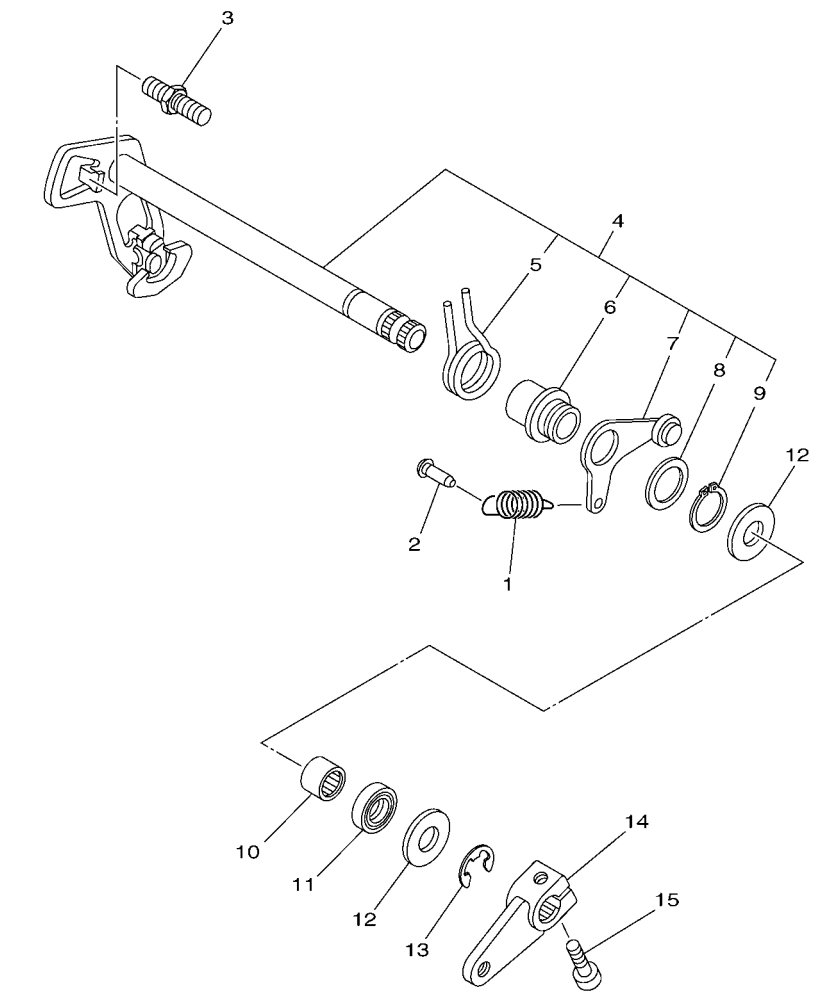



1WS1300-N180


## FIG. 18 SHIFT SHAFT

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 90506–18021 | SPRING, TENSION | 1 | | | | | |
| 2 | 132–16346–00 | HOOK, SPRING | 1 | | | | | |
| 3 | 1D7–18127–00 | STOPPER, SCREW | 1 | | | | | |
| 4 | 1WS–18101–00 | SHIFT SHAFT ASSY | 1 | | | | | |
| 5 | 90508–29040 | .SPRING, TORSION | 1 | | | | | |
| 6 | 2C0–18175–00 | .SPACER | 1 | | | | | |
| 7 | 1WS–18140–00 | .STOPPER LEVER ASSY | 1 | | | | | |
| 8 | 90201–177G4 | .WASHER, PLATE | 1 | | | | | |
| 9 | 99009–17400 | .CIRCLIP | 1 | | | | | |
| 10 | 93317–11295 | BEARING | 1 | | | | | |
| 11 | 93102–12106 | OIL SEAL (SD 12-22-5 HS) | 1 | | | | | |
| 12 | 90201–12575 | WASHER, PLATE | 2 | | | | | |
| 13 | 99002–10600 | CLIP | 1 | | | | | |
| 14 | 1WS–18112–00 | ARM, SHIFT | 1 | | | | | |
| 15 | 91317–06020 | BOLT | 1 | | | | | |

## FIG. 19 FRAME

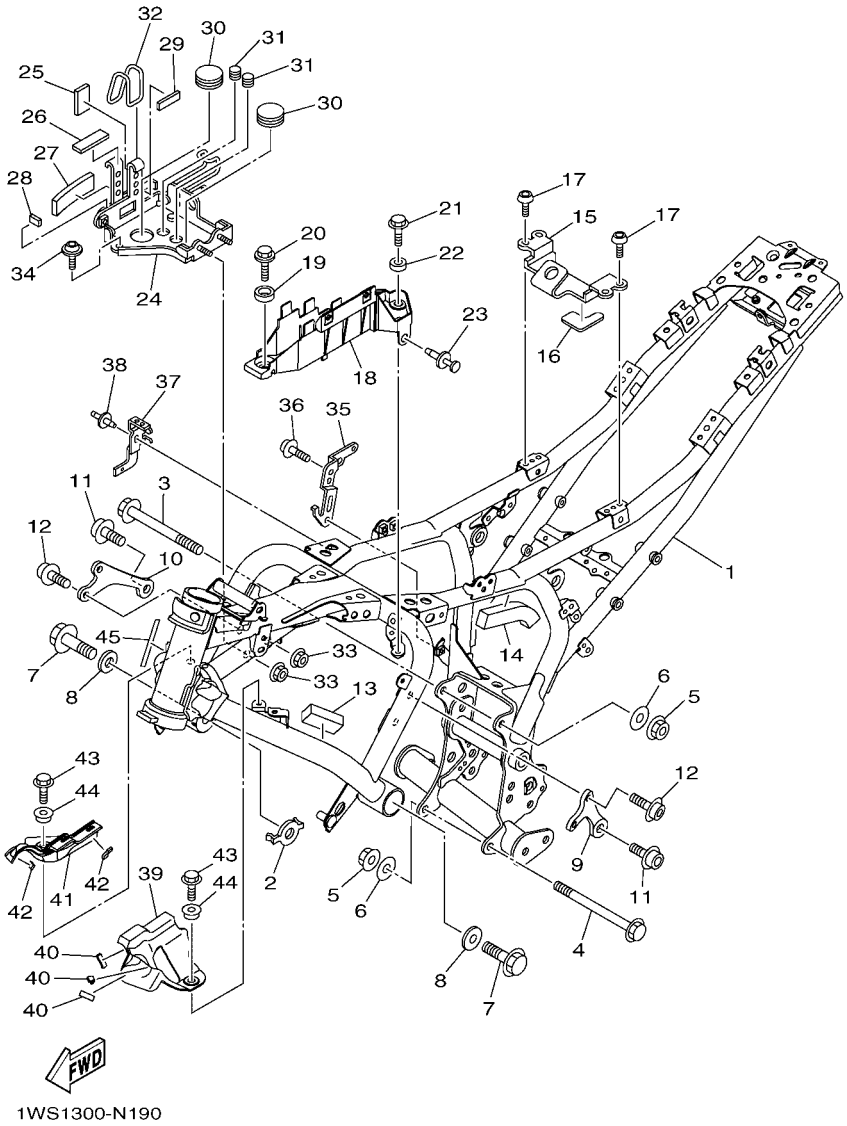



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–21110–30 | FRAME COMP. | 1 | | | | | UR FOR VDVM1 |
| | 1WS–21110–10 | FRAME COMP. | 1 | | | | | UR FOR RYC1 |
| 2 | 1WS–2191B–00 | PLATE 1 | 1 | | | | | |
| 3 | 90105–10219 | BOLT, FLANGE | 1 | | | | | |
| 4 | 90105–10349 | BOLT, FLANGE | 1 | | | | | |
| 5 | 90179–10024 | NUT | 2 | | | | | |
| 6 | 90201–10035 | WASHER, PLATE | 2 | | | | | |
| 7 | 90105–12092 | BOLT, FLANGE | 2 | | | | | |
| 8 | 90201–13020 | WASHER, PLATE | 2 | | | | | |
| 9 | 1WS–21315–00 | STAY, ENGINE 1 | 1 | | | | | |
| 10 | 1WS–21316–00 | STAY, ENGINE 2 | 1 | | | | | |
| 11 | 90110–10044 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 12 | 90110–08111 | BOLT, HEXAGON SOCKET HEAD | 4 | | | | | |
| 13 | 90520–20004 | DAMPER, PLATE | 1 | | | | | |
| 14 | 90520–20003 | DAMPER, PLATE | 1 | | | | | |
| 15 | 1WS–21946–01 | BRACKET, SEAT FITTING | 1 | | | | | |
| 16 | 1WS–2112B–01 | SEAT 1 | 1 | | | | | |
| 17 | 92012–06010 | BOLT, BUTTON HEAD | 4 | | | | | |
| 18 | 1WS–2117N–00 | COVER 3 | 1 | | | | | |
| 19 | 90387–1001B | COLLAR | 1 | | | | | |
| 20 | 90119–06209 | BOLT, WITH WASHER | 1 | | | | | |
| 21 | 95822–06012 | BOLT, FLANGE | 1 | | | | | |
| 22 | 90387–06372 | COLLAR | 1 | | | | | |
| 23 | 90269–06002 | RIVET | 1 | | | | | |
| 24 | 1WS–21158–00 | BRACKET | 1 | | | | | |
| 25 | 90520–01004 | DAMPER, PLATE | 1 | | | | | |
| 26 | 3UF–24737–00 | DAMPER, SEAT | 1 | | | | | |

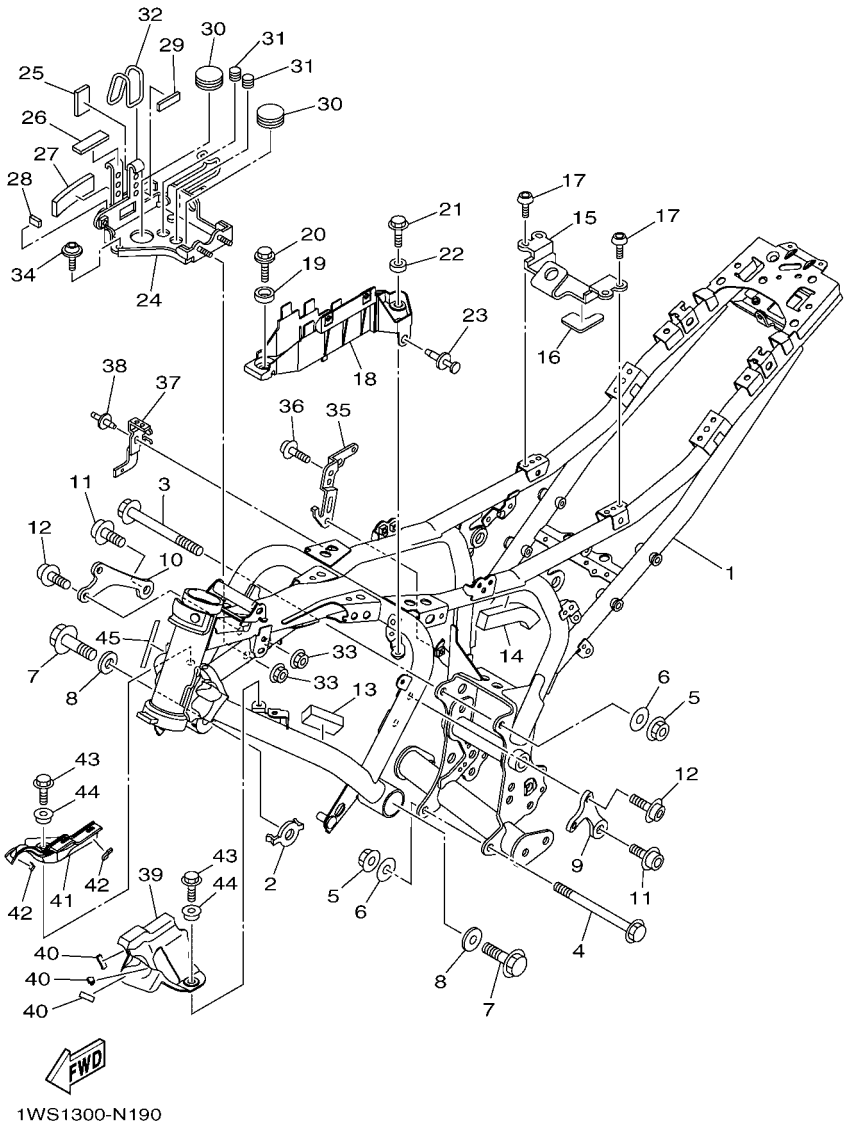



## FIG. 19 FRAME

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 27 | 3KJ–15337–00 | DAMPER 4 | 1 | | | | | |
| 28 | 1HX–27415–00 | PLATE, DAMPER | 1 | | | | | |
| 29 | 5DM–28371–00 | DAMPER | 1 | | | | | |
| 30 | 90480–30167 | GROMMET | 2 | | | | | |
| 31 | 90338–15004 | PLUG | 2 | | | | | |
| 32 | 4XV–21376–00 | BAND, TOOL | 1 | | | | | |
| 33 | 95702–06500 | NUT, FLANGE | 2 | | | | | |
| 34 | 90111–06122 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 35 | 1WS–2161J–00 | BRACKET 8 | 1 | | | | | |
| 36 | 92017–06010 | BOLT, BUTTON HEAD | 1 | | | | | |
| 37 | 1WS–2175U–00 | BRACKET 2 | 1 | | | | | |
| 38 | 90269–07077 | RIVET | 1 | | | | | |
| 39 | 1WS–2117R–00 | COVER 4 | 1 | | | | | |
| 40 | 1HX–27415–00 | PLATE, DAMPER | 3 | | | | | |
| 41 | 1WS–2117T–00 | COVER 5 | 1 | | | | | |
| 42 | 1HX–27415–00 | PLATE, DAMPER | 2 | | | | | |
| 43 | 95807–06012 | BOLT, FLANGE | 2 | | | | | |
| 44 | 90387–062M9 | COLLAR | 2 | | | | | |
| 45 | 3HA–24141–00 | PROTECTOR, FUEL TANK | 1 | | | | | |

## FIG. 20 FENDER

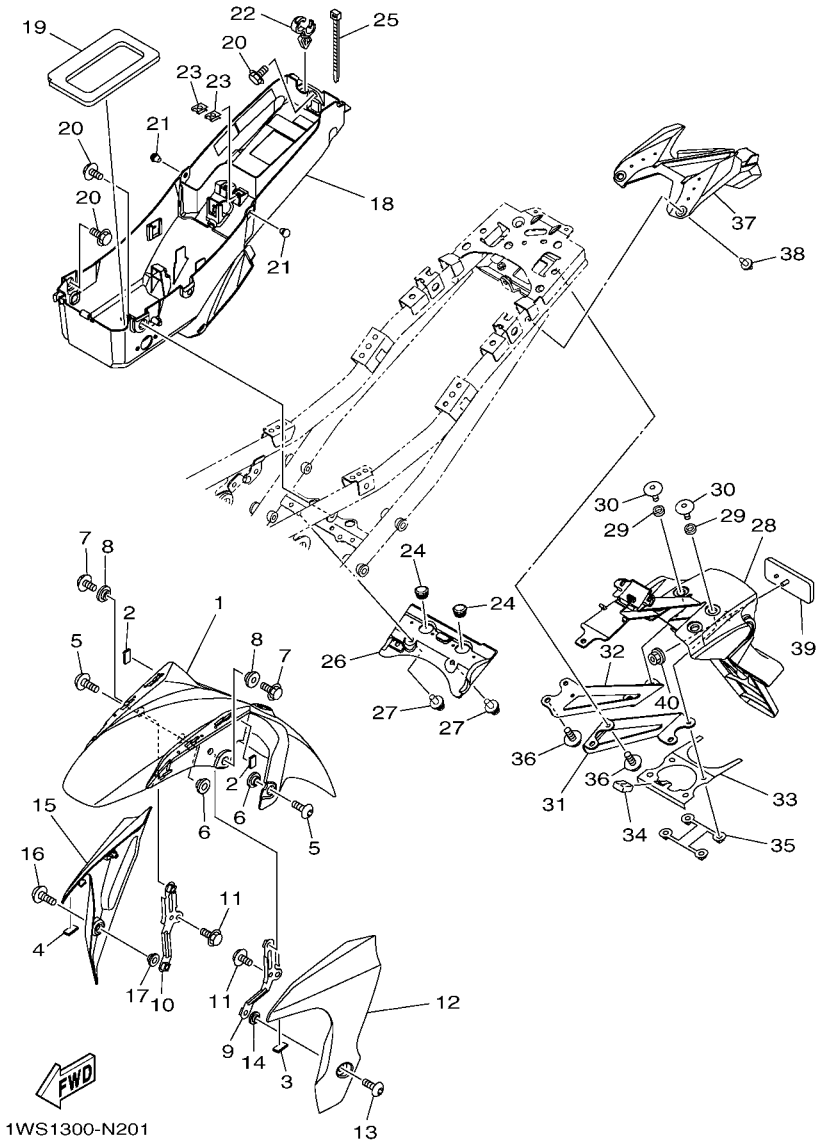



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–21511–00 | FENDER, FRONT | 1 | | | | | |
| 2 | 90520–01002 | DAMPER, PLATE | 2 | | | | | |
| 3 | 90520–01002 | DAMPER, PLATE | 1 | | | | | |
| 4 | 90520–01002 | DAMPER, PLATE | 1 | | | | | |
| 5 | 90111–06151 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 6 | 90387–08079 | COLLAR | 2 | | | | | |
| 7 | 90110–06122 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 8 | 90387–06066 | COLLAR | 2 | | | | | |
| 9 | 1WS–21512–10 | BRACKET, FENDER | 1 | | | | | |
| 10 | 1WS–21612–10 | BRACKET, REAR FENDER | 1 | | | | | |
| 11 | 95022–06010 | BOLT, FLANGE | 4 | | | | | |
| 12 | 1WS–21513–00–P3 | STAY, FENDER 1 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–21513–00–P2 | STAY, FENDER 1 | 1 | | | | | UR MBL2 FOR RYC1 |
| 13 | 90149–06105 | SCREW | 1 | | | | | |
| 14 | 90387–06107 | COLLAR | 1 | | | | | |
| 15 | 1WS–21514–00–P3 | STAY, FENDER 2 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–21514–00–P2 | STAY, FENDER 2 | 1 | | | | | UR MBL2 FOR RYC1 |
| 16 | 90149–06105 | SCREW | 1 | | | | | |
| 17 | 90387–06107 | COLLAR | 1 | | | | | |
| 18 | 1WS–8212B–00 | BOX, BATTERY 1 | 1 | | | | | |
| 19 | 1WS–21639–00 | DAMPER 2 | 1 | | | | | |
| 20 | 90109–06202 | BOLT | 3 | | | | | |
| 21 | 90338–06018 | PLUG | 2 | | | | | |
| 22 | 90464–18002 | CLAMP | 1 | | | | | |
| 23 | 90183–04039 | NUT, SPRING | 2 | | | | | |
| 24 | 90480–14100 | GROMMET | 2 | | | | | |
| 25 | 90465–13275 | CLAMP | 1 | | | | | |

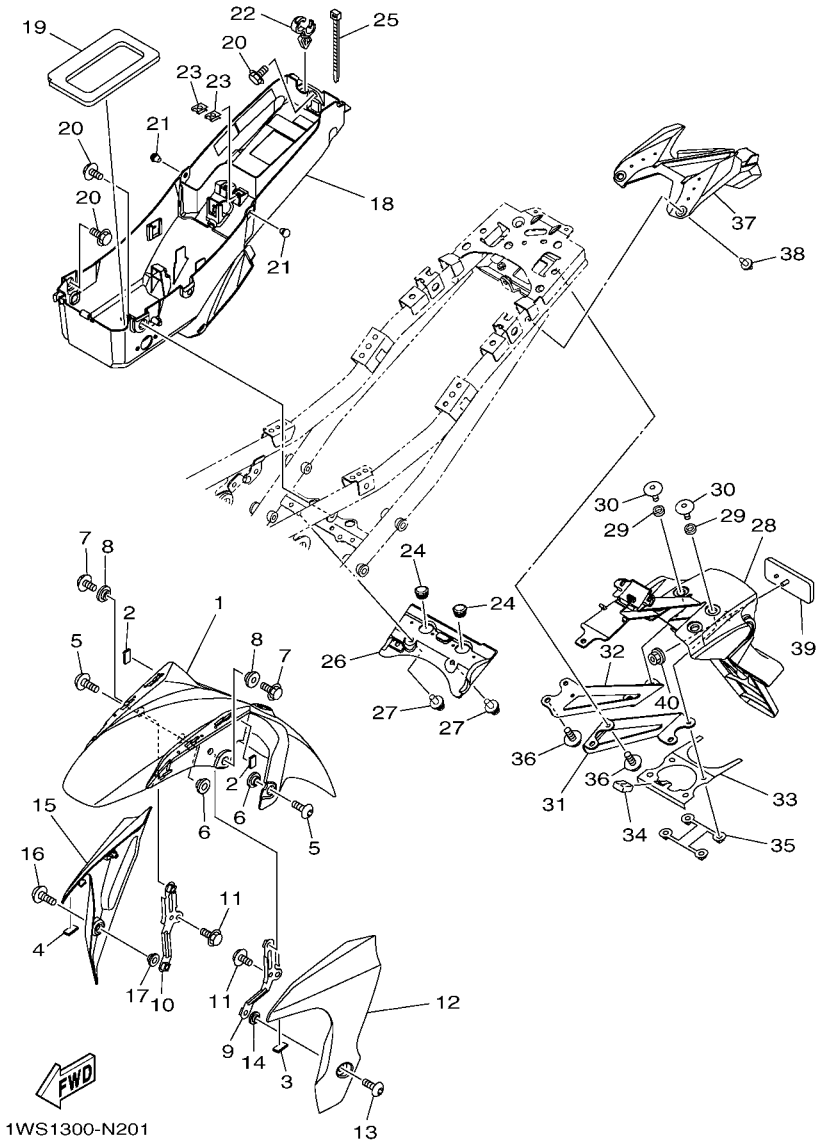


## FIG. 20 FENDER

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 26 | 1WS–21642–00 | GUARD, FLAP | 1 | | | | | |
| 27 | 90269–06002 | RIVET | 2 | | | | | |
| 28 | 1WS–21629–00 | GUARD, MUD | 1 | | | | | |
| 29 | 90387–06372 | COLLAR | 4 | | | | | |
| 30 | 90111–06089 | BOLT,HEX. SOCKET BUTTON | 4 | | | | | |
| 31 | 1WS–2164F–00 | STAY 1 | 1 | | | | | |
| 32 | 1WS–2164G–00 | STAY 2 | 1 | | | | | |
| 33 | 1WS–21682–00 | STAY, PLATE | 1 | | | | | |
| 34 | 1WS–21746–00 | DAMPER | 1 | | | | | |
| 35 | 1WS–2161G–00 | BRACKET 6 | 1 | | | | | |
| 36 | 90105–06206 | BOLT, FLANGE | 4 | | | | | |
| 37 | 1WS–2163A–00 | COVER, REAR FENDER 1 | 1 | | | | | |
| 38 | 90269–07008 | RIVET | 2 | | | | | |
| 39 | 3Y6–85130–02 | REAR REFLECTOR ASSY | 1 | | | | | |
| 40 | 95602–05200 | NUT, SELF-LOCKING | 1 | | | | | |


## FIG. 21 SIDE COVER

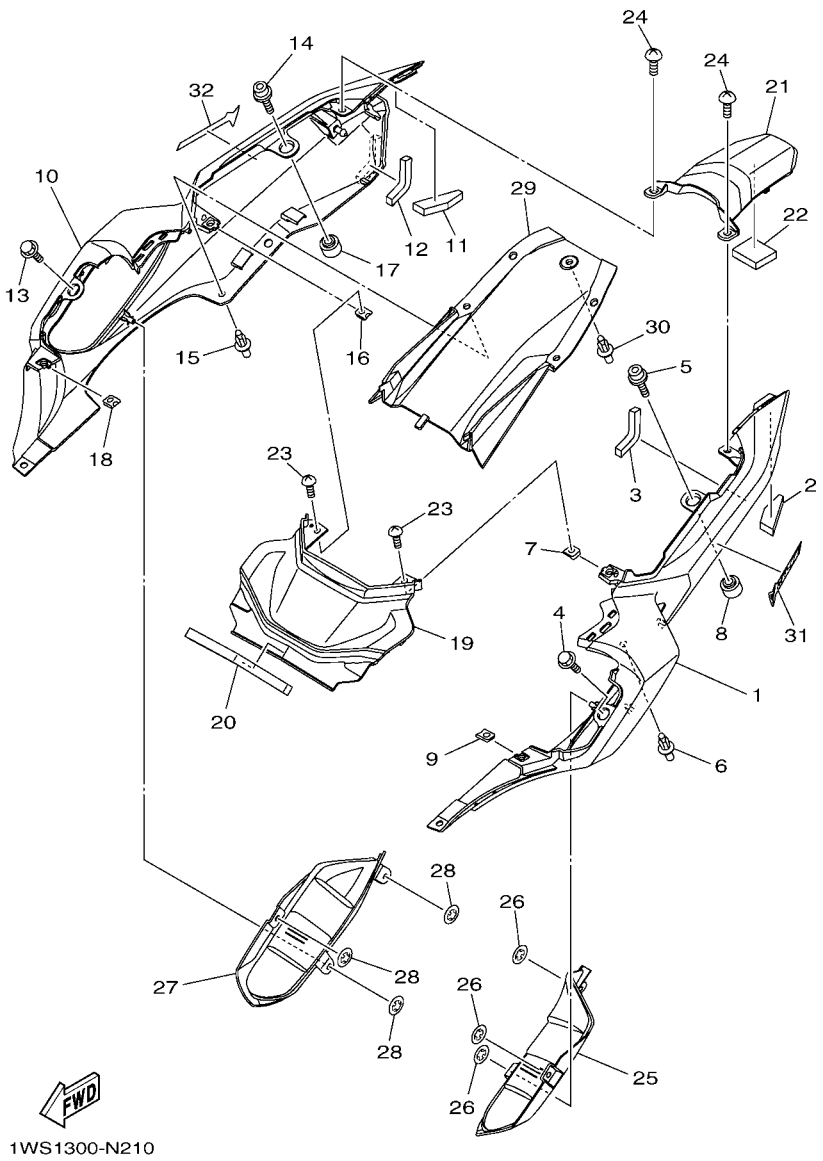

1WS1300-N210


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–21711–00–P0 | COVER, SIDE 1 | 1 | | | | | MBL2 |
| 2 | 1WS–2834E–00 | DAMPER 3 | 1 | | | | | |
| 3 | 90520–06005 | DAMPER, PLATE | 1 | | | | | |
| 4 | 90109–06245 | BOLT | 1 | | | | | |
| 5 | 90110–08062 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 6 | 90269–06008 | RIVET | 1 | | | | | |
| 7 | 90183–05042 | NUT, SPRING | 1 | | | | | |
| 8 | 90387–08101 | COLLAR | 1 | | | | | |
| 9 | 90183–05076 | NUT, SPRING | 1 | | | | | |
| 10 | 1WS–21721–00–P0 | COVER, SIDE 2 | 1 | | | | | MBL2 |
| 11 | 1WS–2834F–00 | DAMPER | 1 | | | | | |
| 12 | 90520–06005 | DAMPER, PLATE | 1 | | | | | |
| 13 | 90109–06245 | BOLT | 1 | | | | | |
| 14 | 90110–08062 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 15 | 90269–06008 | RIVET | 1 | | | | | |
| 16 | 90183–05042 | NUT, SPRING | 1 | | | | | |
| 17 | 90387–08101 | COLLAR | 1 | | | | | |
| 18 | 90183–05076 | NUT, SPRING | 1 | | | | | |
| 19 | 1WS–2171E–00–P0 | COVER, SIDE 5 | 1 | | | | | MBL2 |
| 20 | 90520–10024 | DAMPER, PLATE | 1 | | | | | |
| 21 | 1WS–2171X–00–P0 | COVER, SIDE 6 | 1 | | | | | MBL2 |
| 22 | 90520–06004 | DAMPER, PLATE | 1 | | | | | |
| 23 | 97702–50012 | SCREW, TAPPING | 2 | | | | | |
| 24 | 97707–50016 | SCREW, TRUSS HEAD TAPPING | 2 | | | | | |
| 25 | 1WS–2171J–00 | LINING, SIDE COVER 1 | 1 | | | | | |
| 26 | 90183–05M02 | NUT, SPRING | 3 | | | | | |
| 27 | 1WS–2171K–00 | LINING, SIDE COVER 2 | 1 | | | | | |

## FIG. 21 SIDE COVER

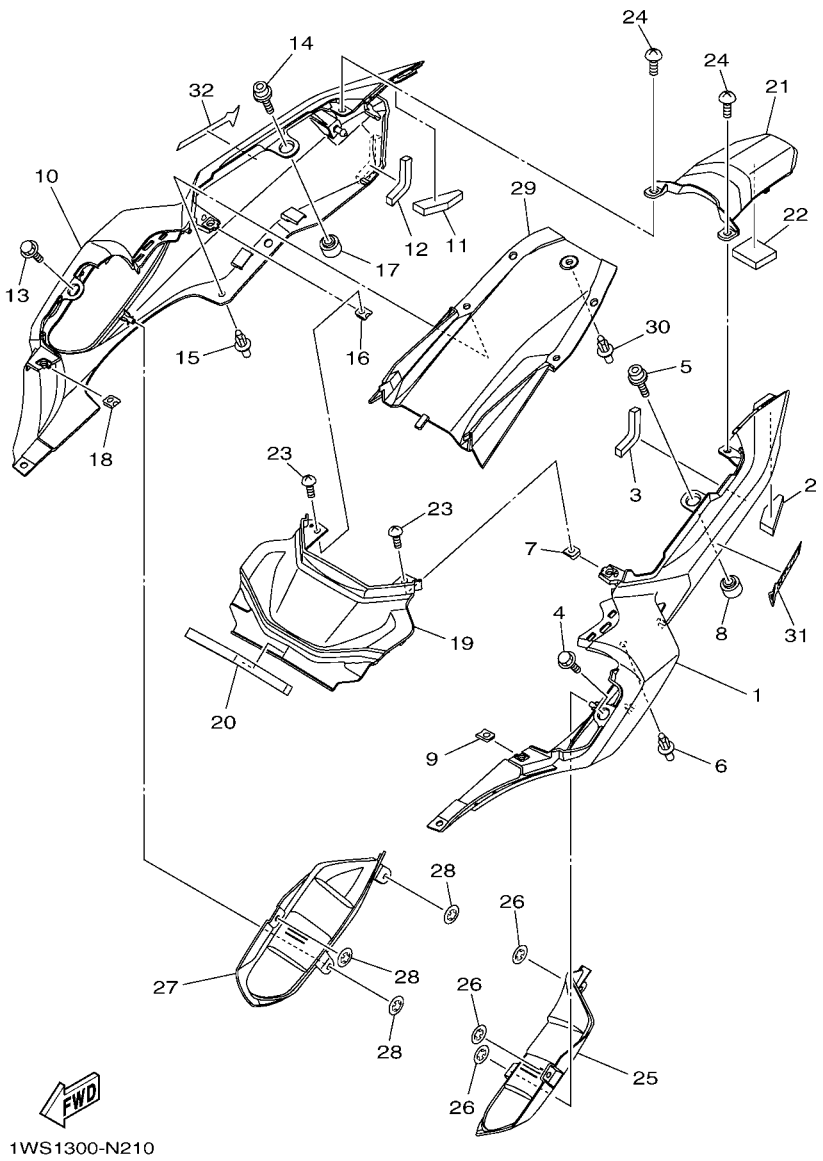



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90183–05M02 | NUT, SPRING | 3 | | | | | |
| 29 | 1WS–21651–00 | COVER, REAR FENDER | 1 | | | | | |
| 30 | 90269–06008 | RIVET | 1 | | | | | |
| 31 | 1WS–21781–30 | EMBLEM 1 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–21781–50 | EMBLEM 1 | 1 | | | | | UR FOR RYC1 |
| 32 | 1WS–21782–30 | EMBLEM 2 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–21782–50 | EMBLEM 2 | 1 | | | | | UR FOR RYC1 |

## FIG. 22 REAR ARM

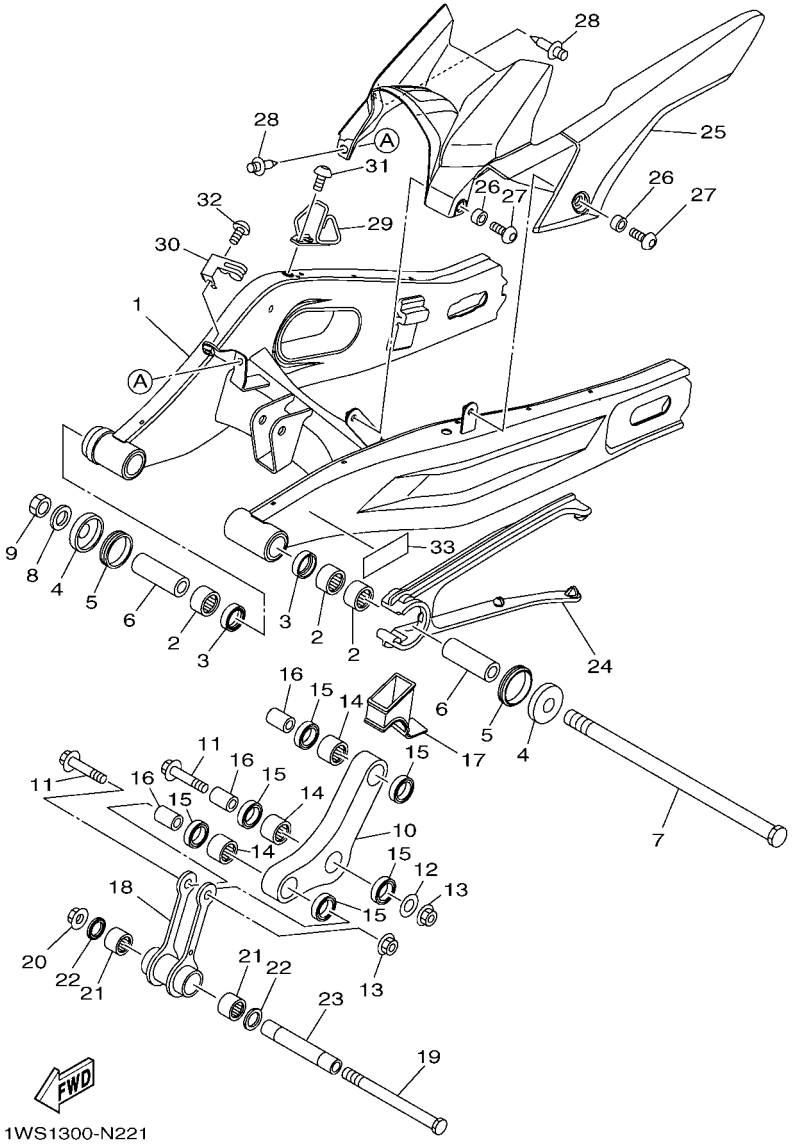



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–22110–00 | REAR ARM COMP. | 1 | | | | | |
| 2 | 93317–22262 | BEARING | 3 | | | | | |
| 3 | 93106–22019 | OIL SEAL (DC 22-28-8) | 2 | | | | | |
| 4 | 30X–2219X–00 | COVER | 2 | | | | | |
| 5 | 93108–35004 | OIL SEAL (35-41-8) | 2 | | | | | |
| 6 | 90380–16158 | BUSH, SOLID | 2 | | | | | |
| 7 | 1UY–22141–10 | SHAFT, PIVOT | 1 | | | | | |
| 8 | 90201–164H4 | WASHER, PLATE | 1 | | | | | |
| 9 | 90185–16002 | NUT, SELF-LOCKING | 1 | | | | | |
| 10 | 1WS–2217A–00 | ARM, RELAY | 1 | | | | | |
| 11 | 90105–102A6 | BOLT, FLANGE | 2 | | | | | |
| 12 | 90201–10045 | WASHER, PLATE | 1 | | | | | |
| 13 | 95602–10200 | NUT, U FLANGE | 2 | | | | | |
| 14 | 93315–31758 | BEARING | 3 | | | | | |
| 15 | 93109–17071 | OIL SEAL | 6 | | | | | |
| 16 | 90387–1012A | COLLAR | 3 | | | | | |
| 17 | 1WS–22189–00 | BOOT, RUBBER | 1 | | | | | |
| 18 | 1WS–2217F–00 | ROD, CONNECTING 1 | 1 | | | | | |
| 19 | 90101–12049 | BOLT | 1 | | | | | |
| 20 | 95602–12200 | NUT, SELF-LOCKING | 1 | | | | | |
| 21 | 93317–31771 | BEARING | 2 | | | | | |
| 22 | 93109–17071 | OIL SEAL | 2 | | | | | |
| 23 | 1WS–22184–00 | BUSH | 1 | | | | | |
| 24 | 1WS–22151–00 | SEAL, GUARD | 1 | | | | | |
| 25 | 1WS–21650–00 | REAR FENDER COMP. | 1 | | | | | |
| 26 | 90387–06372 | COLLAR | 2 | | | | | |
| 27 | 90111–06119 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |

## FIG. 22 REAR ARM

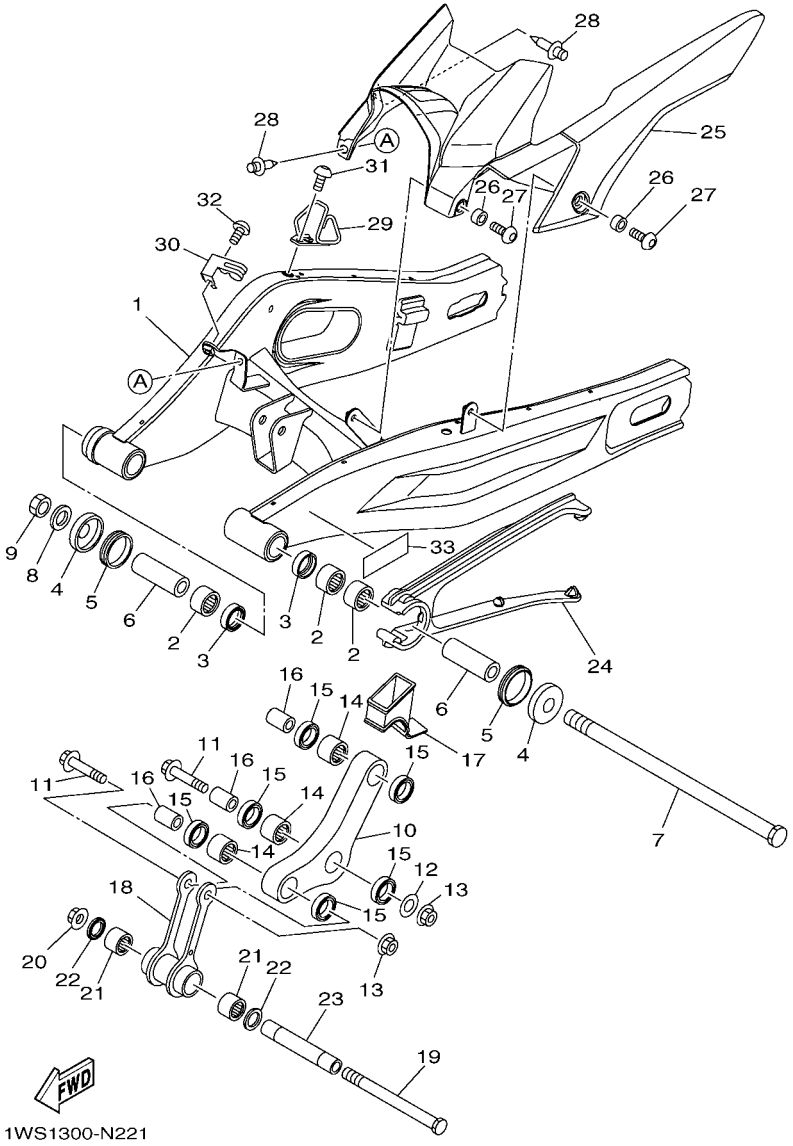


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90269–07007 | RIVET | 2 | | | | | |
| 29 | 1WS–25887–00 | HOLDER, BRAKE HOSE | 1 | | | | | |
| 30 | 1WS–2588F–00 | HOLDER, BRAKE HOSE 5 | 1 | | | | | |
| 31 | 92014–06016 | BOLT, BUTTON HEAD | 1 | | | | | |
| 32 | 92017–06010 | BOLT, BUTTON HEAD | 1 | | | | | |
| 33 | 1TP–21668–00 | LABEL, TIRE | 1 | | | | | |

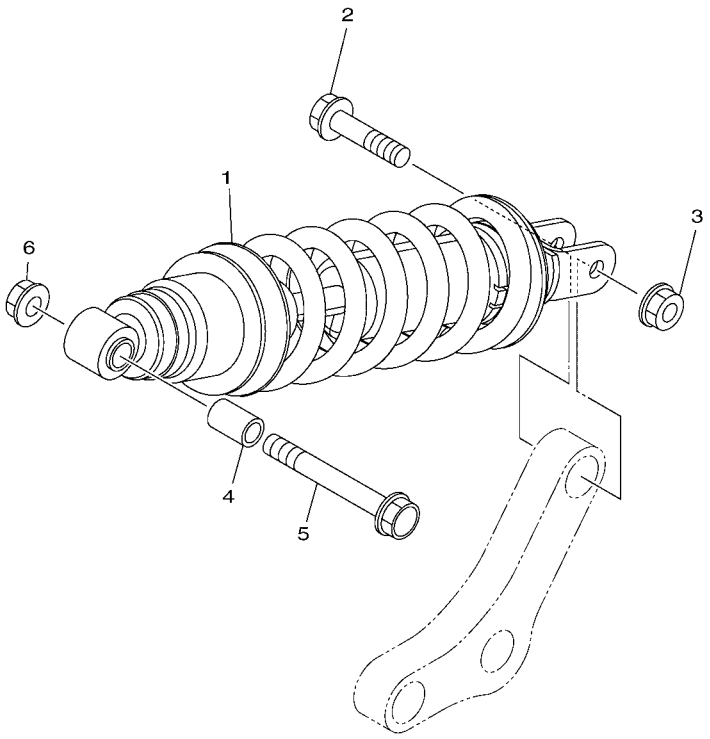



1WS1300-N230

## FIG. 23 REAR SUSPENSION

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–22210–00 | SHOCK ABSORBER ASSY, REAR | 1 | | | | | UR FOR VDVM1 |
| | 1WS–22210–90 | SHOCK ABSORBER ASSY, REAR | 1 | | | | | UR FOR RYC1 |
| 2 | 90105–10283 | BOLT, FLANGE | 1 | | | | | |
| 3 | 95602–10200 | NUT, U FLANGE | 1 | | | | | |
| 4 | 90387–1012A | COLLAR | 1 | | | | | |
| 5 | 90105–10212 | BOLT, FLANGE | 1 | | | | | |
| 6 | 95602–10200 | NUT, U FLANGE | 1 | | | | | |


## FIG. 24 STEERING

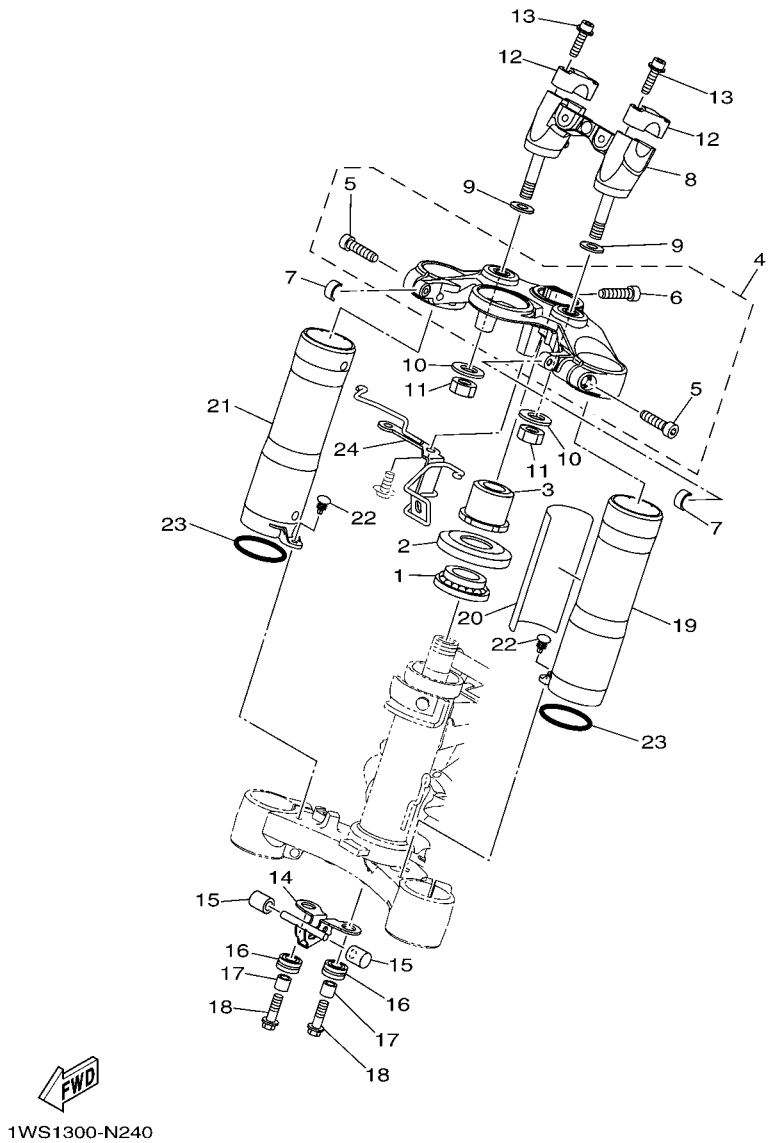


1WS1300-N240


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 93399–99931 | BEARING | 1 | | | | | |
| 2 | 1W1–23416–00 | COVER, BALL RACE 2 | 1 | | | | | |
| 3 | 1WS–23357–00 | NUT | 1 | | | | | |
| 4 | 1WS–23430–00 | HANDLE CROWN COMP. | 1 | | | | | |
| 5 | 91314–08030 | .BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 6 | 91314–10035 | .BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 7 | 1WS–84136–00 | DAMPER, HEADLIGHT STAY | 2 | | | | | |
| 8 | 1WS–23442–00–P0 | HOLDER, HANDLE LOWER | 1 | | | | | MBL2 |
| 9 | 92902–10200 | WASHER | 2 | | | | | |
| 10 | 90201–10043 | WASHER, PLATE | 2 | | | | | |
| 11 | 95602–10100 | NUT, U | 2 | | | | | |
| 12 | 1E6–23441–10–P0 | HOLDER, HANDLE UPPER | 2 | | | | | MBL2 |
| 13 | 95022–08035 | BOLT, FLANGE | 4 | | | | | |
| 14 | 1WS–2334G–00 | BRACKET 1 | 1 | | | | | |
| 15 | 1WS–84527–00 | DAMPER | 2 | | | | | |
| 16 | 3C3–83513–00 | DAMPER | 2 | | | | | |
| 17 | 90387–06026 | COLLAR | 2 | | | | | |
| 18 | 95827–06025 | BOLT, FLANGE | 2 | | | | | |
| 19 | 1WS–23121–00 | COVER, UPPER 1 | 1 | | | | | |
| 20 | 1WS–2318U–00 | PLATE, SEAT | 1 | | | | | |
| 21 | 1WS–23131–00 | COVER, UPPER 2 | 1 | | | | | |
| 22 | 90269–05055 | RIVET | 2 | | | | | |
| 23 | 93210–40M10 | O-RING | 2 | | | | | |
| 24 | 1WS–2334H–00 | BRACKET 2 | 1 | | | | | |

## FIG. 25 FRONT FORK

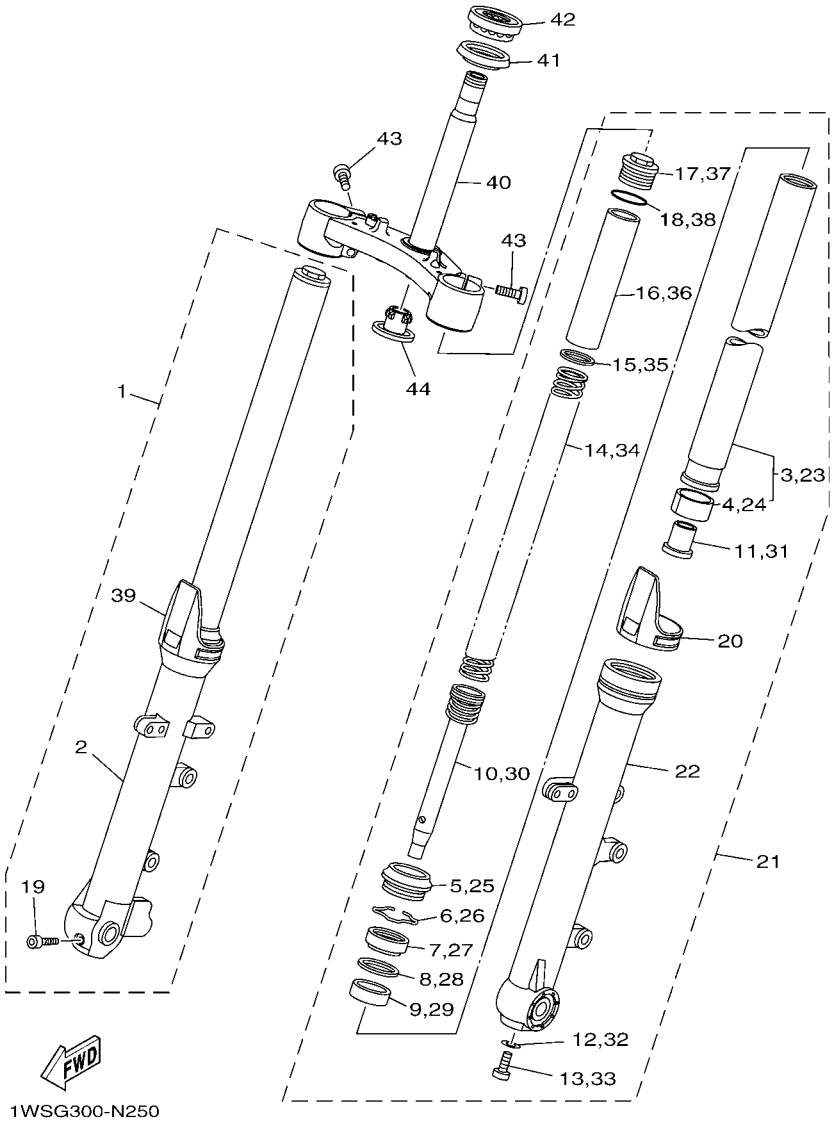



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–23103–09 | FRONT FORK ASSY (R.H) | 1 | | | | | |
| 2 | 1WS–23136–00 | .TUBE, OUTER | 1 | | | | | |
| 3 | 1WS–23110–00 | .INNER TUBE COMP.1 | 1 | | | | | |
| 4 | 5BN–23171–00 | ..PISTON, FRONT FORK | 1 | | | | | |
| 5 | 4EB–23144–00 | .SEAL, DUST | 1 | | | | | |
| 6 | 26H–23156–00 | .RING, SNAP | 1 | | | | | |
| 7 | 4EB–23145–01 | .OIL SEAL | 1 | | | | | |
| 8 | 36Y–23146–10 | .WASHER, OIL SEAL | 1 | | | | | |
| 9 | 4FM–23125–40 | .METAL, SLIDE 1 | 1 | | | | | |
| 10 | 1WS–23170–00 | .CYLINDER COMP., FRONT FORK | 1 | | | | | |
| 11 | 4YR–23173–00 | .SPINDLE, TAPER | 1 | | | | | (KYB) |
| 12 | 509–23158–L0 | .GASKET | 1 | | | | | (KYB) |
| 13 | 278–23181–50 | .BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 14 | 1WS–23141–00 | .SPRING, FRONT FORK | 1 | | | | | |
| 15 | 3EN–23149–50 | .WASHER, SPRING UPPER | 1 | | | | | |
| 16 | 3FW–23118–00 | .SPACER | 1 | | | | | |
| 17 | 1D0–23111–00 | .BOLT, CAP | 1 | | | | | |
| 18 | 43F–23188–10 | .O-RING | 1 | | | | | |
| 19 | 91314–08040 | .BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 20 | 1WS–2331G–00 | .COVER | 1 | | | | | |
| 21 | 1WS–23102–09 | FRONT FORK ASSY (L.H) | 1 | | | | | |
| 22 | 1WS–23126–00 | .TUBE, OUTER (L.H) | 1 | | | | | |
| 23 | 1WS–23110–00 | .INNER TUBE COMP.1 | 1 | | | | | |
| 24 | 5BN–23171–00 | ..PISTON, FRONT FORK | 1 | | | | | |
| 25 | 4EB–23144–00 | .SEAL, DUST | 1 | | | | | |
| 26 | 26H–23156–00 | .RING, SNAP | 1 | | | | | |
| 27 | 4EB–23145–01 | .OIL SEAL | 1 | | | | | |

## FIG. 25 FRONT FORK

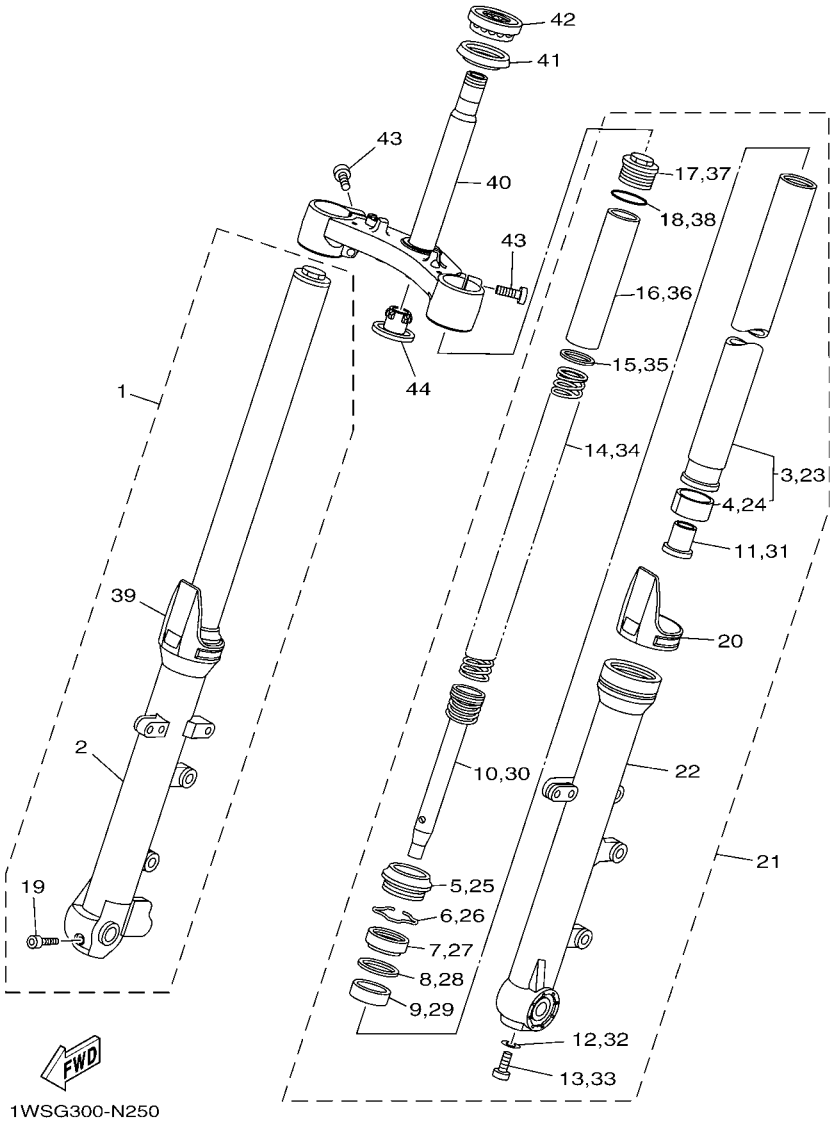



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 36Y–23146–10 | .WASHER, OIL SEAL | 1 | | | | | |
| 29 | 4FM–23125–40 | .METAL, SLIDE 1 | 1 | | | | | |
| 30 | 1WS–23170–00 | .CYLINDER COMP., FRONT FORK | 1 | | | | | |
| 31 | 4YR–23173–00 | .SPINDLE, TAPER | 1 | | | | | (KYB) |
| 32 | 509–23158–L0 | .GASKET | 1 | | | | | (KYB) |
| 33 | 278–23181–50 | .BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 34 | 1WS–23141–00 | .SPRING, FRONT FORK | 1 | | | | | |
| 35 | 3EN–23149–50 | .WASHER, SPRING UPPER | 1 | | | | | |
| 36 | 3FW–23118–00 | .SPACER | 1 | | | | | |
| 37 | 1D0–23111–00 | .BOLT, CAP | 1 | | | | | |
| 38 | 43F–23188–10 | .O-RING | 1 | | | | | |
| 39 | 1WS–2331G–00 | .COVER | 1 | | | | | |
| 40 | 1WS–23340–00 | UNDER BRACKET COMP. | 1 | | | | | |
| 41 | 3FV–23462–00 | SEAL, STEERING | 1 | | | | | |
| 42 | 93399–99932 | BEARING | 1 | | | | | |
| 43 | 91314–08030 | BOLT, HEXAGON SOCKET HEAD | 4 | | | | | |
| 44 | 4KM–23123–01 | COVER, UNDER 1 | 1 | | | | | |

## FIG. 26 FUEL TANK

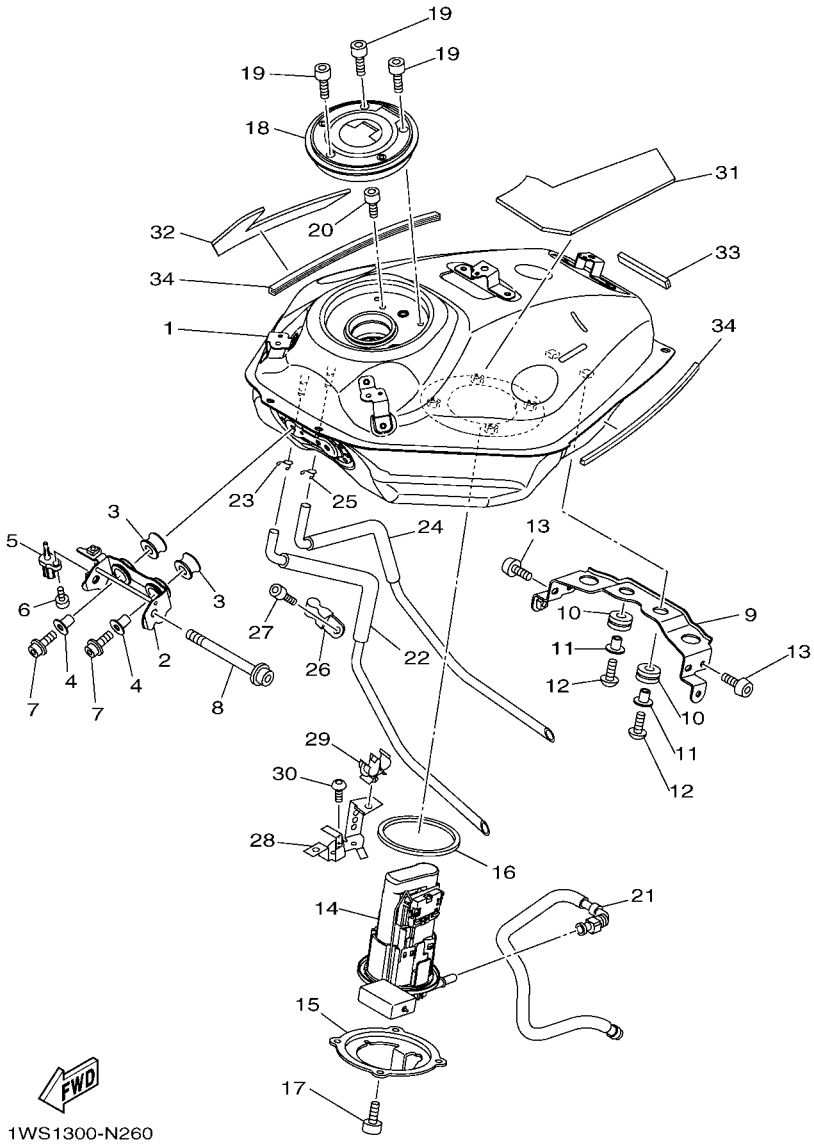



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–24110–00 | FUEL TANK COMP. | 1 | | | | | |
| 2 | 1WS–2412Y–00 | BRACKET, TANK FITTING | 1 | | | | | |
| 3 | 3D7–24339–00 | GROMMET | 2 | | | | | |
| 4 | 90387–06136 | COLLAR | 2 | | | | | |
| 5 | 5YU–85886–00 | SENSOR, AIR TEMPERATURE | 1 | | | | | |
| 6 | 98502–05012 | SCREW, PAN HEAD | 1 | | | | | |
| 7 | 90110–06172 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 8 | 95817–08100 | BOLT, FLANGE | 1 | | | | | |
| 9 | 1WS–2413Y–00 | BRACKET, TANK FITTING | 1 | | | | | |
| 10 | 90480–16003 | GROMMET | 2 | | | | | |
| 11 | 90387–06287 | COLLAR | 2 | | | | | |
| 12 | 90111–06084 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 13 | 92012–06012 | BOLT, BUTTON HEAD | 4 | | | | | |
| 14 | 1WS–13907–00 | FUEL PUMP COMP. | 1 | | | | | |
| 15 | 1WS–24491–00 | BRACKET, FUEL PUMP | 1 | | | | | |
| 16 | 1RC–24486–00 | O-RING | 1 | | | | | |
| 17 | 91312–05010 | BOLT | 4 | | | | | |
| 18 | 1WS–24602–00 | CAP ASSY | 1 | | | | | |
| 19 | 90110–05112 | BOLT, HEXAGON SOCKET HEAD | 3 | | | | | |
| 20 | 91317–05010 | BOLT | 1 | | | | | |
| 21 | 1WS–13971–00 | PIPE, FUEL 1 | 1 | | | | | |
| 22 | 1WS–24318–00 | PIPE, OVERFLOW | 1 | | | | | |
| 23 | 90467–090A2 | CLIP | 1 | | | | | |
| 24 | 1WS–24312–00 | PIPE 2 | 1 | | | | | |
| 25 | 90467–090A2 | CLIP | 1 | | | | | |
| 26 | 1WS–24135–00 | CLAMP 1 | 1 | | | | | |
| 27 | 92017–06010 | BOLT, BUTTON HEAD | 1 | | | | | |

## FIG. 26 FUEL TANK

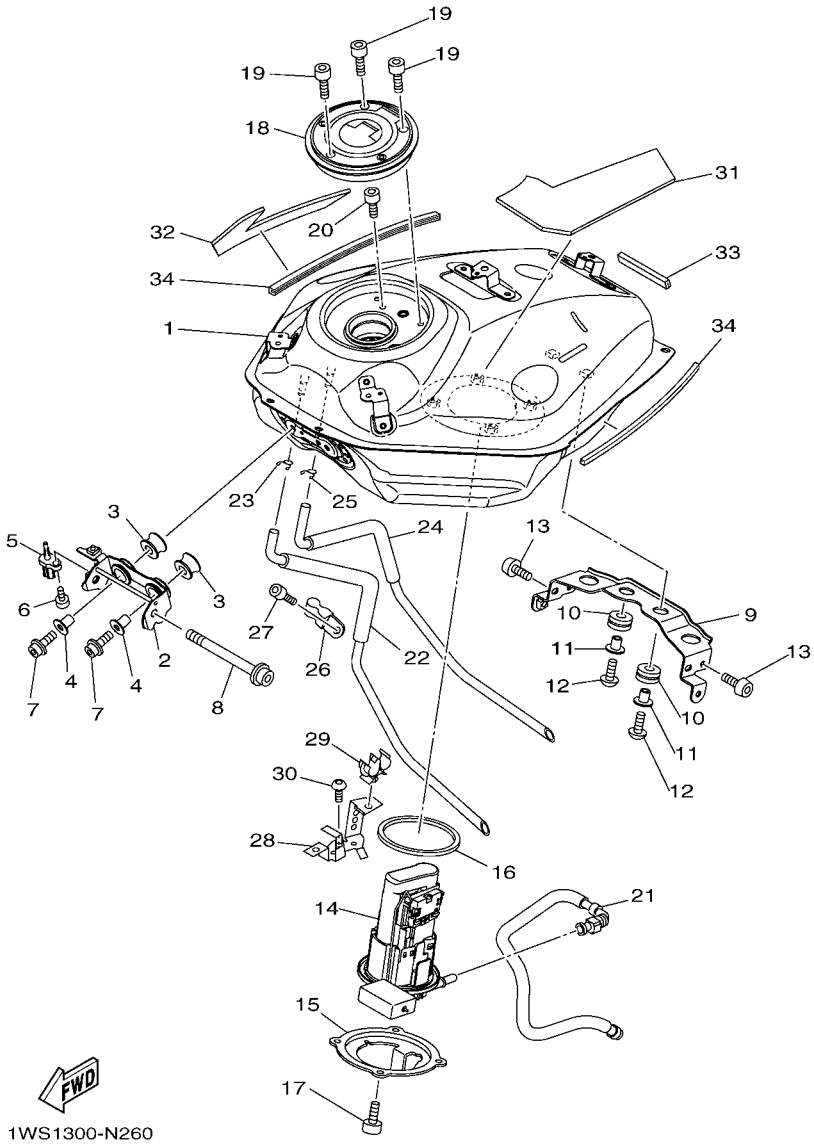



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 1WS–2419F–00 | BRACKET, CANISTOR | 1 | | | | | |
| 29 | 90464–11007 | CLAMP | 1 | | | | | |
| 30 | 90111–06119 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 31 | 1WS–2414H–00 | DAMPER, PLATE 1 | 1 | | | | | |
| 32 | 1WS–2414J–00 | DAMPER, PLATE 2 | 1 | | | | | |
| 33 | 90520–02011 | DAMPER, PLATE | 1 | | | | | |
| 34 | 3D7–24188–00 | MOLD, FUEL TANK | 2 | | | | | |

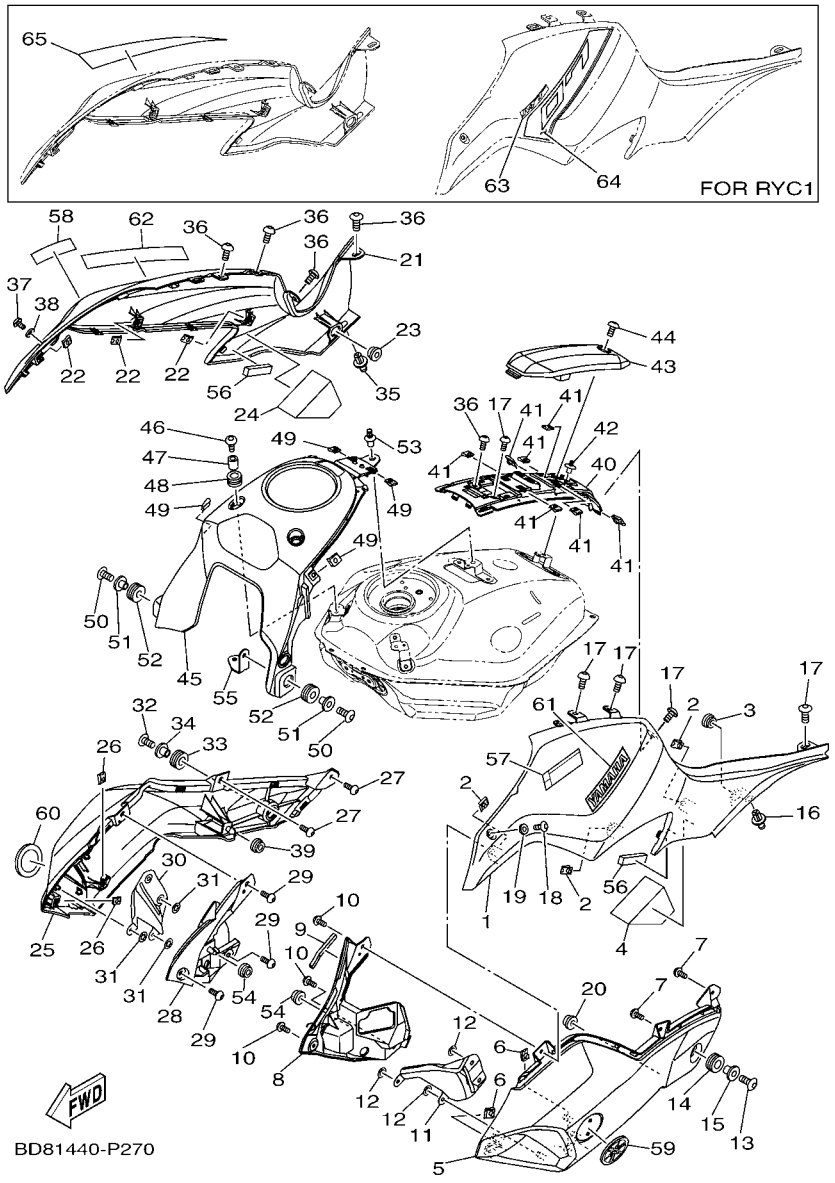



## FIG. 27 FUEL TANK 2

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–24129–00–P3 | COVER, SIDE 1 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–24129–00–P5 | COVER, SIDE 1 | 1 | | | | | UR FOR RYC1 |
| 2 | 90183–05076 | NUT, SPRING | 3 | | | | | |
| 3 | 90480–01559 | GROMMET | 1 | | | | | |
| 4 | 1WS–2414P–00 | DAMPER, PLATE 5 | 1 | | | | | |
| 5 | 1WS–2137W–00 | SCOOP, AIR 1 | 1 | | | | | |
| 6 | 90183–05076 | NUT, SPRING | 2 | | | | | |
| 7 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 8 | 1WS–2836K–00 | PANEL, INNER 1 | 1 | | | | | |
| 9 | 90520–10023 | DAMPER, PLATE | 1 | | | | | |
| 10 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 3 | | | | | |
| 11 | 1WS–2837N–00 | GRILL, AIR INTAKE 1 | 1 | | | | | |
| 12 | 90183–05M02 | NUT, SPRING | 4 | | | | | |
| 13 | 90110–06087 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 14 | 90480–17007 | GROMMET | 1 | | | | | |
| 15 | 90387–10107 | COLLAR | 1 | | | | | |
| 16 | 90269–07077 | RIVET | 1 | | | | | |
| 17 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 5 | | | | | |
| 18 | 90111–05037 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 19 | 90202–05088 | WASHER, PLATE | 1 | | | | | |
| 20 | 90480–01558 | GROMMET | 1 | | | | | |
| 21 | 1WS–24139–00–P3 | COVER, SIDE 2 | 1 | | | | | UR FOR VDVM1 |
| | 1WS–24139–00–P5 | COVER, SIDE 2 | 1 | | | | | UR FOR RYC1 |
| 22 | 90183–05076 | NUT, SPRING | 3 | | | | | |
| 23 | 90480–01559 | GROMMET | 1 | | | | | |
| 24 | 1WS–2414R–00 | DAMPER, PLATE 6 | 1 | | | | | |
| 25 | 1WS–2137X–00 | SCOOP, AIR 2 | 1 | | | | | |

## FIG. 27 FUEL TANK 2

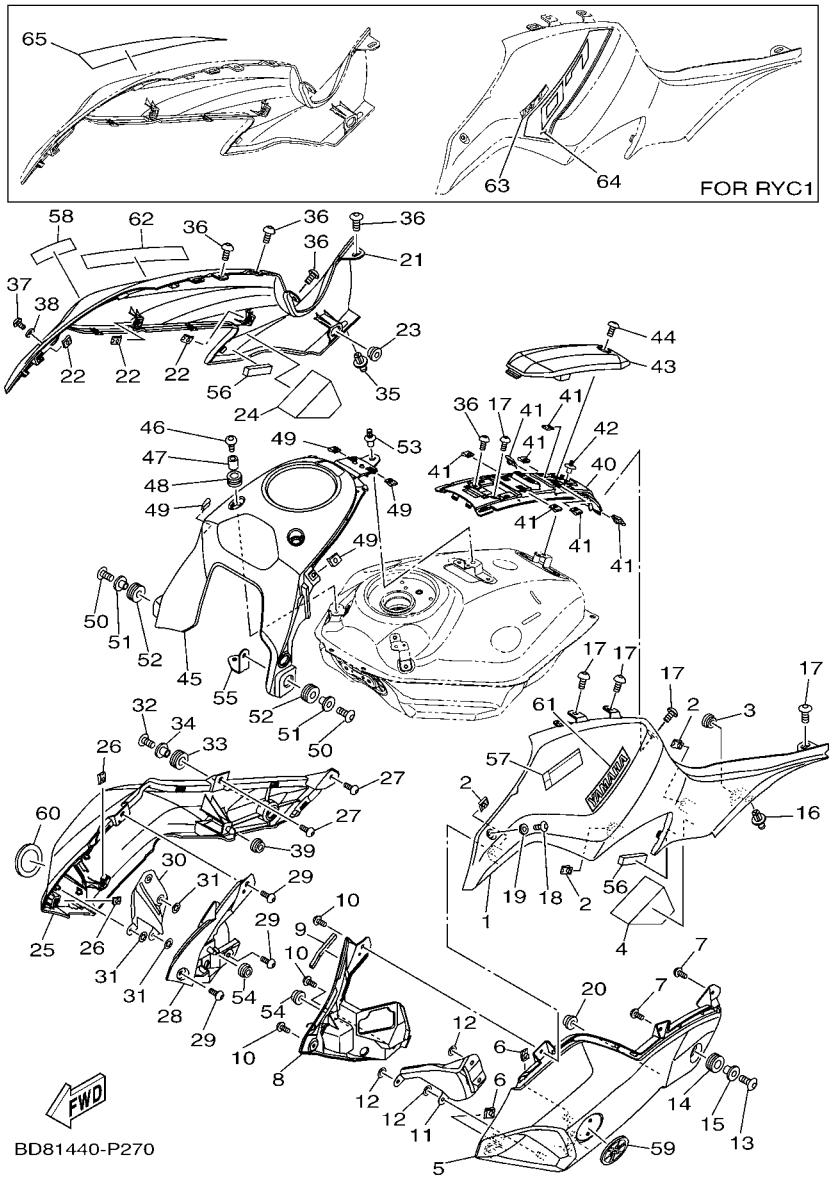



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 26 | 90183–05076 | NUT, SPRING | 2 | | | | | |
| 27 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 28 | 1WS–2836L–00 | PANEL, INNER 2 | 1 | | | | | |
| 29 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 3 | | | | | |
| 30 | 1WS–2837R–00 | GRILL, AIR INTAKE 2 | 1 | | | | | |
| 31 | 90183–05M02 | NUT, SPRING | 4 | | | | | |
| 32 | 90110–06087 | BOLT, HEXAGON SOCKET HEAD | 1 | | | | | |
| 33 | 90480–17007 | GROMMET | 1 | | | | | |
| 34 | 90387–10107 | COLLAR | 1 | | | | | |
| 35 | 90269–07077 | RIVET | 1 | | | | | |
| 36 | 90111–05003 | BOLT,HEX. SOCKET BUTTON | 5 | | | | | |
| 37 | 90111–05037 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 38 | 90202–05088 | WASHER, PLATE | 1 | | | | | |
| 39 | 90480–01558 | GROMMET | 1 | | | | | |
| 40 | 1WS–2171A–00–P3 | COVER, TOP | 1 | | | | | UR FOR VDVM1 |
| | 1WS–2171A–00–P5 | COVER, TOP | 1 | | | | | UR FOR RYC1 |
| 41 | 90183–05076 | NUT, SPRING | 7 | | | | | |
| 42 | 90269–07077 | RIVET | 1 | | | | | |
| 43 | 1WS–28219–00 | COVER 1 | 1 | | | | | |
| 44 | 90111–05007 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 45 | 1WS–2464E–00 | COVER, CAP | 1 | | | | | |
| 46 | 90111–05007 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 47 | 90387–0611W | COLLAR | 2 | | | | | |
| 48 | 90480–13018 | GROMMET | 2 | | | | | |
| 49 | 90183–05076 | NUT, SPRING | 4 | | | | | |
| 50 | 90111–06084 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 51 | 90387–07042 | COLLAR | 2 | | | | | |

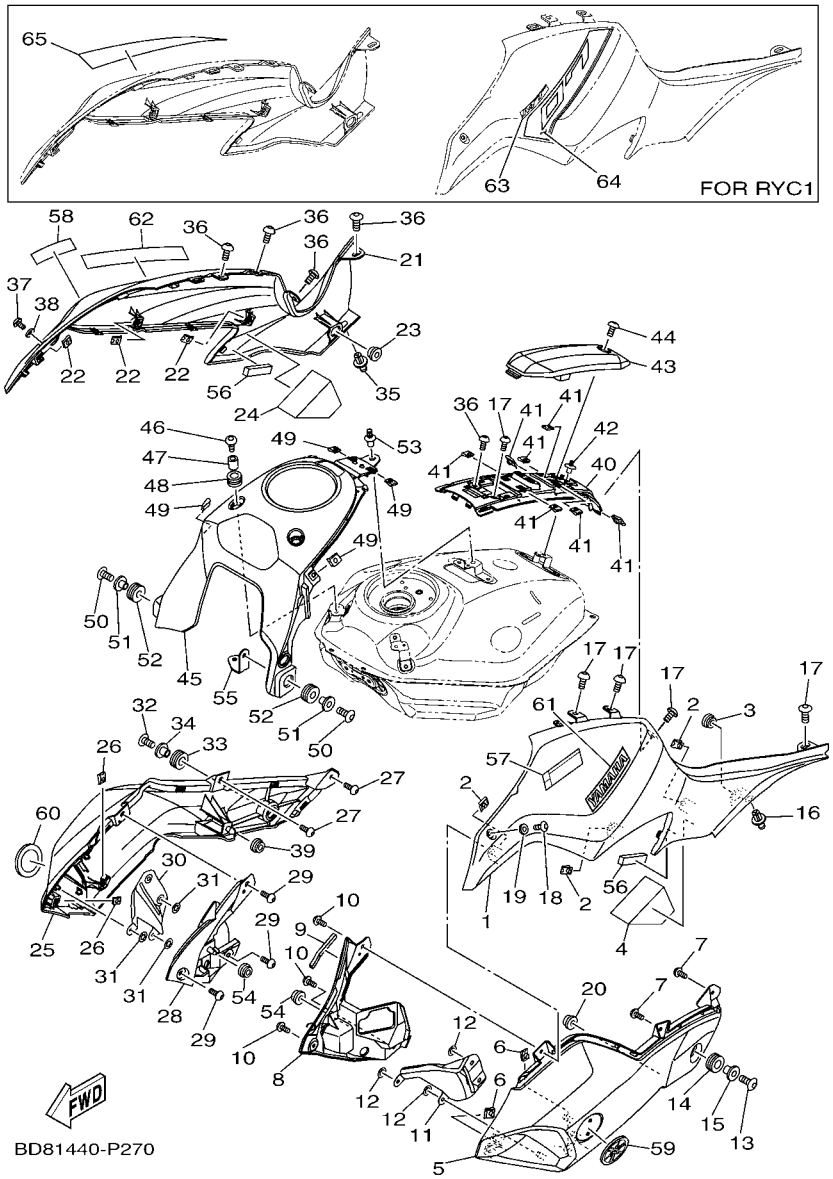


## FIG. 27 FUEL TANK 2

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 52 | 90480–14452 | GROMMET | 2 | | | | | |
| 53 | 90269–07077 | RIVET | 1 | | | | | |
| 54 | 90480–01559 | GROMMET | 2 | | | | | |
| 55 | 1WS–2463E–00 | BRACKET, CAP | 1 | | | | | |
| 56 | 90520–09002 | DAMPER, PLATE | 2 | | | | | |
| 57 | 1XC–21568–00 | LABEL, WARNING | 1 | | | | | |
| 58 | 2S3–2817K–10 | LABEL,FUEL | 1 | | | | | |
| 59 | 1RC–2413B–00 | EMBLEM | 1 | | | | | |
| 60 | 1RC–2413B–00 | EMBLEM | 1 | | | | | |
| 61 | 99246–00100 | EMBLEM, YAMAHA | 1 | | | | | FOR VDVM1 |
| 62 | 99246–00100 | EMBLEM, YAMAHA | 1 | | | | | FOR VDVM1 |
| 63 | 1WS–28328–00 | EMBLEM | 1 | | | | | FOR RYC1 |
| 64 | 1WS–2424A–00 | GRAPHIC 7 | 1 | | | | | FOR RYC1 |
| 65 | 1WS–2424B–00 | GRAPHIC 8 | 1 | | | | | FOR RYC1 |


## FIG. 28 SEAT

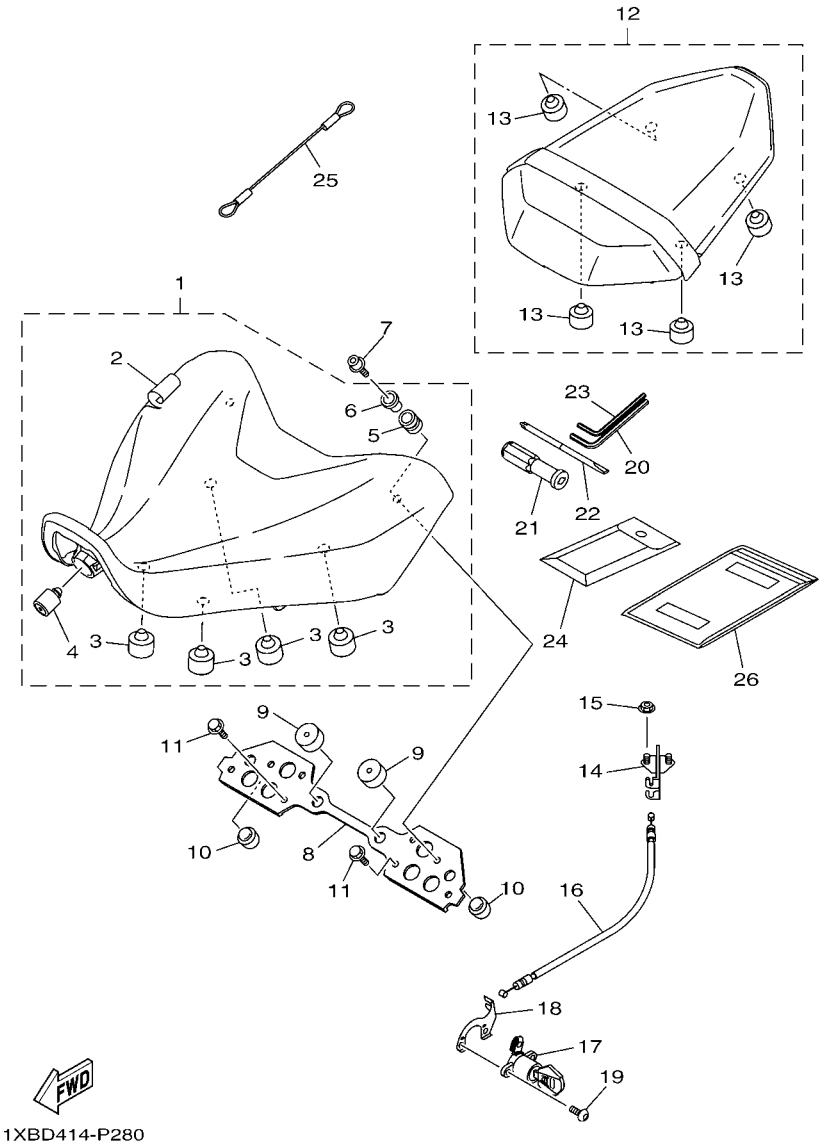

1XBD414-P280

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–24710–00 | SINGLE SEAT ASSY | 1 | | | | | |
| 2 | 1WS–2470F–00 | .SEAT COVER COMP. | 1 | | | | | |
| 3 | 371–27114–00 | .STOPPER, MAIN STAND | 4 | | | | | |
| 4 | 1D7–27114–00 | .STOPPER, MAIN STAND | 1 | | | | | |
| 5 | 90480–14604 | .GROMMET | 2 | | | | | |
| 6 | 90387–07391 | .COLLAR | 2 | | | | | |
| 7 | 90110–06172 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 8 | 1WS–21131–00 | BRACKET | 1 | | | | | |
| 9 | 5RU–27114–00 | STOPPER, MAIN STAND | 2 | | | | | |
| 10 | 157–27114–00 | STOPPER, MAIN STAND | 2 | | | | | |
| 11 | 95812–06010 | BOLT, FLANGE | 4 | | | | | |
| 12 | 1WS–24750–00 | TANDEM SEAT ASSY | 1 | | | | | |
| 13 | 278–27114–00 | .STOPPER, MAIN STAND | 4 | | | | | |
| 14 | 1WS–24780–00 | SEAT LOCK ASSY | 1 | | | | | |
| 15 | 95702–06500 | NUT, FLANGE | 2 | | | | | |
| 16 | 1WS–2478E–00 | CABLE, SEAT LOCK | 1 | | | | | |
| 17 | 2TV–W2470–00 | ROTOR SET | 1 | | | | | |
| 18 | 23P–2117K–00 | STAY, LOCK | 1 | | | | | |
| 19 | 90149–06030 | SCREW | 2 | | | | | |
| 20 | 14B–28164–00 | WRENCH, HEXAGON 8 | 1 | | | | | |
| 21 | 2H7–28151–00 | GRIP, DRIVER | 1 | | | | | |
| 22 | 137–28152–00 | DRIVER | 1 | | | | | |
| 23 | 23P–28164–00 | WRENCH, HEXAGON 8 | 1 | | | | | |
| 24 | 1WS–28100–00 | TOOL KIT | 1 | | | | | |
| 25 | 2S3–21398–00 | HANGER, HELMET | 1 | | | | | |
| 26 | 4KG–28186–10 | POUCH | 1 | | | | | |


## FIG. 29 FRONT WHEEL

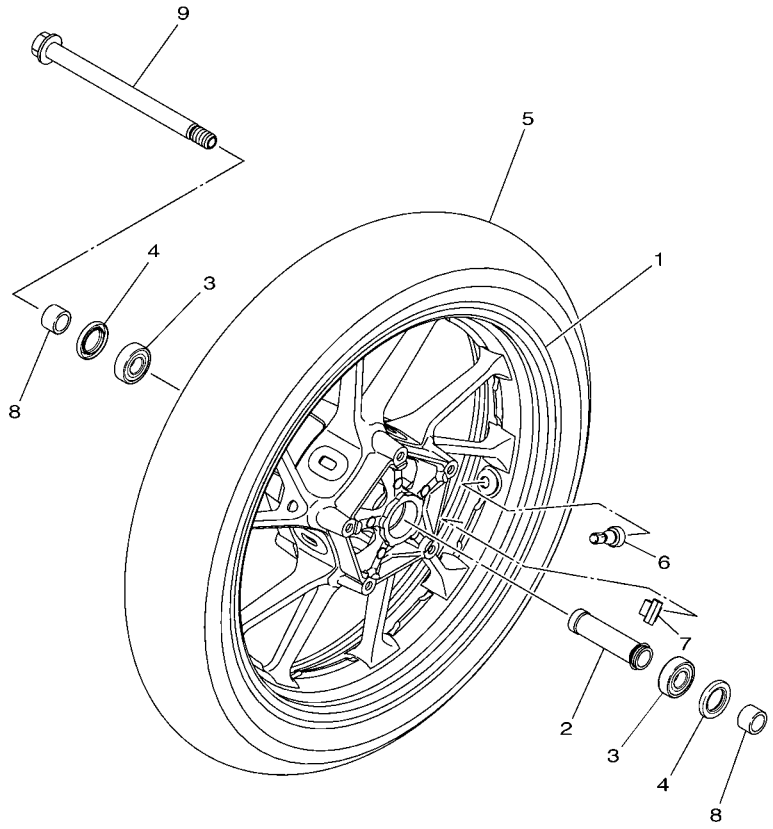


1WSG300-N290


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–25168–00–1X | CAST WHEEL, FRONT | 1 | | | | | LGB/RW |
| 2 | 2PP–25117–00 | SPACER, BEARING | 1 | | | | | |
| 3 | 93306–20352 | BEARING | 2 | | | | | |
| 4 | 93102–25017 | OIL SEAL | 2 | | | | | |
| 5 | * | TIRE (120/70ZR17M/C 58W) | 1 | | | | | UR LM MICHELIN |
| | 94112–17121 | TIRE (120/70ZR17M/C 58W) | 1 | | | | | UR BRIDGESTONE |
| 6 | 93900–00030 | VALVE, RIM (TR412) | 1 | | | | | TAIHEIYO |
| 7 | 5MT–25398–00 | BALANCER, WHEEL (10G) | 1 | | | | | UN |
| | 5MT–25398–10 | BALANCER, WHEEL (20G) | 1 | | | | | UN |
| | 5MT–25398–20 | BALANCER, WHEEL (30G) | 1 | | | | | UN |
| 8 | 90387–17017 | COLLAR | 2 | | | | | |
| 9 | 3MA–25181–10 | AXLE, WHEEL | 1 | | | | | |

## FIG. 30 FRONT BRAKE CALIPER

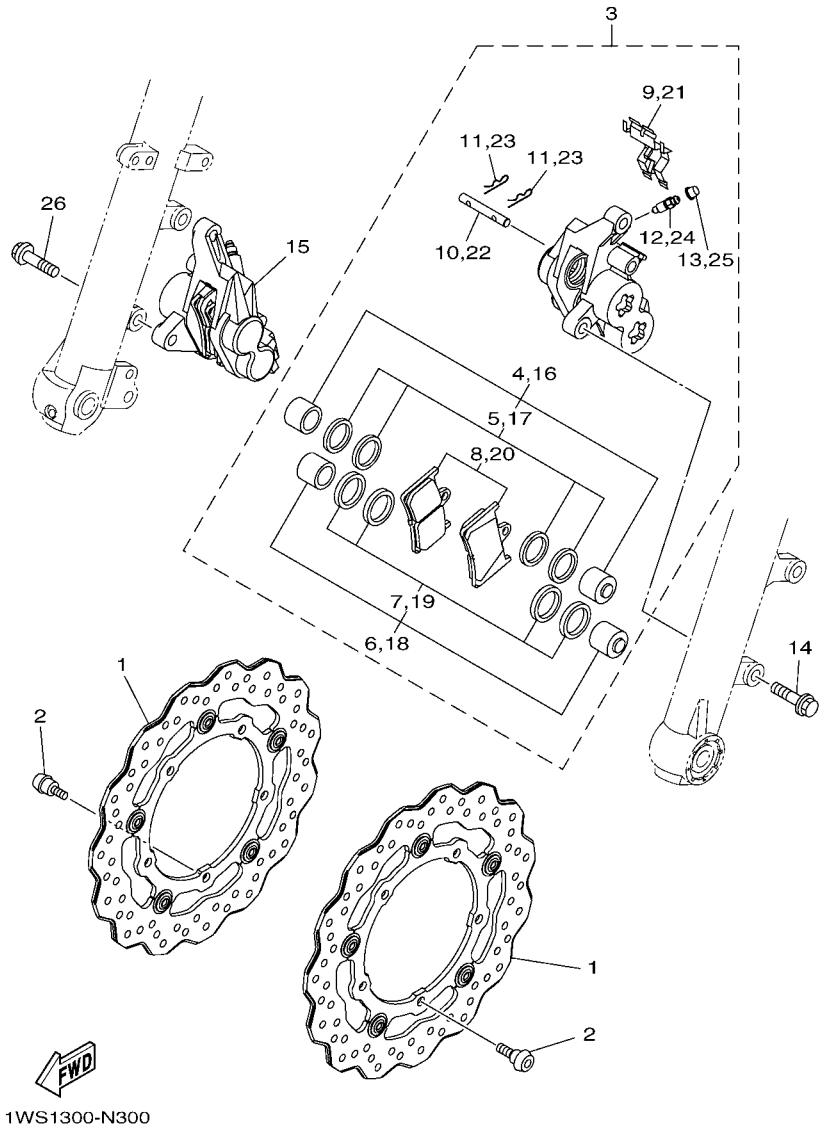



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–2581T–00 | DISK BRAKE ASSY | 2 | | | | | |
| 2 | 90109–064G6 | BOLT | 10 | | | | | |
| 3 | 1WS–2580T–00 | CALIPER ASSY (LEFT) | 1 | | | | | |
| 4 | 4SV–25802–10 | .PISTON ASSY, CALIPER | 1 | | | | | |
| 5 | 3GM–25803–10 | ..CALIPER SEAL KIT | 1 | | | | | |
| 6 | 4SV–25802–00 | .PISTON ASSY, CALIPER | 1 | | | | | |
| 7 | 3MA–25803–10 | ..CALIPER SEAL KIT | 1 | | | | | |
| 8 | 1WS–25805–00 | .BRAKE PAD KIT | 1 | | | | | |
| 9 | 13S–25919–00 | .SUPPORT, PAD | 1 | | | | | |
| 10 | 4SV–25924–00 | .PIN, PAD | 1 | | | | | |
| 11 | 3GM–25925–00 | .CLIP | 2 | | | | | |
| 12 | 1J3–25824–00 | .SCREW, BLEED | 1 | | | | | |
| 13 | 306–25825–01 | .CAP | 1 | | | | | |
| 14 | 90105–10638 | BOLT, FLANGE | 2 | | | | | |
| 15 | 1WS–2580U–00 | CALIPER ASSY (RIGHT) | 1 | | | | | |
| 16 | 4SV–25802–10 | .PISTON ASSY, CALIPER | 1 | | | | | |
| 17 | 3GM–25803–10 | ..CALIPER SEAL KIT | 1 | | | | | |
| 18 | 4SV–25802–00 | .PISTON ASSY, CALIPER | 1 | | | | | |
| 19 | 3MA–25803–10 | ..CALIPER SEAL KIT | 1 | | | | | |
| 20 | 1WS–25805–00 | .BRAKE PAD KIT | 1 | | | | | |
| 21 | 13S–25919–00 | .SUPPORT, PAD | 1 | | | | | |
| 22 | 4SV–25924–00 | .PIN, PAD | 1 | | | | | |
| 23 | 3GM–25925–00 | .CLIP | 2 | | | | | |
| 24 | 1J3–25824–00 | .SCREW, BLEED | 1 | | | | | |
| 25 | 306–25825–01 | .CAP | 1 | | | | | |
| 26 | 90105–10638 | BOLT, FLANGE | 2 | | | | | |

## FIG. 31 REAR WHEEL

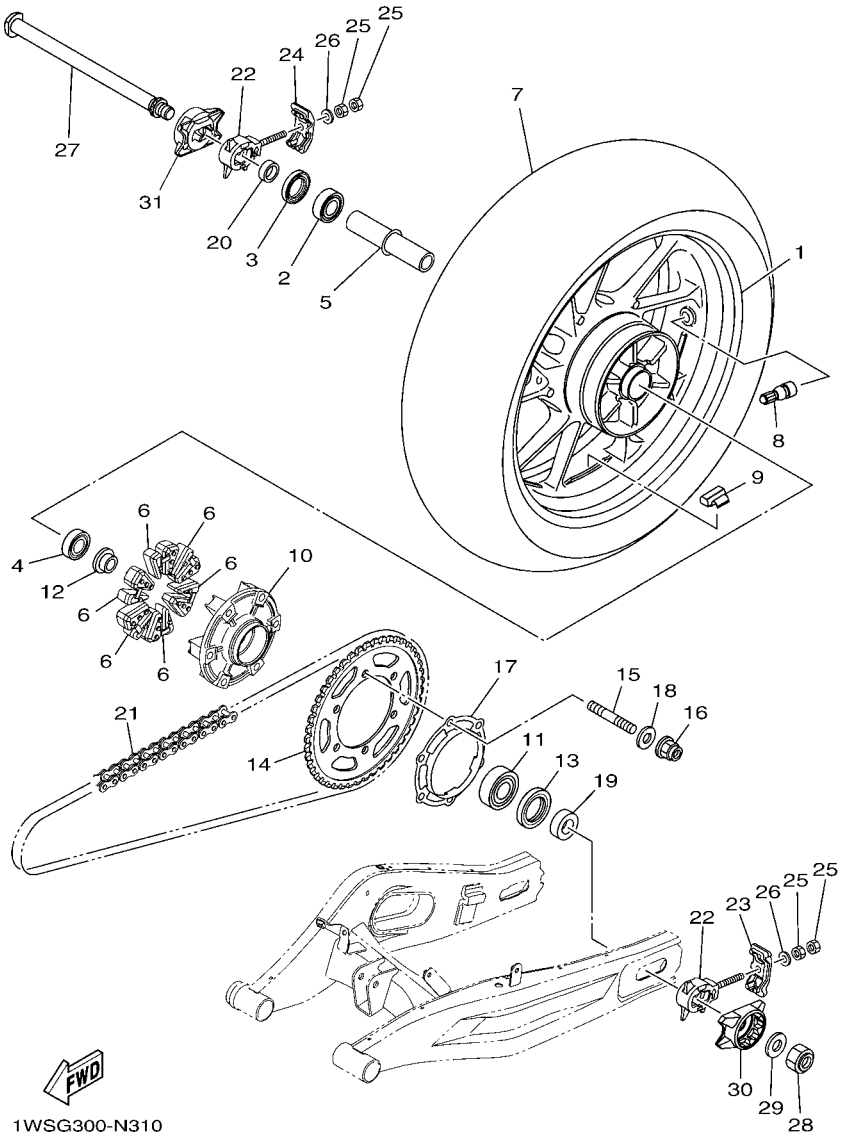


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1RC–25338–00–2X | CAST WHEEL, REAR | 1 | | | | | LGB/RW |
| 2 | 93306–20480 | BEARING | 1 | | | | | |
| 3 | 93102–28022 | OIL SEAL | 1 | | | | | |
| 4 | 93306–00416 | BEARING | 1 | | | | | |
| 5 | 2PP–25317–00 | SPACER, BEARING | 1 | | | | | |
| 6 | 5SL–25364–00 | DAMPER | 6 | | | | | |
| 7 | * | TIRE (180/55ZR17 M/C 73W) | 1 | | | | | UR LM MICHELIN |
| | 94118–17080 | TIRE (180/55ZR17 M/C 73W) | 1 | | | | | UR BRIDGESTONE |
| 8 | 93900–00030 | VALVE, RIM (TR412) | 1 | | | | | TAIHEIYO |
| 9 | 5MT–25398–00 | BALANCER, WHEEL (10G) | 1 | | | | | UN |
| | 5MT–25398–10 | BALANCER, WHEEL (20G) | 1 | | | | | UR |
| | 5MT–25398–20 | BALANCER, WHEEL (30G) | 1 | | | | | UN |
| 10 | 5JJ–25366–00 | CLUTCH, HUB | 1 | | | | | |
| 11 | 93306–205B5 | BEARING | 1 | | | | | |
| 12 | 1RC–25383–00 | COLLAR, WHEEL | 1 | | | | | |
| 13 | 93106–40013 | OIL SEAL | 1 | | | | | |
| 14 | 1WS–25443–00 | SPROCKET, DRIVEN (43T) | 1 | | | | | |
| 15 | 90116–10048 | BOLT, STUD | 6 | | | | | |
| 16 | 95602–10200 | NUT, U FLANGE | 6 | | | | | |
| 17 | 1WS–2537W–00 | BRACKET 1 | 1 | | | | | |
| 18 | 90201–10045 | WASHER, PLATE | 6 | | | | | |
| 19 | 90387–20036 | COLLAR | 1 | | | | | |
| 20 | 90387–20035 | COLLAR | 1 | | | | | |
| 21 | 94582–40108 | CHAIN (DID 525VZ-108LE) | 1 | | | | | |
| 22 | 1WS–25388–00 | PULLER, CHAIN 1 | 2 | | | | | |
| 23 | 1WS–22174–00 | END 1 | 1 | | | | | |
| 24 | 1WS–22175–00 | END 1 | 1 | | | | | |

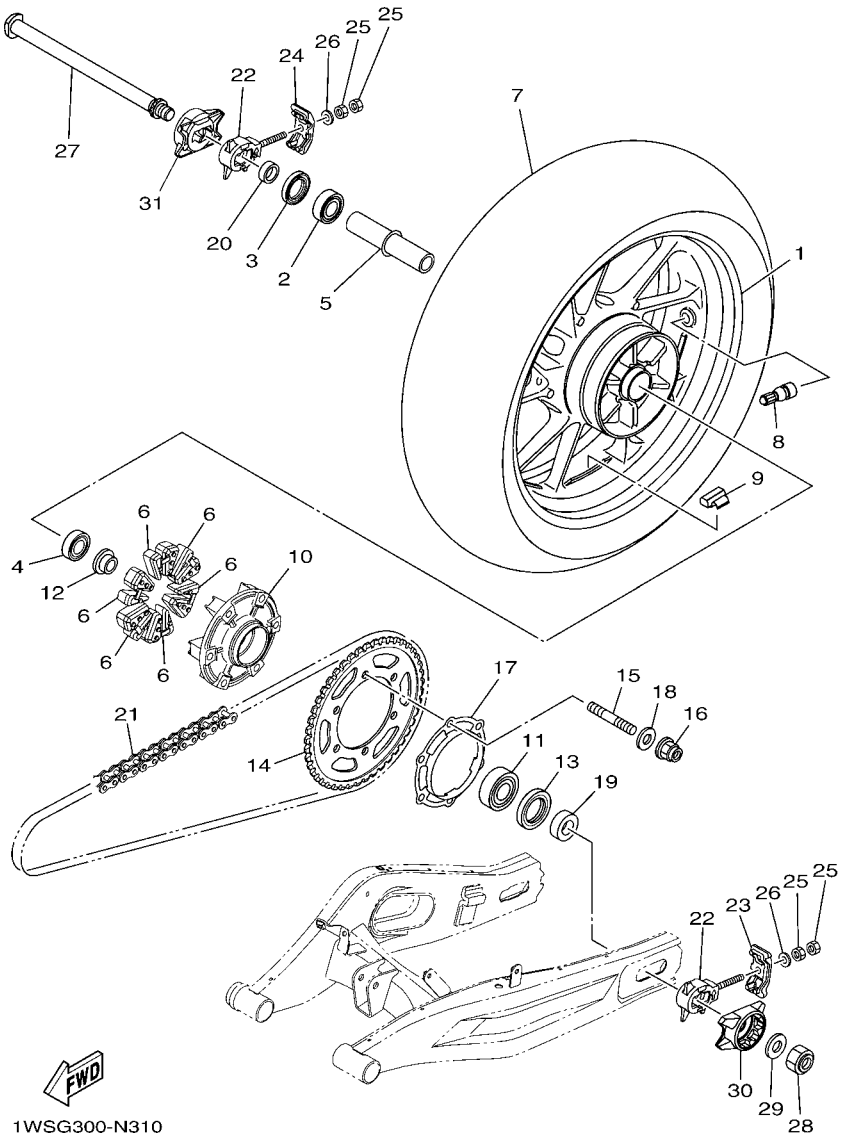


1WSG300-N310

**FIG. 31 REAR WHEEL**


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 25 | 95302–08600 | NUT, HEXAGON | 4 | | | | | |
| 26 | 92902–08600 | WASHER, PLATE | 2 | | | | | |
| 27 | 4FN–22141–00 | SHAFT, PIVOT | 1 | | | | | |
| 28 | 90185–18009 | NUT, SELF-LOCKING | 1 | | | | | |
| 29 | 90201–18021 | WASHER, PLATE | 1 | | | | | |
| 30 | 1WS–2538D–00 | COVER, REAR AXLE 1 | 1 | | | | | |
| 31 | 1WS–2538N–00 | COVER, REAR AXLE 2 | 1 | | | | | |

## FIG. 32 REAR BRAKE CALIPER

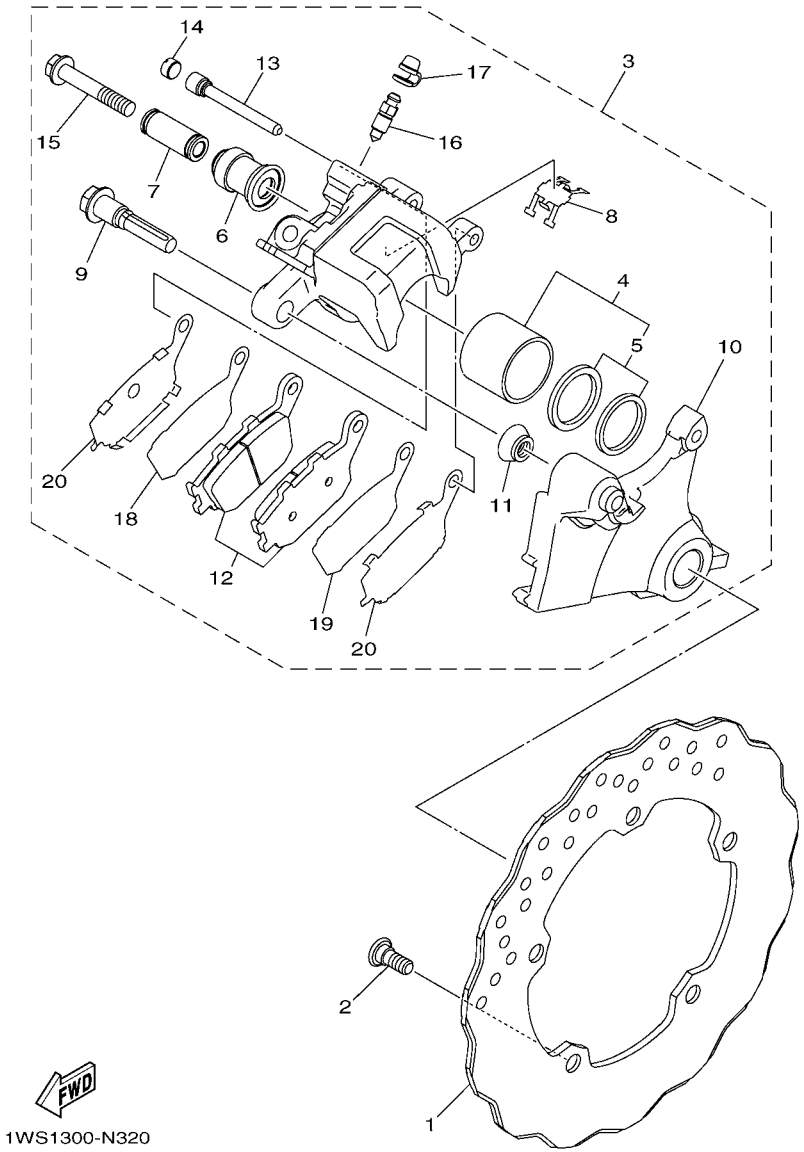


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–2582W–00 | DISK, REAR BRAKE 2 | 1 | | | | | |
| 2 | 90109–08045 | BOLT | 5 | | | | | |
| 3 | 1RC–2580W–00 | CALIPER ASSY, REAR 2 | 1 | | | | | |
| 4 | 5SL–25802–00 | .PISTON ASSY, CALIPER | 1 | | | | | |
| 5 | 5SL–25803–00 | ..CALIPER SEAL KIT | 1 | | | | | |
| 6 | 5SL–25917–00 | .BOOT, CALIPER | 1 | | | | | |
| 7 | 5SL–25838–00 | .SLEEVE, CALIPER | 1 | | | | | |
| 8 | 5SL–25919–00 | .SUPPORT, PAD | 1 | | | | | |
| 9 | 5SL–25914–00 | .PIN, SLIDE | 1 | | | | | |
| 10 | 1RC–25921–50 | .BRACKET, SUPPORT | 1 | | | | | |
| 11 | 3JD–25917–00 | .BOOT, CALIPER | 1 | | | | | |
| 12 | 5VX–25806–00 | .BRAKE PAD KIT 2 | 1 | | | | | |
| 13 | 8CR–25924–00 | .PIN, PAD | 1 | | | | | |
| 14 | 5DH–25916–00 | .PLUG | 1 | | | | | |
| 15 | 1RC–25926–00 | .BOLT | 1 | | | | | |
| 16 | 1UY–25824–51 | .SCREW, BLEED | 1 | | | | | |
| 17 | 1UY–25825–51 | .CAP | 1 | | | | | |
| 18 | 5SL–25827–00 | .SHIM, CALIPER | 1 | | | | | |
| 19 | 5SL–25827–10 | .SHIM, CALIPER | 1 | | | | | |
| 20 | 5SL–25828–01 | .SHIM, CALIPER | 2 | | | | | |


## FIG. 33 STEERING HANDLE & CABLE

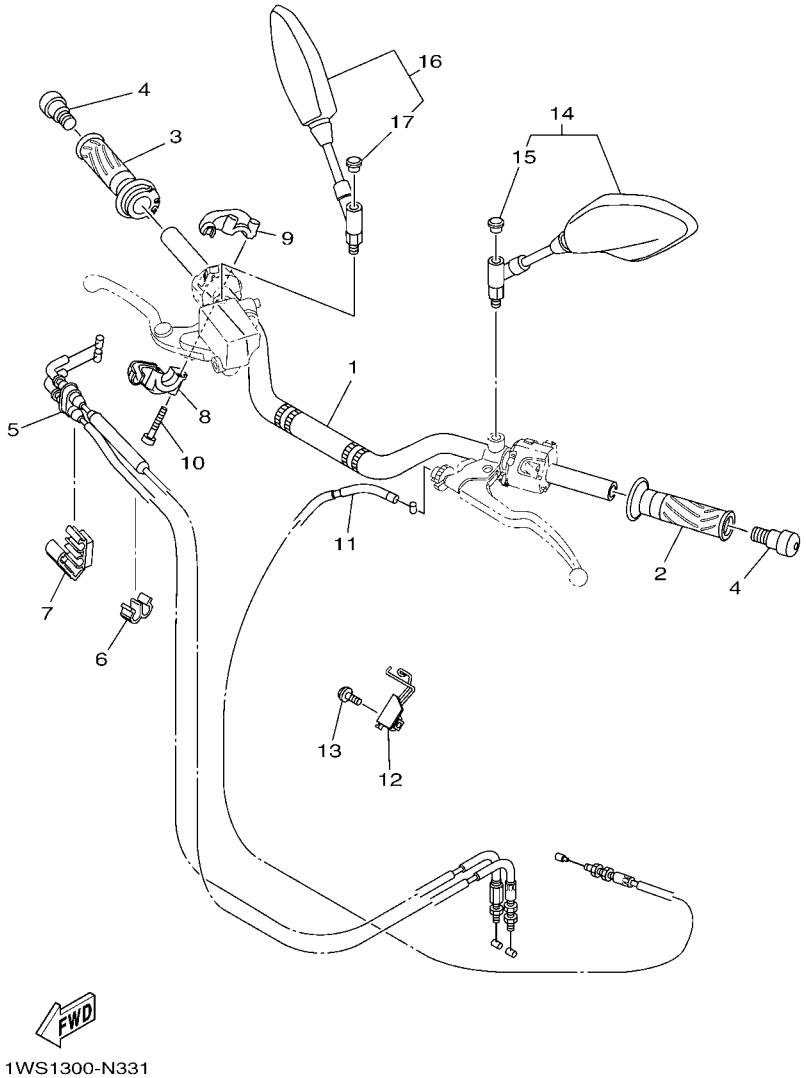


1WS1300-N331


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–26111–00 | HANDLEBAR | 1 | | | | | |
| 2 | 4YR–26241–02 | GRIP (LEFT) | 1 | | | | | |
| 3 | 1WS–26240–00 | GRIP ASSY | 1 | | | | | |
| 4 | 5RU–26246–00 | END, GRIP | 2 | | | | | |
| 5 | 1WS–26301–00 | THROTTLE CABLE ASSY | 1 | | | | | |
| 6 | 90468–15139 | CLIP | 1 | | | | | |
| 7 | 39P–2627E–00 | CLAMP, WIRE | 1 | | | | | |
| 8 | 1WS–26281–00 | CAP, GRIP UPPER | 1 | | | | | |
| 9 | 1WS–26282–00 | CAP, GRIP UNDER | 1 | | | | | |
| 10 | 91317–05040 | BOLT | 2 | | | | | |
| 11 | 1WS–26335–00 | CABLE, CLUTCH | 1 | | | | | |
| 12 | 1WS–2612E–00 | BRACKET | 1 | | | | | |
| 13 | 90111–06101 | BOLT,HEX. SOCKET BUTTON | 1 | | | | | |
| 14 | 1RC–26280–00 | REAR VIEW MIRROR ASSY (LEFT) | 1 | | | | | |
| 15 | 23P–26133–00 | .CAP | 1 | | | | | |
| 16 | 1RC–26290–00 | REAR VIEW MIRROR ASSY (RIGHT) | 1 | | | | | |
| 17 | 23P–26133–00 | .CAP | 1 | | | | | |

## FIG. 34 FRONT MASTER CYLINDER

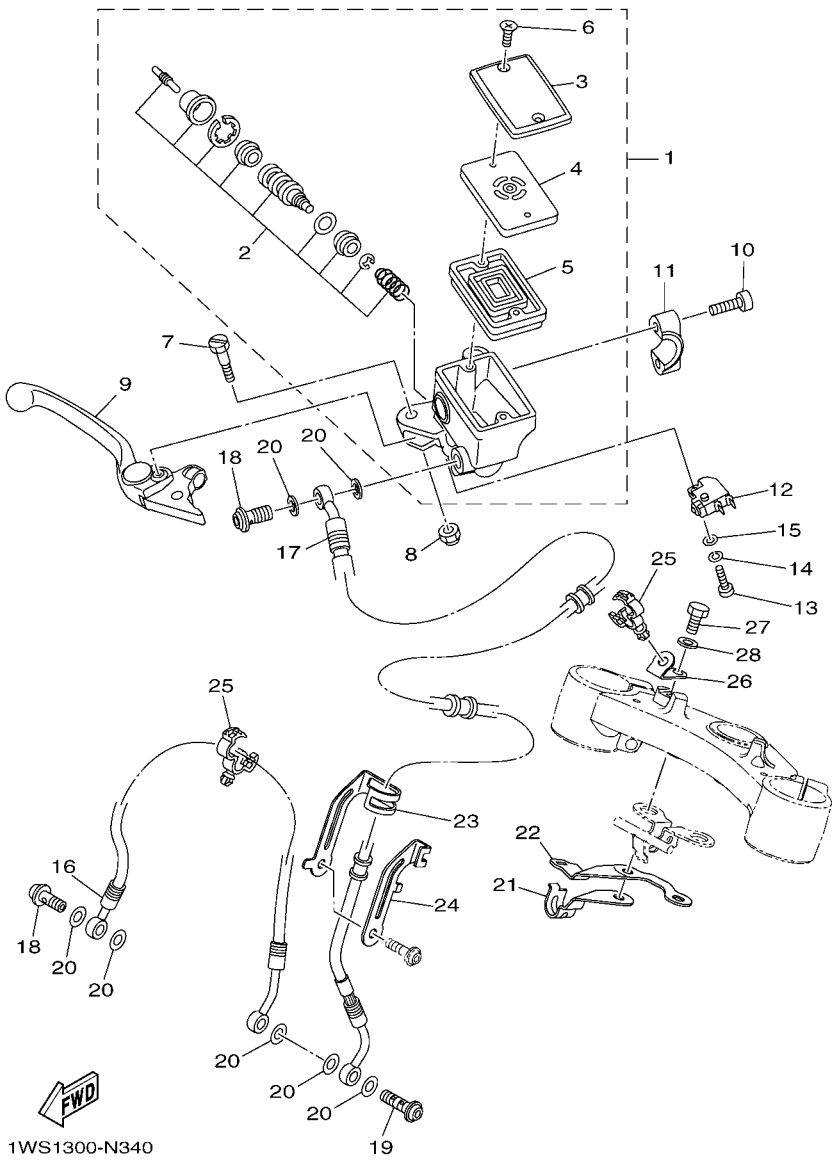



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–2580A–00 | MASTER CYLINDER SUB ASSY 2 | 1 | | | | | |
| 2 | 1WS–25807–00 | .CYLINDER KIT, MASTER | 1 | | | | | |
| 3 | 5VS–25852–00 | .CAP, RESERVOIR | 1 | | | | | |
| 4 | 5VS–25855–00 | .BUSH,DIAPHRAGM | 1 | | | | | |
| 5 | 20S–25854–00 | .DIAPHRAGM, RESERVOIR | 1 | | | | | |
| 6 | 5VS–2589H–00 | .SCREW | 2 | | | | | |
| 7 | 5VS–2589F–00 | BOLT, LEVER | 1 | | | | | |
| 8 | 95617–06100 | NUT, U | 1 | | | | | |
| 9 | 5VS–83922–00 | LEVER 2 | 1 | | | | | |
| 10 | 5VS–26332–00 | BOLT | 2 | | | | | |
| 11 | 5VS–25867–00 | BRACKET, MASTER CYLINDER | 1 | | | | | |
| 12 | 1HP–83980–01 | FRONT STOP SWITCH ASSY | 1 | | | | | |
| 13 | 98502–04012 | SCREW, PAN HEAD | 1 | | | | | |
| 14 | 92902–04100 | WASHER, SPRING | 1 | | | | | |
| 15 | 92902–04600 | WASHER, PLATE | 1 | | | | | |
| 16 | 1WS–25872–00 | HOSE, BRAKE 1 | 1 | | | | | |
| 17 | 1WS–25873–00 | HOSE, BRAKE 2 | 1 | | | | | |
| 18 | 90401–10172 | BOLT, UNION | 2 | | | | | |
| 19 | 90401–10042 | BOLT, UNION | 1 | | | | | |
| 20 | 90430–10005 | GASKET | 7 | | | | | |
| 21 | 1WS–25875–00 | HOLDER, BRAKE HOSE 1 | 1 | | | | | |
| 22 | 1WS–2587A–00 | HOLDER, BRAKE HOSE | 1 | | | | | |
| 23 | 1WS–25876–00 | HOLDER, BRAKE HOSE 2 | 1 | | | | | |
| 24 | 1WS–25886–00 | HOLDER, BRAKE HOSE | 1 | | | | | |
| 25 | 90464–18002 | CLAMP | 2 | | | | | |
| 26 | 1WS–26296–00 | BRACKET | 1 | | | | | |
| 27 | 97027–05012 | BOLT, HEXAGON | 1 | | | | | |

## FIG. 34 FRONT MASTER CYLINDER

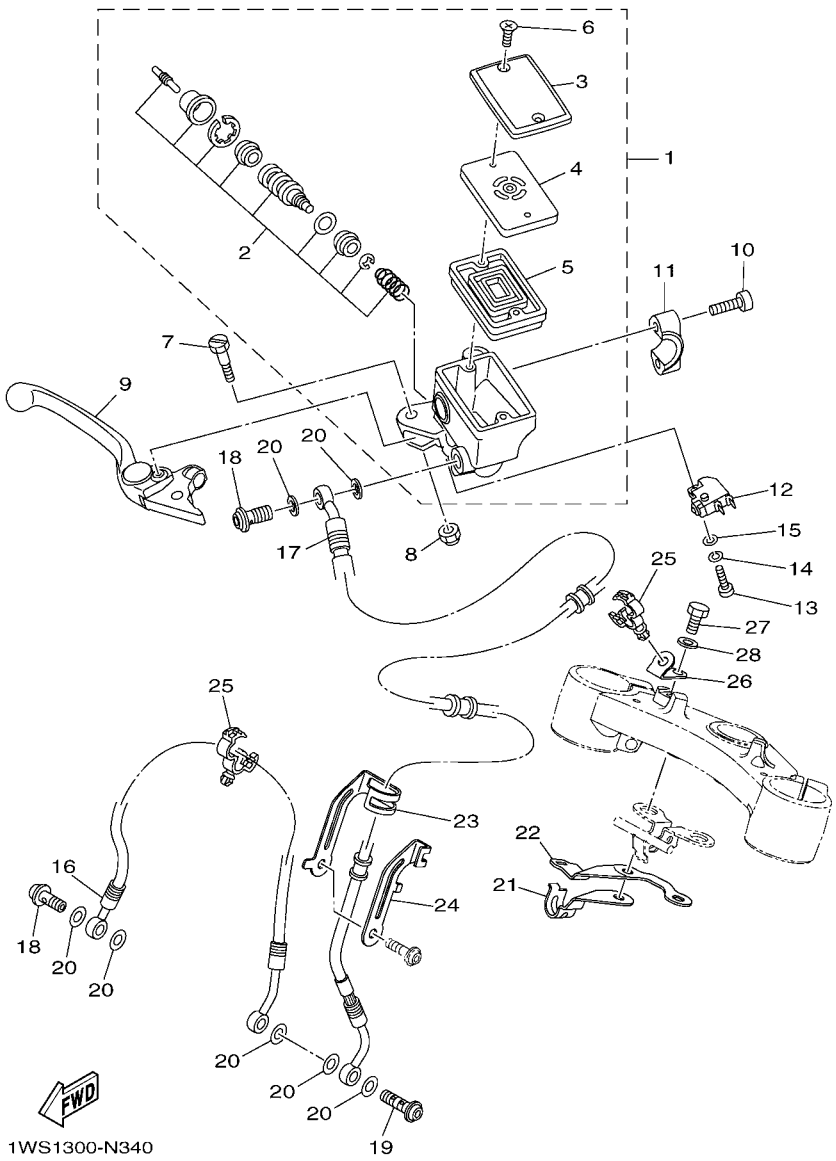



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 92907–05600 | WASHER, PLATE | 1 | | | | | |

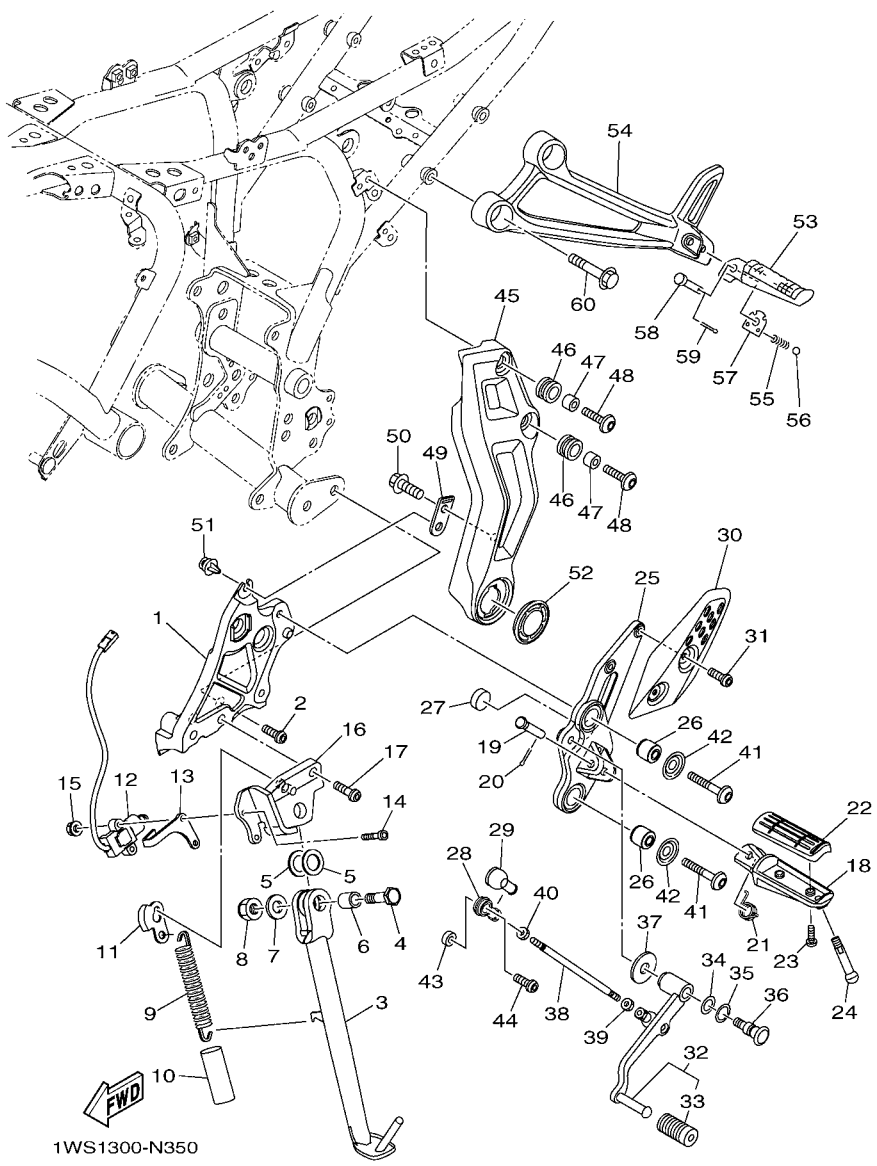



## FIG. 35 STAND & FOOTREST

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–274A3–00 | BRACKET, ADAPTER 1 | 1 | | | | | |
| 2 | 90111–10006 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 3 | 1WS–27311–00 | STAND, SIDE | 1 | | | | | |
| 4 | 90101–10025 | BOLT | 1 | | | | | |
| 5 | 90201–17018 | WASHER, PLATE | 2 | | | | | |
| 6 | 90387–10050 | COLLAR | 1 | | | | | |
| 7 | 90201–10035 | WASHER, PLATE | 1 | | | | | |
| 8 | 90185–10023 | NUT, SELF-LOCKING | 1 | | | | | |
| 9 | 90506–23018 | SPRING, TENSION | 1 | | | | | |
| 10 | 5VX–27351–00 | GUIDE, SIDE STAND | 1 | | | | | |
| 11 | 5VX–27315–00 | LINK, SIDE STAND | 1 | | | | | |
| 12 | 1WS–82566–00 | SWITCH, SIDE STAND | 1 | | | | | |
| 13 | 1WS–2419A–00 | HOLDER | 1 | | | | | |
| 14 | 90110–05071 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 15 | 95602–05200 | NUT, SELF-LOCKING | 2 | | | | | |
| 16 | 1WS–27321–00 | BRACKET, SIDE STAND | 1 | | | | | |
| 17 | 90111–10059 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 18 | 1WS–27451–00 | FOOTREST | 1 | | | | | |
| 19 | 91701–08040 | PIN | 1 | | | | | |
| 20 | 91402–25015 | PIN, COTTER | 1 | | | | | |
| 21 | 90508–18056 | SPRING, TORSION | 1 | | | | | |
| 22 | 3YX–27413–00 | COVER, FOOTREST | 1 | | | | | |
| 23 | 90157–05025 | SCREW, PAN HEAD | 2 | | | | | |
| 24 | 90109–086F8 | BOLT | 1 | | | | | |
| 25 | 1WS–27442–00 | BRACKET 2 | 1 | | | | | |
| 26 | 36Y–27414–00 | DAMPER, FOOTREST | 2 | | | | | |
| 27 | 5VX–27114–00 | STOPPER, MAIN STAND | 1 | | | | | |

## FIG. 35 STAND & FOOTREST

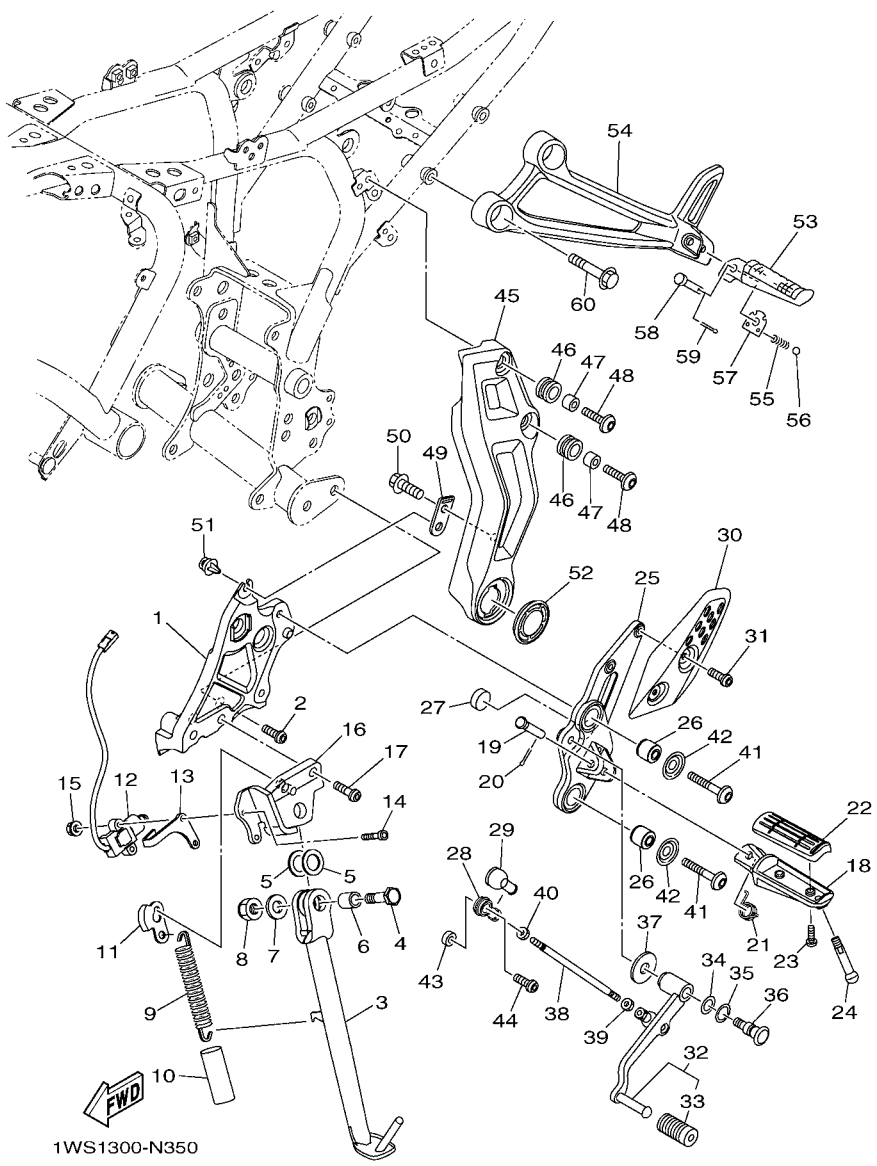



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VX–18116–00 | JOINT, ROD 1 | 1 | | | | | |
| 29 | 5VX–18154–00 | COVER, DUST | 1 | | | | | |
| 30 | 1WS–27445–00 | PLATE 1 | 1 | | | | | |
| 31 | 92014–06012 | BOLT, BUTTON HEAD | 2 | | | | | |
| 32 | 1WS–18110–00 | SHIFT PEDAL ASSY | 1 | | | | | |
| 33 | 1WS–18113–00 | .COVER, SHIFT PEDAL | 1 | | | | | |
| 34 | 90201–12051 | WASHER, PLATE | 1 | | | | | |
| 35 | 90206–12074 | WASHER, WAVE | 1 | | | | | |
| 36 | 4BP–27434–01 | BOLT | 1 | | | | | |
| 37 | 90201–08053 | WASHER, PLATE | 1 | | | | | |
| 38 | 5A8–18115–00 | ROD, SHIFT | 1 | | | | | |
| 39 | 90170–06026 | NUT | 1 | | | | | |
| 40 | 95314–06700 | NUT | 1 | | | | | |
| 41 | 90110–08071 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 42 | 90209–08295 | WASHER | 2 | | | | | |
| 43 | 90387–06372 | COLLAR | 1 | | | | | |
| 44 | 92012–06020 | BOLT, BUTTON HEAD | 1 | | | | | |
| 45 | 1WS–27453–00 | COVER 1 | 1 | | | | | |
| 46 | 90480–14003 | GROMMET | 2 | | | | | |
| 47 | 90387–06057 | COLLAR | 2 | | | | | |
| 48 | 90149–06105 | SCREW | 2 | | | | | |
| 49 | 1WS–27425–00 | BRACKET, FOOTREST 2 | 1 | | | | | |
| 50 | 95802–06010 | BOLT, FLANGE | 1 | | | | | |
| 51 | 90269–08008 | RIVET | 1 | | | | | |
| 52 | 1WS–27475–00–P0 | CAP 1 | 1 | | | | | MBL2 |
| 53 | 3VR–27431–01 | FOOTREST, REAR 1 | 1 | | | | | |
| 54 | 1WS–2741L–01 | BRACKET 4 | 1 | | | | | |

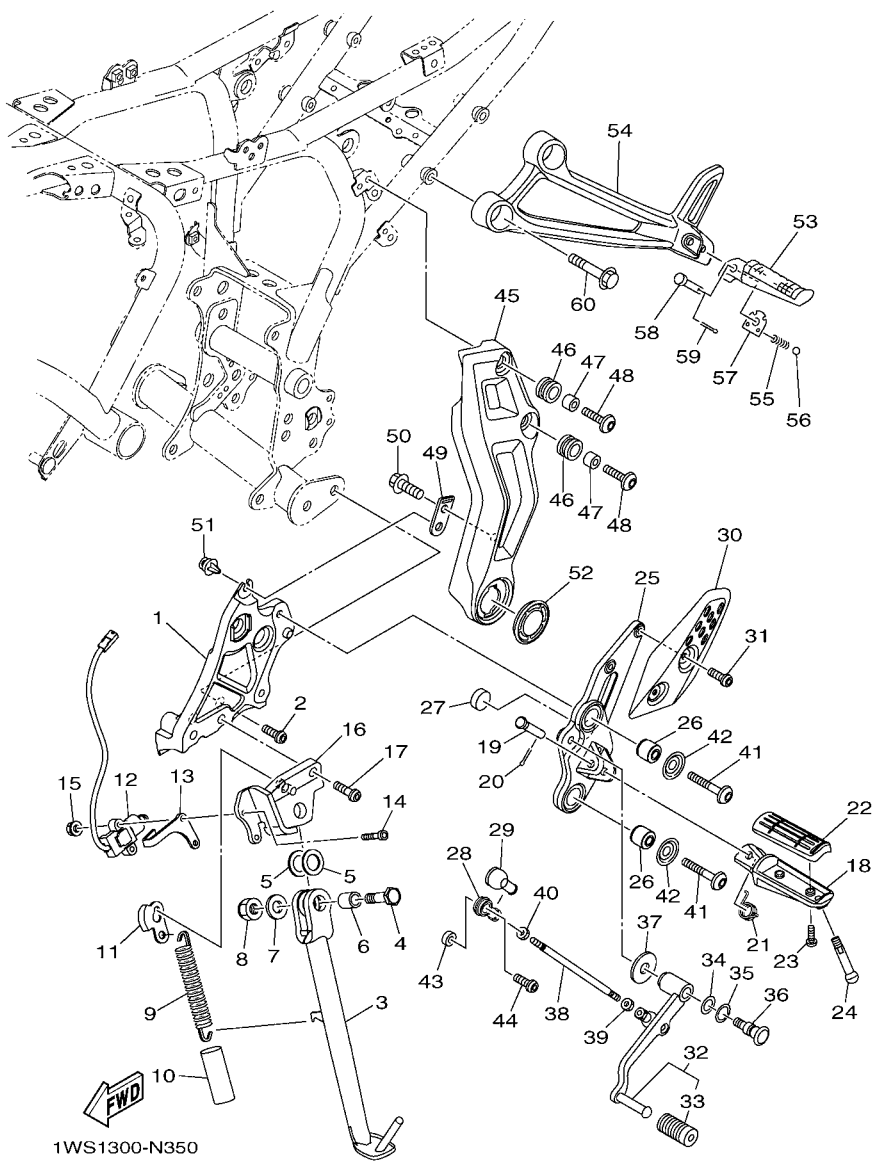



## FIG. 35 STAND & FOOTREST

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 55 | 90501–12743 | SPRING, COMPRESSION | 1 | | | | | |
| 56 | 93501–04011 | BALL | 1 | | | | | |
| 57 | 5VX–27437–00 | WASHER, SPECIAL | 1 | | | | | |
| 58 | 91702–08040 | PIN, CLEVIS | 1 | | | | | |
| 59 | 91401–25015 | PIN, COTTER | 1 | | | | | |
| 60 | 90110–08231 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |

## FIG. 36 STAND & FOOTREST 2

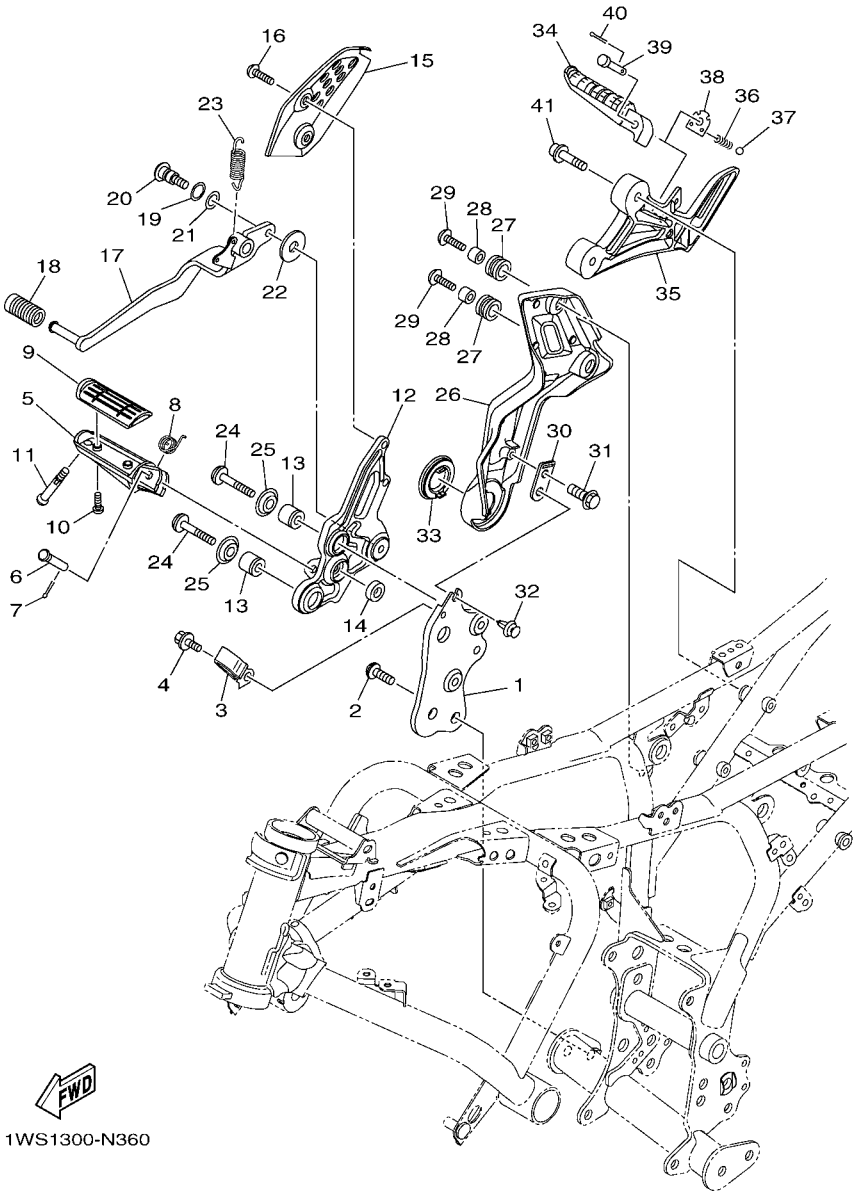



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–274A4–00 | BRACKET,ADAPTER 2 | 1 | | | | | |
| 2 | 90111–10006 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 3 | 90465–08045 | CLAMP | 1 | | | | | |
| 4 | 95022–06010 | BOLT, FLANGE | 1 | | | | | |
| 5 | 1WS–27461–00 | FOOTREST | 1 | | | | | |
| 6 | 91701–08040 | PIN | 1 | | | | | |
| 7 | 91402–25015 | PIN, COTTER | 1 | | | | | |
| 8 | 90508–18056 | SPRING, TORSION | 1 | | | | | |
| 9 | 3YX–27413–00 | COVER, FOOTREST | 1 | | | | | |
| 10 | 90157–05025 | SCREW, PAN HEAD | 2 | | | | | |
| 11 | 90109–086F8 | BOLT | 1 | | | | | |
| 12 | 1WS–27443–00 | BRACKET 3 | 1 | | | | | |
| 13 | 36Y–27414–00 | DAMPER, FOOTREST | 2 | | | | | |
| 14 | 5VX–27114–00 | STOPPER, MAIN STAND | 1 | | | | | |
| 15 | 1WS–27446–00 | PLATE 2 | 1 | | | | | |
| 16 | 92014–08025 | BOLT, BUTTON HEAD | 2 | | | | | |
| 17 | 1WS–27211–00 | PEDAL, BRAKE | 1 | | | | | |
| 18 | 1WS–18113–00 | COVER, SHIFT PEDAL | 1 | | | | | |
| 19 | 90206–12074 | WASHER, WAVE | 1 | | | | | |
| 20 | 4BP–27434–01 | BOLT | 1 | | | | | |
| 21 | 90201–12051 | WASHER, PLATE | 1 | | | | | |
| 22 | 90201–08053 | WASHER, PLATE | 1 | | | | | |
| 23 | 90506–23008 | SPRING, TENSION | 1 | | | | | |
| 24 | 90110–08071 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 25 | 90209–08295 | WASHER | 2 | | | | | |
| 26 | 1WS–27463–00 | COVER 2 | 1 | | | | | |
| 27 | 90480–14003 | GROMMET | 2 | | | | | |

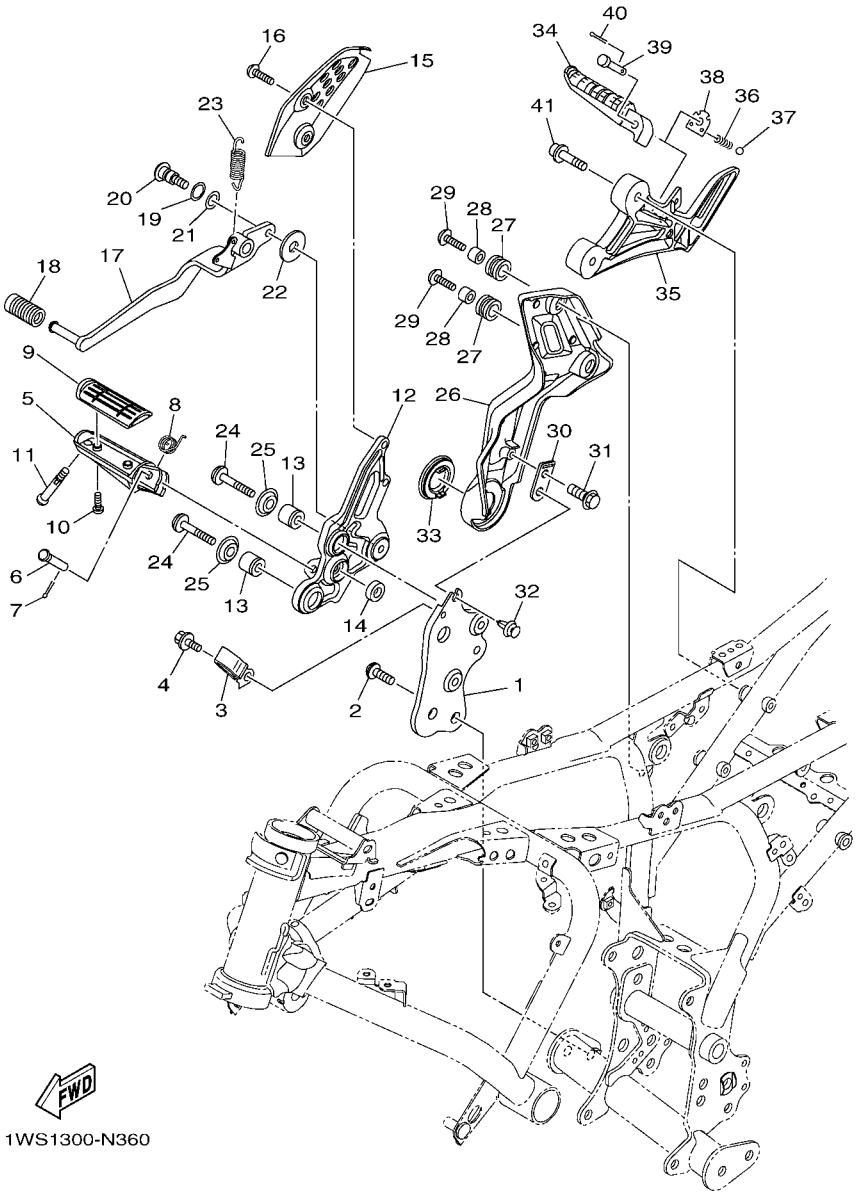


## FIG. 36 STAND & FOOTREST 2


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 90387–06057 | COLLAR | 2 | | | | | |
| 29 | 90149–06105 | SCREW | 2 | | | | | |
| 30 | 1WS–27425–00 | BRACKET, FOOTREST 2 | 1 | | | | | |
| 31 | 95802–06010 | BOLT, FLANGE | 1 | | | | | |
| 32 | 90269–08008 | RIVET | 1 | | | | | |
| 33 | 1WS–27475–00–P0 | CAP 1 | 1 | | | | | MBL2 |
| 34 | 3VR–27441–01 | FOOTREST, REAR 2 | 1 | | | | | |
| 35 | 1WS–2742L–01 | BRACKET 5 | 1 | | | | | |
| 36 | 90501–12743 | SPRING, COMPRESSION | 1 | | | | | |
| 37 | 93501–04011 | BALL | 1 | | | | | |
| 38 | 5VX–27437–00 | WASHER, SPECIAL | 1 | | | | | |
| 39 | 91702–08040 | PIN, CLEVIS | 1 | | | | | |
| 40 | 91401–25015 | PIN, COTTER | 1 | | | | | |
| 41 | 90110–08231 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |

## FIG. 37 REAR MASTER CYLINDER

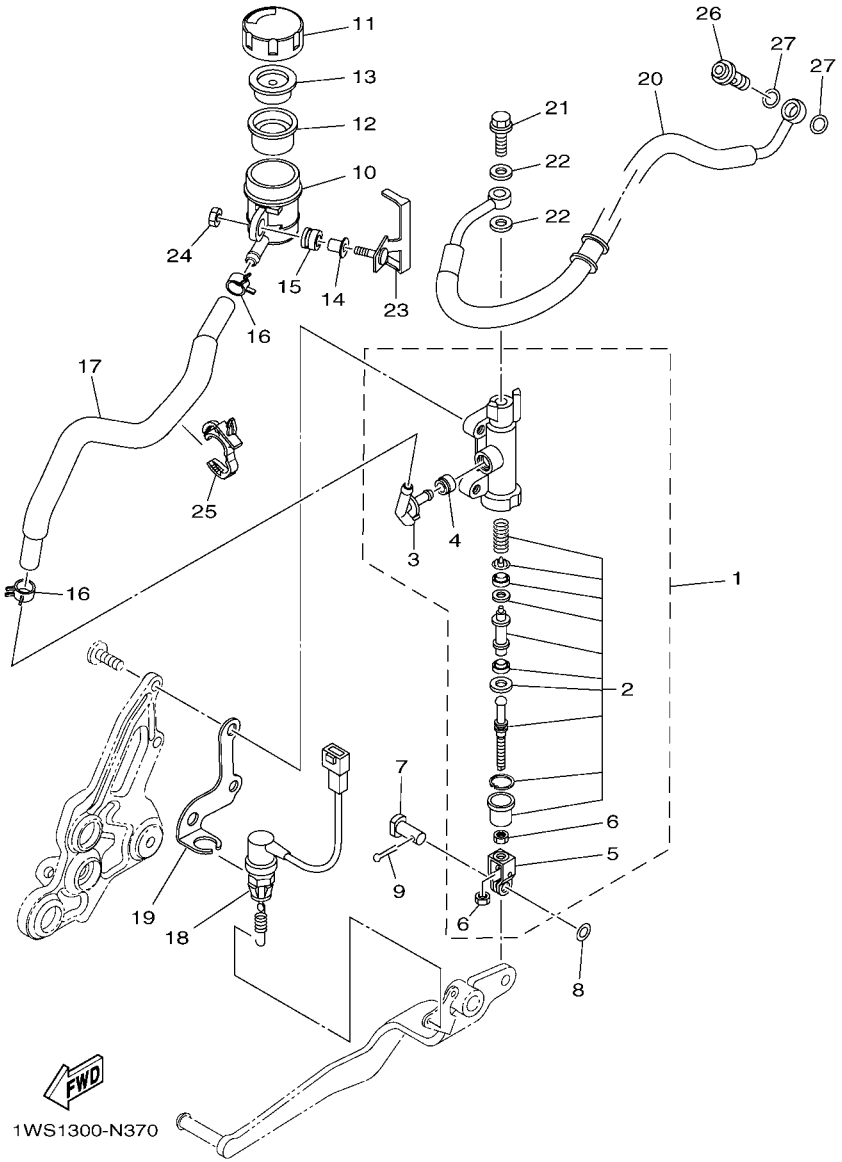


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 2D1–2583V–00 | RR. MASTER CYLINDER ASSY. | 1 | | | | | |
| 2 | 5VX–W0042–51 | .CYLINDER KIT, MASTER | 1 | | | | | |
| 3 | 2D1–2582A–00 | .JOINT | 1 | | | | | |
| 4 | 4BP–2585F–01 | .O-RING | 1 | | | | | |
| 5 | 4BP–27222–02 | .JOINT | 1 | | | | | |
| 6 | 90170–08010 | .NUT | 2 | | | | | |
| 7 | 90240–08005 | PIN, CLEVIS | 1 | | | | | |
| 8 | 90201–08070 | WASHER, PLATE | 1 | | | | | |
| 9 | 91401–20012 | PIN, COTTER | 1 | | | | | |
| 10 | 14B–25894–00 | TANK, RESERVOIR | 1 | | | | | |
| 11 | 2C0–25852–00 | CAP, RESERVOIR | 1 | | | | | |
| 12 | 2VN–25854–00 | DIAPHRAGM, RESERVOIR | 1 | | | | | |
| 13 | 2VN–25855–00 | BUSH,DIAPHRAGM | 1 | | | | | |
| 14 | 90387–05028 | COLLAR | 1 | | | | | |
| 15 | 2C0–26326–00 | GROMMET | 1 | | | | | |
| 16 | 90467–11044 | CLIP | 2 | | | | | |
| 17 | 1WS–25895–00 | HOSE, RESERVOIR | 1 | | | | | |
| 18 | 1WS–82530–00 | STOP SWITCH ASSY | 1 | | | | | |
| 19 | 1WS–2144G–00 | STAY, STOP SWITCH | 1 | | | | | |
| 20 | 1WS–2581K–00 | HOSE, BRAKE 5 | 1 | | | | | |
| 21 | 90401–10020 | BOLT, UNION | 1 | | | | | |
| 22 | 90430–10005 | GASKET | 2 | | | | | |
| 23 | 1WS–2582E–00 | HOLDER, RESERVE TANK | 1 | | | | | |
| 24 | 95707–05500 | NUT, FLANGE | 1 | | | | | |
| 25 | 90464–17008 | CLAMP | 1 | | | | | |
| 26 | 90401–10020 | BOLT, UNION | 1 | | | | | |
| 27 | 90430–10005 | GASKET | 2 | | | | | |


## FIG. 38 GENERATOR

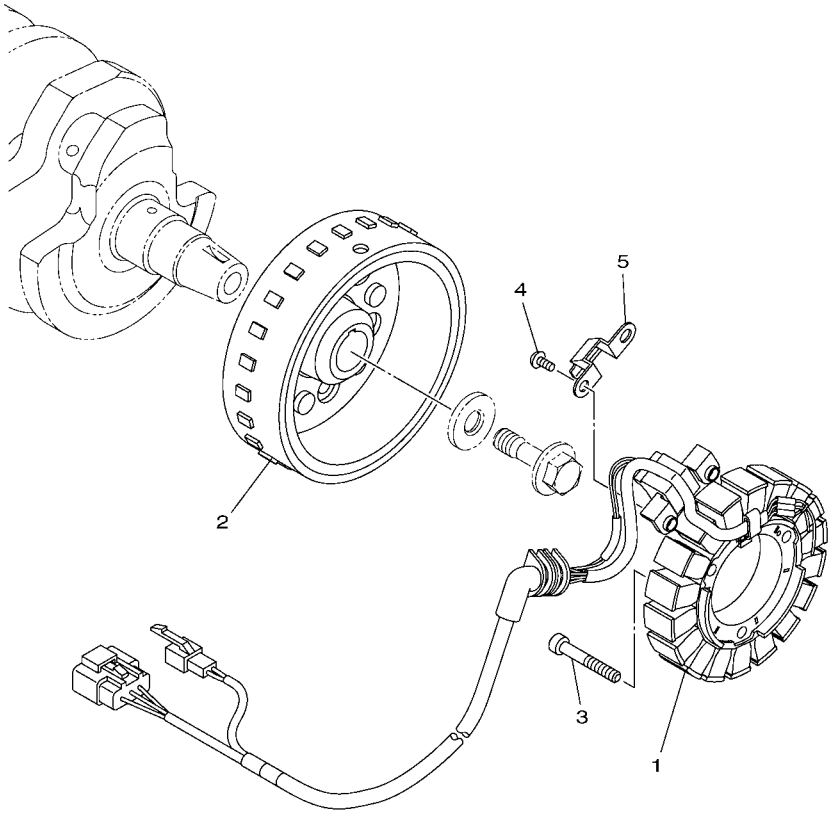



1WS1300-N380

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–81410–00 | STATOR ASSY | 1 | | | | | |
| 2 | 1WS–81450–00 | ROTOR ASSY | 1 | | | | | |
| 3 | 90110–06177 | BOLT, HEXAGON SOCKET HEAD | 3 | | | | | |
| 4 | 90149–06109 | SCREW | 2 | | | | | |
| 5 | 1WS–15484–00 | CLAMP 2 | 1 | | | | | |

## FIG. 39 STARTING MOTOR

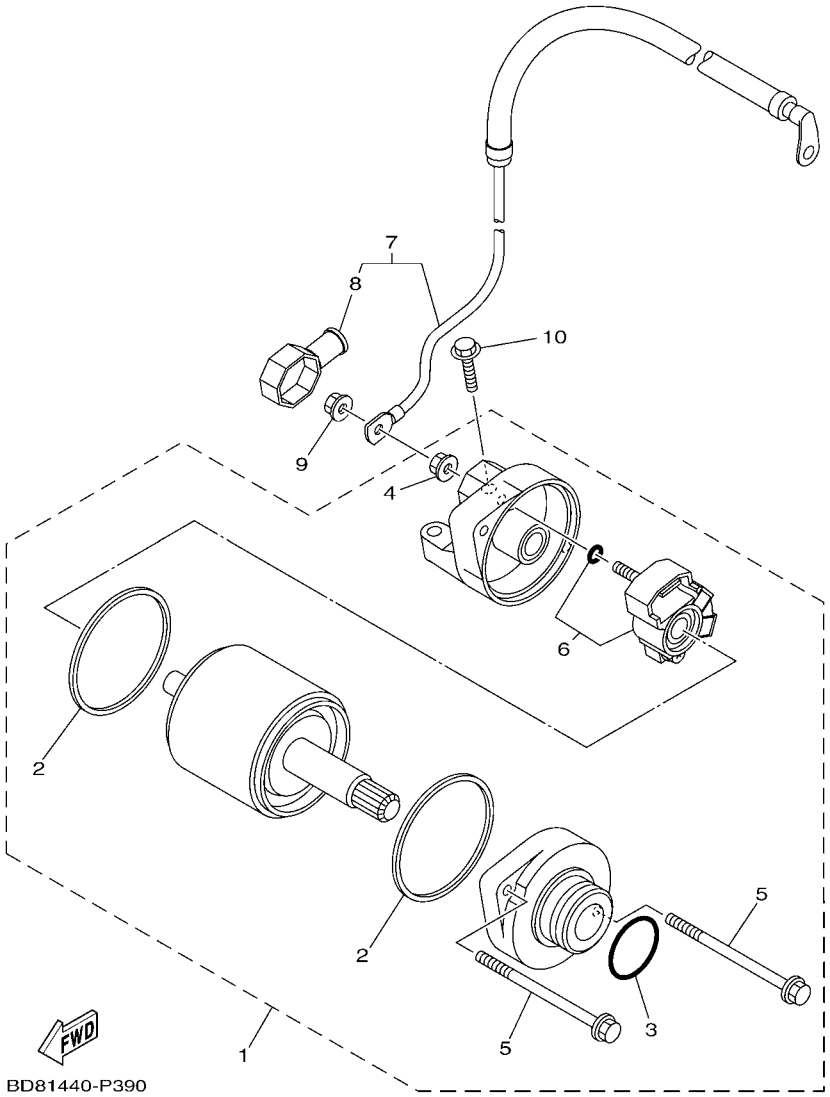



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–81890–00 | MOTOR ASSY | 1 | | | | | |
| 2 | 4B5–81844–00 | .GASKET | 2 | | | | | |
| 3 | 1FK–81847–00 | .O-RING | 1 | | | | | |
| 4 | 4XV–8182A–00 | .NUT | 1 | | | | | |
| 5 | 18P–81826–00 | .BOLT | 2 | | | | | |
| 6 | 18P–81801–00 | .BRUSH SET | 1 | | | | | |
| 7 | 1WS–81815–00 | CORD, STARTER MOTOR | 1 | | | | | |
| 8 | 4B5–81871–00 | .CAP | 1 | | | | | |
| 9 | 4XV–8182A–00 | NUT | 1 | | | | | |
| 10 | 91312–06025 | BOLT | 2 | | | | | |

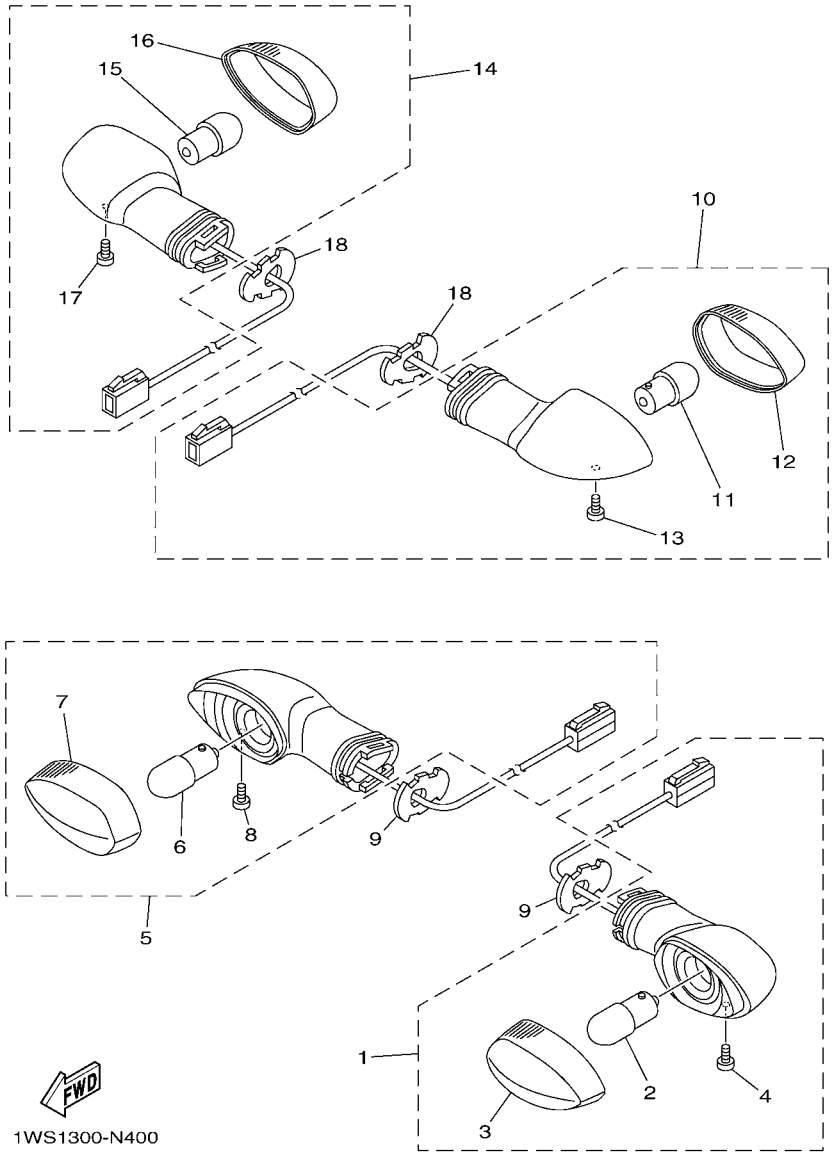


## FIG. 40 FLASHER LIGHT

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–83310–00 | FRONT FLASHER LIGHT ASSY 1 | 1 | | | | | |
| 2 | 1KB–83311–00 | .BULB, FLASHER (12V-10W) | 1 | | | | | |
| 3 | 1KB–8333A–00 | .LENS COMP 1 | 1 | | | | | |
| 4 | 3D9–H3333–10 | .SCREW, LENS FITTING | 1 | | | | | |
| 5 | 1WS–83320–00 | FRONT FLASHER LIGHT ASSY 2 | 1 | | | | | |
| 6 | 1KB–83311–00 | .BULB, FLASHER (12V-10W) | 1 | | | | | |
| 7 | 1KB–8334A–00 | .LENS COMP 2 | 1 | | | | | |
| 8 | 3D9–H3333–10 | .SCREW, LENS FITTING | 1 | | | | | |
| 9 | 3D7–83318–10 | STAY, FLASHER 1 | 2 | | | | | |
| 10 | 1WS–83330–00 | REAR FLASHER LIGHT ASSY 1 | 1 | | | | | |
| 11 | 1KB–83311–00 | .BULB, FLASHER (12V-10W) | 1 | | | | | |
| 12 | 1KB–8334A–00 | .LENS COMP 2 | 1 | | | | | |
| 13 | 3D9–H3333–10 | .SCREW, LENS FITTING | 1 | | | | | |
| 14 | 1WS–83340–00 | REAR FLASHER LIGHT ASSY 2 | 1 | | | | | |
| 15 | 1KB–83311–00 | .BULB, FLASHER (12V-10W) | 1 | | | | | |
| 16 | 1KB–8333A–00 | .LENS COMP 1 | 1 | | | | | |
| 17 | 3D9–H3333–10 | .SCREW, LENS FITTING | 1 | | | | | |
| 18 | 3D7–83318–10 | STAY, FLASHER 1 | 2 | | | | | |


## FIG. 41 METER

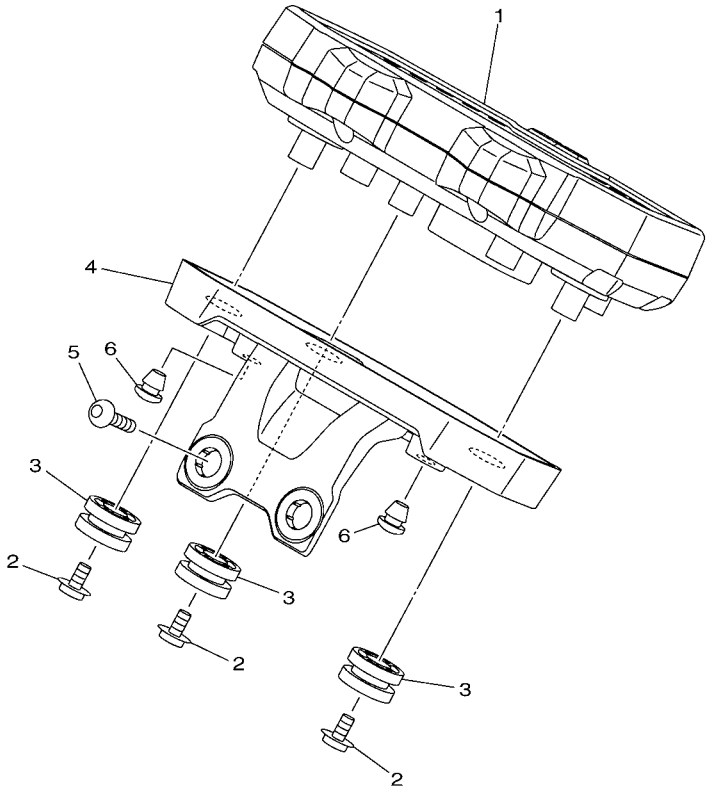


1WS1300-N410

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–83500–00 | METER ASSY | 1 | | | | | |
| 2 | 90164–05001 | SCREW, TAPPING | 3 | | | | | |
| 3 | 5PS–83513–00 | DAMPER | 3 | | | | | |
| 4 | 1WS–83559–00 | COVER, METER | 1 | | | | | |
| 5 | 90111–06095 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 6 | 90338–06018 | PLUG | 2 | | | | | |


## FIG. 42 HEADLIGHT

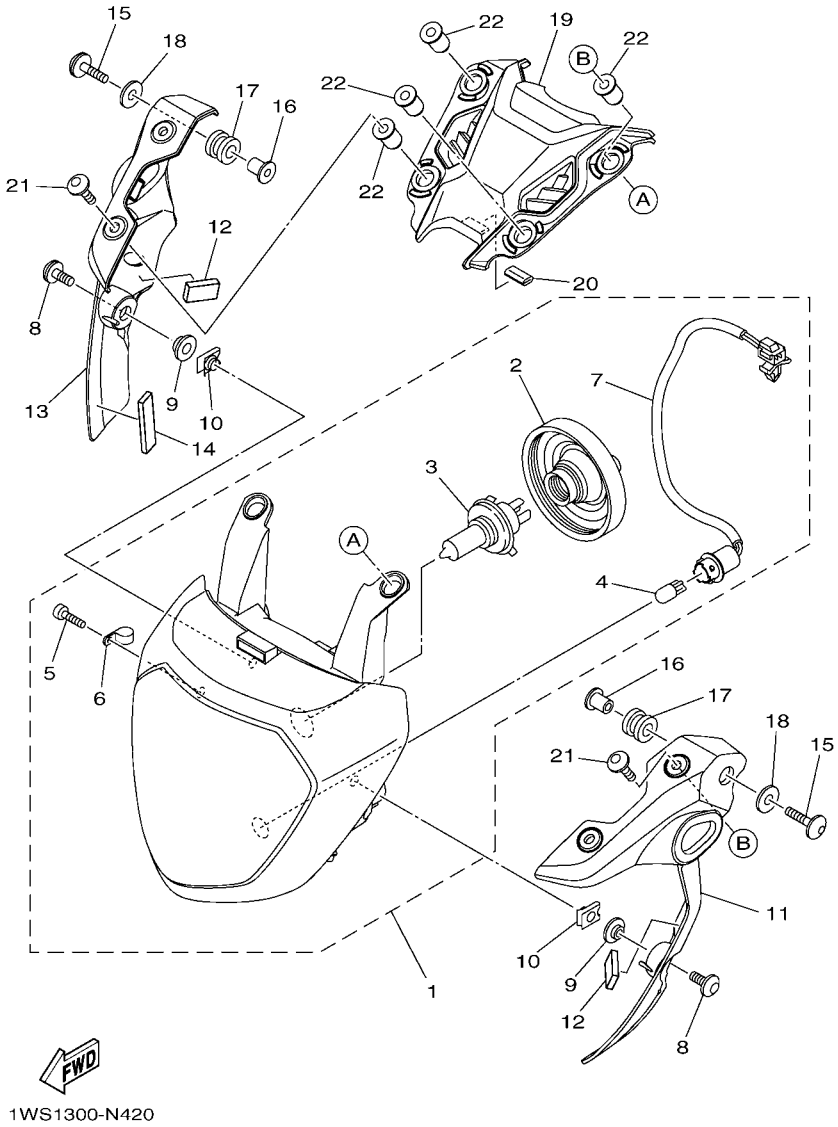


1WS1300-N420

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–84300–00 | HEADLIGHT ASSY | 1 | | | | | |
| 2 | 1RC–84397–00 | .COVER, SOCKET | 1 | | | | | |
| 3 | 1RC–84314–00 | .BULB, HEADLIGHT (12V-60/55W) | 1 | | | | | |
| 4 | 1RC–84347–00 | .BULB (12V-5W) | 1 | | | | | |
| 5 | 1WS–84526–00 | .SCREW | 1 | | | | | |
| 6 | 1WS–8454J–00 | .CLAMP, CORD | 1 | | | | | |
| 7 | 1WS–84359–00 | .CORD, HEADLIGHT | 1 | | | | | |
| 8 | 90111–06038 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 9 | 90387–06170 | COLLAR | 2 | | | | | |
| 10 | 90183–061A7 | NUT, SPRING | 2 | | | | | |
| 11 | 1WS–84118–00–P0 | STAY, HEADLIGHT 1 | 1 | | | | | MBL2 |
| 12 | 90520–05018 | DAMPER, PLATE | 2 | | | | | |
| 13 | 1WS–84119–00–P0 | STAY, HEADLIGHT 2 | 1 | | | | | MBL2 |
| 14 | 90520–05019 | DAMPER, PLATE | 1 | | | | | |
| 15 | 90111–06150 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 16 | 90387–06301 | COLLAR | 2 | | | | | |
| 17 | 90480–12015 | GROMMET | 2 | | | | | |
| 18 | 90201–06029 | WASHER, PLATE | 2 | | | | | |
| 19 | 1WS–84396–00 | COVER | 1 | | | | | |
| 20 | 1WS–28376–00 | TRIM | 1 | | | | | |
| 21 | 90149–06302 | SCREW | 4 | | | | | |
| 22 | 90179–06072 | NUT | 4 | | | | | |


## FIG. 43 TAILLIGHT

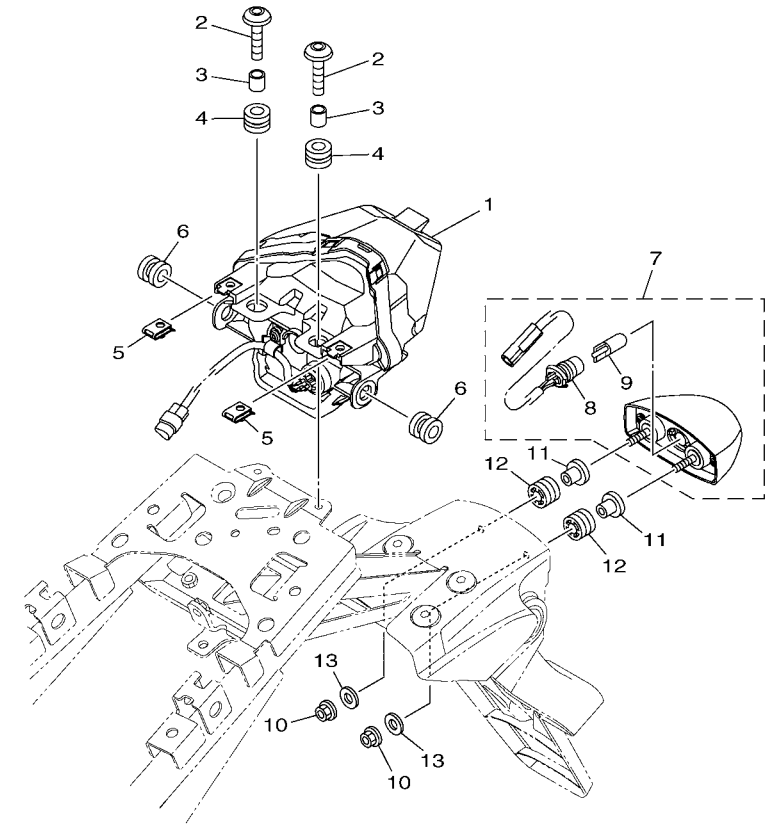


1WS1300-N430

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–84710–00 | TAILLIGHT UNIT ASSY | 1 | | | | | |
| 2 | 90111–06137 | BOLT,HEX. SOCKET BUTTON | 2 | | | | | |
| 3 | 90387–067V1 | COLLAR | 2 | | | | | |
| 4 | 90480–13001 | GROMMET | 2 | | | | | |
| 5 | 90183–05042 | NUT, SPRING | 2 | | | | | |
| 6 | 90480–10003 | GROMMET | 2 | | | | | |
| 7 | 1WS–84740–00 | LICENCE LIGHT ASSY | 1 | | | | | |
| 8 | 1WS–84547–00 | .CORD, LICENCE LIGHT | 1 | | | | | |
| 9 | 1TP–84347–00 | .BULB (12V-5W) | 1 | | | | | |
| 10 | 95602–05200 | NUT, SELF-LOCKING | 2 | | | | | |
| 11 | 90387–05042 | COLLAR | 2 | | | | | |
| 12 | 90480–12023 | GROMMET | 2 | | | | | |
| 13 | 90201–054K4 | WASHER, PLATE | 2 | | | | | |


## FIG. 44 HANDLE SWITCH & LEVER

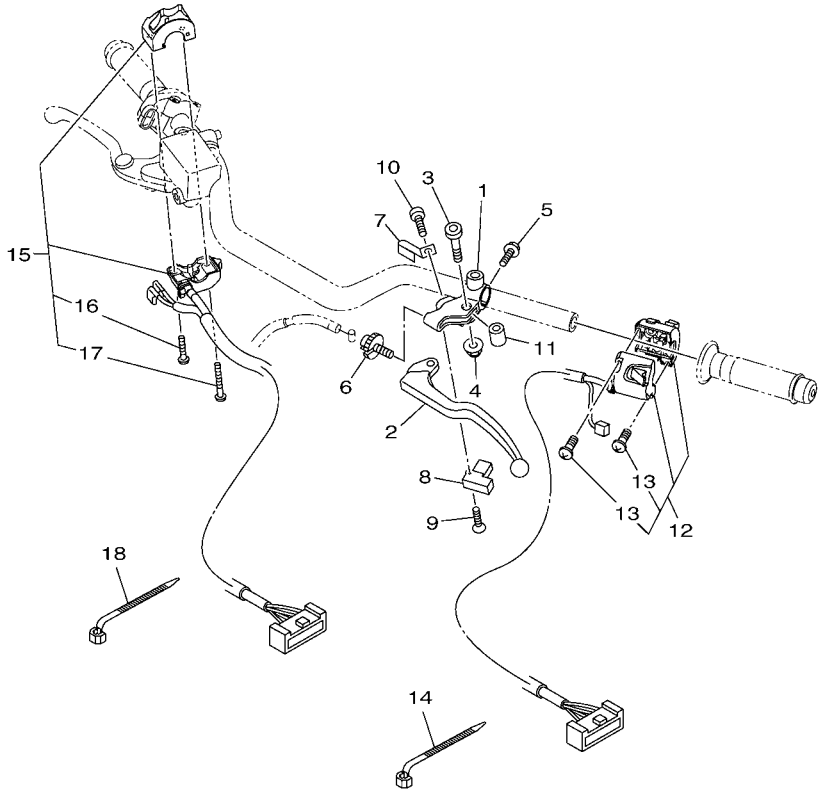



1WS1300-N440

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1B3–82911–00 | HOLDER, LEVER 1 | 1 | | | | | |
| 2 | 5EB–83912–03 | LEVER 1 | 1 | | | | | |
| 3 | 2C0–83945–00 | BOLT, LEVER | 1 | | | | | |
| 4 | 95607–06200 | NUT, SELF U-FLANGE | 1 | | | | | |
| 5 | 95027–06020 | BOLT, FLANGE | 1 | | | | | |
| 6 | 5LV–83951–00 | BOLT, CABLE ADJUSTING | 1 | | | | | |
| 7 | 4XV–83929–00 | PLATE, SPRING | 1 | | | | | |
| 8 | 3YX–82917–01 | SWITCH | 1 | | | | | |
| 9 | 98704–03020 | SCREW, FLAT HEAD | 1 | | | | | |
| 10 | 98507–04010 | SCREW, PAN HEAD | 1 | | | | | |
| 11 | 5JJ–83913–00 | COLLAR, LEVER 1 | 1 | | | | | |
| 12 | 1WS–83972–00 | SWITCH, HANDLE 4 | 1 | | | | | |
| 13 | 98507–04025 | .SCREW, PAN HEAD | 2 | | | | | |
| 14 | 90464–13073 | CLAMP | 1 | | | | | |
| 15 | 1WS–83975–00 | SWITCH, HANDLE 2 | 1 | | | | | |
| 16 | 98507–04020 | .SCREW, PAN HEAD | 1 | | | | | |
| 17 | 98507–04030 | .SCREW, PAN HEAD | 1 | | | | | |
| 18 | 90464–13073 | CLAMP | 1 | | | | | |

## FIG. 45 ELECTRICAL 1

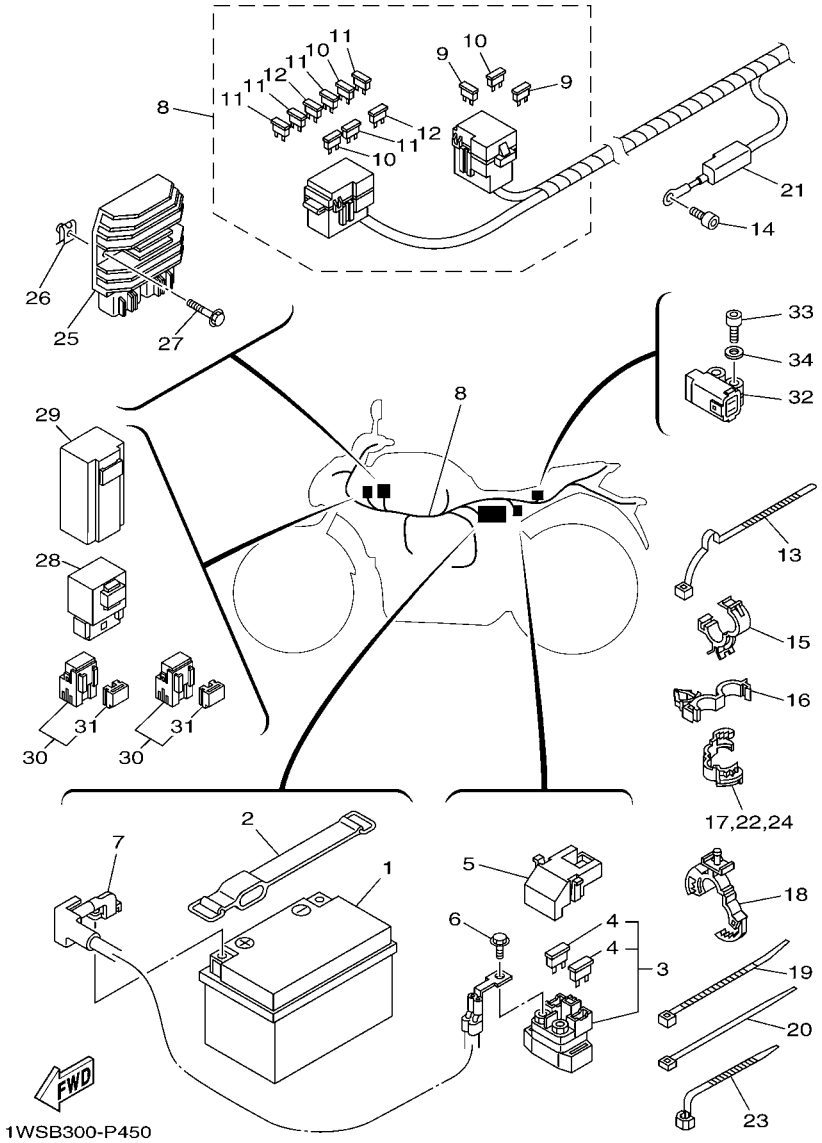



| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 5VY–82100–00 | BATTERY ASSY (YUASA YTZ10S) | 1 | | | | | |
| 2 | 1WS–82131–00 | BAND, BATTERY | 1 | | | | | |
| 3 | 1XC–81940–00 | STARTER RELAY ASSY (RC19-089B) | 1 | | | | | |
| 4 | 1AE–82151–00 | .FUSE (30A-BL) | 2 | | | | | |
| 5 | 5SL–82119–10 | COVER, LEAD WIRE | 1 | | | | | |
| 6 | 95022–06008 | BOLT, FLANGE | 2 | | | | | |
| 7 | 1WS–82115–01 | WIRE, PLUS LEAD | 1 | | | | | |
| 8 | 1WS–82590–01 | WIRE HARNESS ASSY | 1 | | | | | |
| 9 | 5JJ–82151–80 | .FUSE (2A-BL) | 2 | | | | | |
| 10 | 5JJ–82151–00 | .FUSE (7.5A-BL) | 3 | | | | | |
| 11 | 5JJ–82151–30 | .FUSE (10A-BL) | 5 | | | | | |
| 12 | 5JJ–82151–10 | .FUSE (15A-BL) | 2 | | | | | |
| 13 | 90464–07M40 | CLAMP | 1 | | | | | |
| 14 | 91380–06012 | BOLT | 1 | | | | | |
| 15 | 90464–20191 | CLAMP | 1 | | | | | |
| 16 | 90464–18007 | CLAMP | 1 | | | | | |
| 17 | 90464–14010 | CLAMP | 2 | | | | | |
| 18 | 90464–18011 | CLAMP | 1 | | | | | |
| 19 | 1UA–82591–00 | BAND | 2 | | | | | |
| 20 | 90464–65001 | CLAMP | 1 | | | | | |
| 21 | 1WS–81916–00 | COVER, TERMINAL | 1 | | | | | |
| 22 | 90464–14010 | CLAMP | 1 | | | | | |
| 23 | 90464–13073 | CLAMP | 1 | | | | | |
| 24 | 90464–14010 | CLAMP | 1 | | | | | |
| 25 | 27D–81960–00 | RECTIFIER & REGULATOR ASSY | 1 | | | | | |
| 26 | 90183–060A6 | NUT, SPRING | 2 | | | | | |
| 27 | 95022–06020 | BOLT, FLANGE | 2 | | | | | |

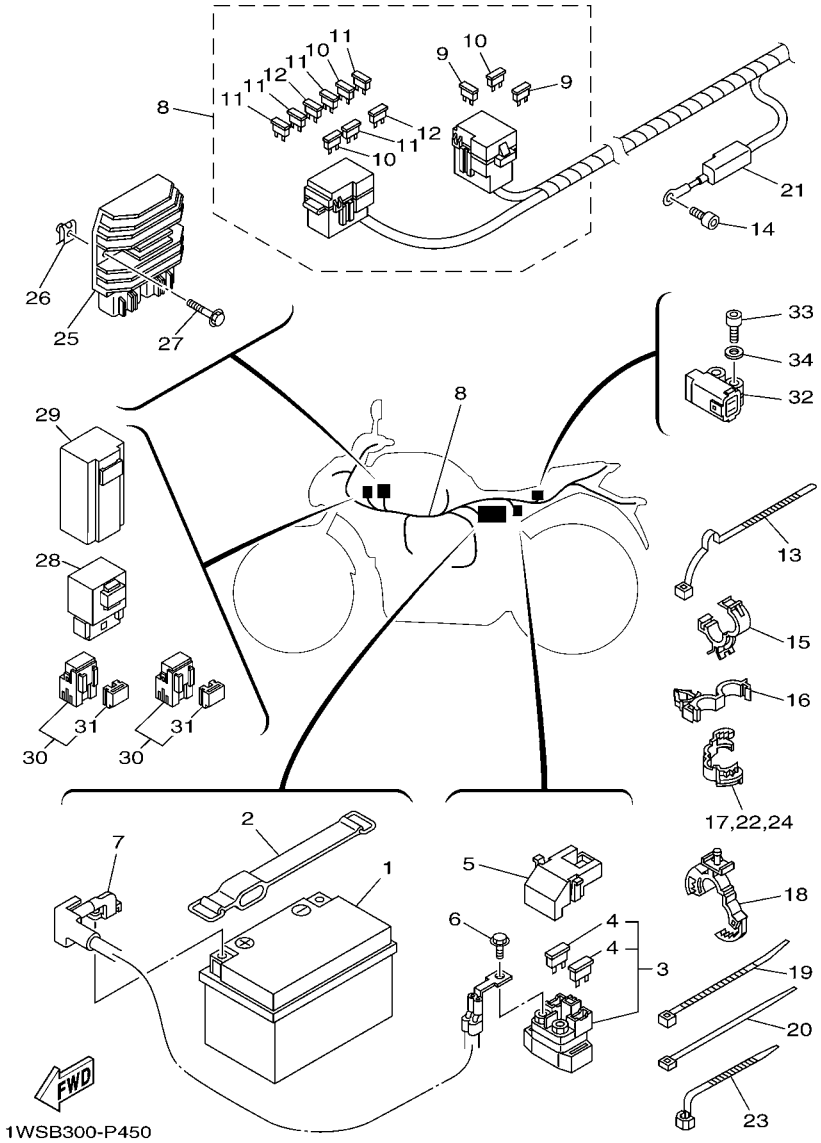


## FIG. 45 ELECTRICAL 1

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 5VK–81950–50 | RELAY ASSY (G8R-30Y-V5) | 1 | | | | | |
| 29 | 1WS–8246B–00 | COVER 1 | 1 | | | | | |
| 30 | 1TP–81950–00 | RELAY ASSY (1TP-00) | 2 | | | | | |
| 31 | 5EA–81952–00 | .HOLDER, RELAY | 1 | | | | | |
| 32 | 5PS–82576–01 | SENSOR, LEAN ANGLE | 1 | | | | | |
| 33 | 91312–04025 | BOLT | 2 | | | | | |
| 34 | 90201–04030 | WASHER, PLATE | 2 | | | | | |

## FIG. 46 ELECTRICAL 2

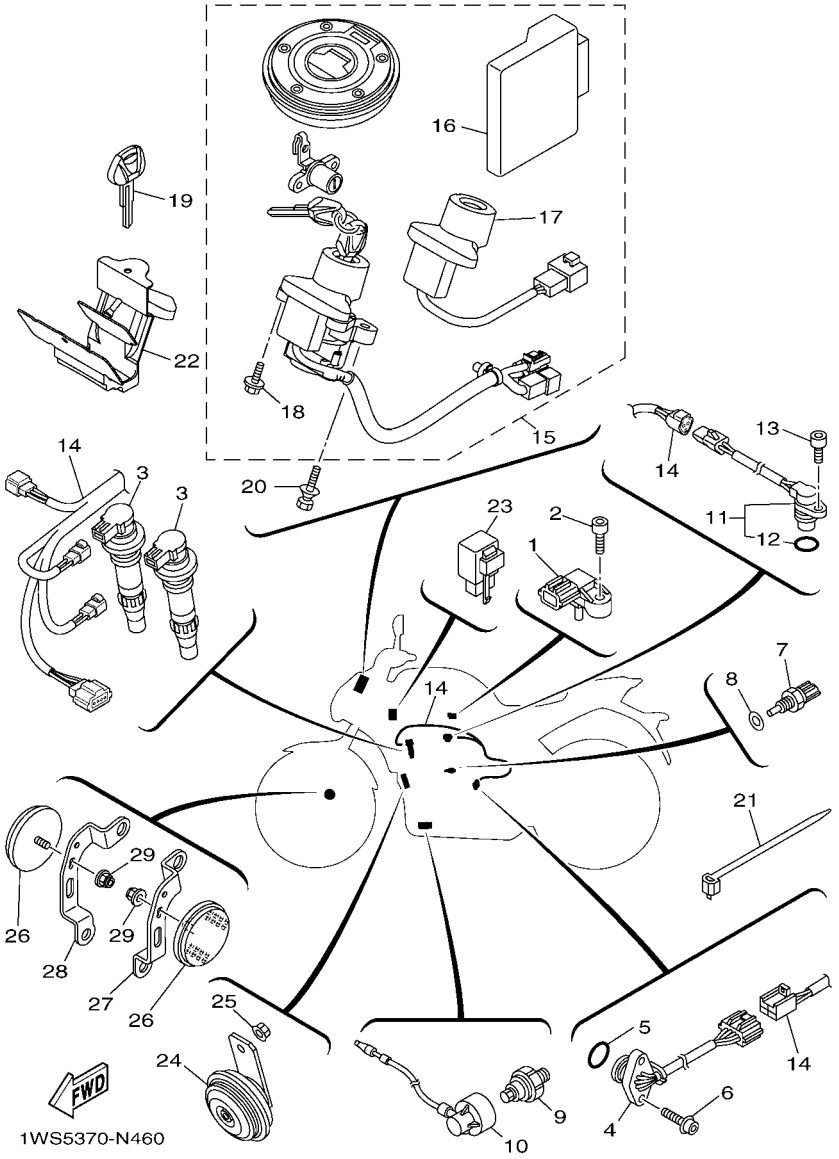


| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 1 | 1WS–82380–00 | SENSOR, PRESSURE | 1 | | | | | |
| 2 | 91312–05020 | BOLT | 1 | | | | | |
| 3 | 1WS–82310–00 | IGNITION COIL ASSY | 2 | | | | | |
| 4 | 1WS–82540–00 | NEUTRAL SWITCH ASSY | 1 | | | | | |
| 5 | 93210–21001 | O-RING | 1 | | | | | |
| 6 | 90110–05067 | BOLT, HEXAGON SOCKET HEAD | 2 | | | | | |
| 7 | 4P9–83591–00 | THERMO UNIT | 1 | | | | | |
| 8 | 90430–10004 | GASKET | 1 | | | | | |
| 9 | 1WS–82504–00 | OIL PRESSURE SWITCH ASSY | 1 | | | | | |
| 10 | 1WS–81315–00 | LEAD WIRE ASSY | 1 | | | | | |
| 11 | 1WS–83755–00 | SENSOR, SPEED | 1 | | | | | |
| 12 | 4D9–81168–00 | .O-RING | 1 | | | | | |
| 13 | 91312–06016 | BOLT | 1 | | | | | |
| 14 | 1WS–82309–00 | WIRE, SUB LEAD | 1 | | | | | |
| 15 | 1WS–W8250–00 | MAIN SW. IMMOBILIZER KIT | 1 | | | | | |
| 16 | 1WS–8591A–00 | .ENGINE CONTROL UNIT ASSY | 1 | | | | | |
| 17 | 1WS–8255P–00 | .IMMOBILIZER. UNIT COMP. | 1 | | | | | |
| 18 | 5SL–82113–01 | .SCREW | 2 | | | | | |
| 19 | 5SL–82511–08 | BLANK KEY | 1 | | | | | AP |
| 20 | 90109–08196 | BOLT | 2 | | | | | |
| 21 | 90465–13M24 | CLAMP | 1 | | | | | |
| 22 | 1WS–81662–00 | COVER, CONNECTER | 1 | | | | | |
| 23 | 3XV–83350–21 | FLASHER RELAY ASSY | 1 | | | | | |
| 24 | 1WS–83371–00 | HORN | 1 | | | | | |
| 25 | 95707–06500 | NUT, FLANGE | 1 | | | | | |
| 26 | 4AG–85111–00 | REFLECTOR, FRONT 1 | 2 | | | | | |
| 27 | 1WS–85112–00 | BRACKET, REFLECTOR 1 | 1 | | | | | |

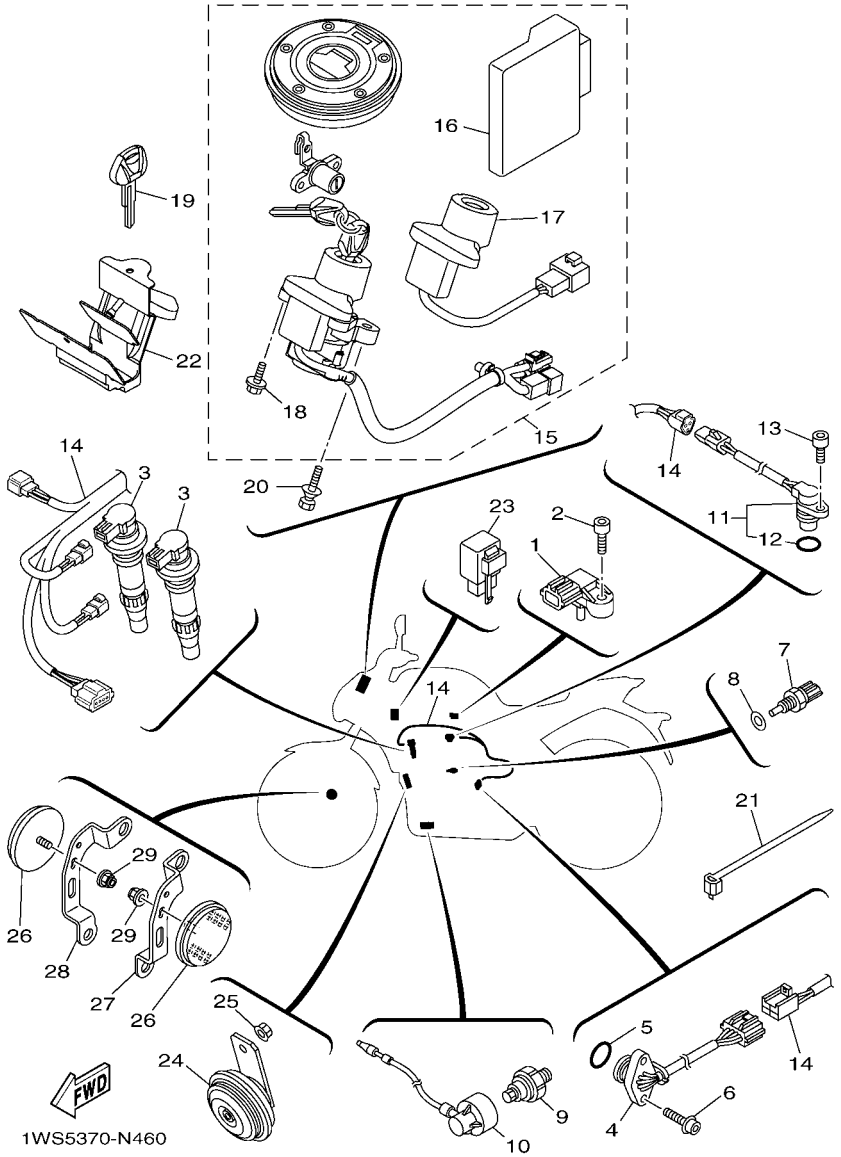



**FIG. 46 ELECTRICAL 2**

| REF. NO. | PART NO. | DESCRIPTION | BD81 | | | | | REMARKS |
|---|---|---|---|---|---|---|---|---|
| 28 | 1WS–85122–00 | BRACKET, REFLECTOR 2 | 1 | | | | | |
| 29 | 95702–06500 | NUT, FLANGE | 2 | | | | | |

| PART NO. | REF. NO. |
|---|---|
| 1WS–11101–09 | 1 – 1 |
| 5VY–1111G–00 | 1 – 11 |
| | 1 – 22 |
| 4D9–11133–10 | 1 – 2 |
| 1WS–11165–00 | 1 – 17 |
| 1WS–11166–00 | 9 – 31 |
| 1WS–11169–00 | 1 – 18 |
| 1WS–11181–00 | 1 – 14 |
| 1WS–11190–00 | 1 – 16 |
| 1WS–11193–01 | 1 – 20 |
| 214–11198–01 | 8 – 7 |
| 1WS–11400–00 | 2 – 1 |
| 2S3–11413–00 | 2 – 22 |
| 2S3–11413–10 | 2 – 22 |
| 2S3–11413–20 | 2 – 22 |
| 2S3–11413–30 | 2 – 22 |
| 2S3–11413–40 | 2 – 22 |
| 3GM–11416–00 | 2 – 5 |
| 3GM–11416–10 | 2 – 5 |
| 3GM–11416–20 | 2 – 5 |
| 3GM–11416–A0 | 2 – 5 |
| 3GM–11416–B0 | 2 – 5 |
| 1WS–11454–00 | 2 – 14 |
| 1WS–11496–00 | 2 – 15 |
| 1WS–11500–00 | 2 – 13 |
| 1WS–11531–00 | 2 – 16 |
| 1WS–11533–00 | 2 – 19 |
| 1WS–11603–00 | 2 – 7 |
| 1WS–11631–00 | 2 – 6 |
| 1WS–11633–00 | 2 – 8 |
| 1WS–11650–00 | 2 – 2 |
| 1RC–11654–00 | 2 – 3 |
| 1RC–11656–00 | 2 – 4 |
| 1RC–11656–10 | 2 – 4 |
| 1RC–11656–20 | 2 – 4 |
| 1RC–11656–30 | 2 – 4 |
| 1WS–12111–00 | 3 – 1 |
| 1WS–12113–01 | 3 – 3 |
| 1WS–12114–00 | 3 – 4 |
| 1WS–12116–00 | 3 – 8 |
| 1WS–12117–00 | 3 – 5 |
| 1WG–12118–00 | 3 – 6 |
| 4TE–12119–00 | 3 – 7 |
| 1WS–12121–00 | 3 – 2 |
| 4C8–12153–09 | 3 – 9 |
| 4C8–12153–10 | 3 – 9 |
| 1HX–12168–F0 | 3 – 10 |
| 1HX–12168–H1 | 3 – 10 |

| PART NO. | REF. NO. |
|---|---|
| 1HX–12168–K1 | 3 – 10 |
| 1HX–12168–M1 | 3 – 10 |
| 1HX–12168–R1 | 3 – 10 |
| 1HX–12168–U1 | 3 – 10 |
| 1HX–12168–W1 | 3 – 10 |
| 1HX–12168–Y1 | 3 – 10 |
| 1HX–12169–11 | 3 – 10 |
| 1HX–12169–31 | 3 – 10 |
| 1HX–12169–50 | 3 – 10 |
| 1HX–12169–70 | 3 – 10 |
| 1HX–12169–90 | 3 – 10 |
| 1HX–12169–E0 | 3 – 10 |
| 1HX–12169–G0 | 3 – 10 |
| 1HX–12169–J0 | 3 – 10 |
| 1HX–12169–L0 | 3 – 10 |
| 1HX–12169–N0 | 3 – 10 |
| 1HX–12169–T0 | 3 – 10 |
| 1WS–12170–00 | 4 – 1 |
| 2C0–12176–00 | 4 – 2 |
| 1WS–12180–00 | 4 – 4 |
| 1WS–12181–00 | 4 – 5 |
| 1WS–12210–02 | 4 – 13 |
| 1WS–12213–00 | 4 – 16 |
| 5SL–12214–00 | 4 – 15 |
| 5EL–12228–00 | 4 – 14 |
| 1WS–12247–00 | 4 – 9 |
| 1WS–12251–00 | 4 – 18 |
| 1WS–12252–00 | 4 – 19 |
| 1WS–12257–00 | 4 – 10 |
| 1WS–12280–00 | 4 – 7 |
| 1PD–12288–00 | 4 – 11 |
| 1WS–12405–00 | 6 – 2 |
| 1WS–12410–00 | 5 – 17 |
| 1WS–12413–00 | 5 – 18 |
| 1WS–12422–00 | 5 – 36 |
| 5VK–12438–00 | 5 – 33 |
| 1WS–12439–00 | 5 – 37 |
| 1WS–12450–00 | 5 – 31 |
| 1WS–12461–00 | 6 – 1 |
| 3D7–12462–00 | 6 – 8 |
| 1WS–12469–00 | 5 – 14 |
| 1WS–12481–00 | 5 – 1 |
| 1WS–12482–00 | 5 – 3 |
| 1WS–12576–00 | 5 – 9 |
| | 5 – 10 |
| 1WS–12578–00 | 6 – 10 |
| 1WS–12588–00 | 5 – 20 |
| 1WS–12589–00 | 5 – 22 |

| PART NO. | REF. NO. |
|---|---|
| 1WS–12671–00 | 6 – 3 |
| 5GJ–12675–00 | 6 – 4 |
| 5VY–13117–10 | 7 – 10 |
| 1WS–13300–00 | 7 – 1 |
| 1WS–13400–00 | 8 – 5 |
| 1WS–13410–00 | 7 – 7 |
| 1WS–13414–00 | 8 – 8 |
| 5GH–13440–50 | 8 – 4 |
| 1WS–13470–00 | 8 – 1 |
| 1XD–13475–00 | 8 – 2 |
| 1WS–13542–00 | 9 – 4 |
| 1WS–13545–00 | 9 – 27 |
| 1WS–13546–00 | 9 – 28 |
| 1WS–13547–00 | 9 – 29 |
| 8FP–13556–00 | 10 – 2 |
| 8GL–13571–00 | 10 – 12 |
| 8HG–13573–00 | 10 – 11 |
| 1WS–13635–00 | 9 – 1 |
| 1WS–13750–00 | 10 – 1 |
| 1WS–13761–00 | 10 – 3 |
| 1WS–13898–00 | 7 – 5 |
| 1WS–13907–00 | 26 – 14 |
| 1WS–13938–00 | 10 – 10 |
| 1WS–13971–00 | 26 – 21 |
| 2C0–14105–00 | 10 – 16 |
| 5PS–1410H–00 | 9 – 22 |
| 5PS–14147–00 | 10 – 4 |
| 8CC–14216–10 | 10 – 14 |
| 54P–14243–00 | 10 – 9 |
| 1WS–14335–00 | 10 – 7 |
| 1WS–14401–00 | 9 – 5 |
| 1WS–14430–00 | 9 – 11 |
| 1WS–14437–00 | 9 – 12 |
| 1WS–1443E–00 | 9 – 15 |
| 1WS–14450–00 | 9 – 6 |
| 1WS–14452–00 | 9 – 7 |
| 1WS–14469–00 | 9 – 8 |
| 1WS–1446C–00 | 9 – 9 |
| 5PS–1446E–00 | 9 – 25 |
| 8HG–14534–00 | 10 – 13 |
| 3D7–14545–00 | 9 – 13 |
| 5PS–14552–00 | 9 – 24 |
| 4XY–14568–00 | 6 – 19 |
| 3YF–14613–01 | 11 – 5 |
| 1WS–14708–00 | 11 – 2 |
| 1WS–14710–00 | 11 – 1 |
| 1WS–15100–09 | 12 – 1 |
| 1WS–15128–00 | 12 – 23 |

| PART NO. | REF. NO. |
|---|---|
| 5EB–15155–00 | 12 – 2 |
| 1WS–15156–00 | 12 – 13 |
| 1WS–15189–00 | 12 – 10 |
| 36Y–15189–00 | 12 – 8 |
| 3KJ–15337–00 | 19 – 27 |
| 2H7–15361–00 | 12 – 7 |
| 3F9–15362–10 | 13 – 19 |
| 1WS–15377–00 | 13 – 11 |
| 1WS–15411–00 | 13 – 1 |
| 1WS–15416–00 | 12 – 20 |
| 1WS–15418–00 | 13 – 10 |
| 1WS–15421–00 | 5 – 24 |
| 1WS–15441–00 | 13 – 17 |
| 1WS–15451–00 | 13 – 6 |
| 1WS–15456–00 | 12 – 21 |
| 1WS–15461–00 | 13 – 13 |
| 1WS–15484–00 | 38 – 5 |
| 1WS–15512–00 | 14 – 5 |
| 1WS–15515–00 | 14 – 1 |
| 23P–15521–00 | 14 – 4 |
| 1WS–15560–00 | 14 – 6 |
| 1WS–15590–00 | 14 – 2 |
| 1WS–16150–00 | 15 – 1 |
| 363–16154–00 | 15 – 2 |
| | 15 – 13 |
| 1WS–16181–00 | 15 – 11 |
| 5TG–16321–00 | 15 – 6 |
| 5VY–16321–00 | 15 – 4 |
| 5VY–16325–00 | 15 – 5 |
| 1WS–16340–00 | 15 – 18 |
| 132–16346–00 | 18 – 2 |
| 1WS–16350–00 | 15 – 7 |
| 1WS–16356–00 | 15 – 17 |
| 1WS–16371–00 | 15 – 3 |
| 2D1–16382–00 | 5 – 25 |
| 1WS–17121–00 | 16 – 13 |
| 1WS–17131–00 | 16 – 6 |
| 1WS–17151–00 | 16 – 2 |
| 1WS–17161–00 | 16 – 9 |
| 1WS–17211–00 | 16 – 38 |
| 1WS–17221–00 | 16 – 22 |
| 1WS–17231–00 | 16 – 33 |
| 1WS–17241–00 | 16 – 29 |
| 1WS–17251–00 | 16 – 37 |
| 1WS–17261–00 | 16 – 26 |
| 1WS–17401–00 | 16 – 1 |
| 1WS–17421–00 | 16 – 17 |
| 1WS–17446–00 | 16 – 15 |

| PART NO. | REF. NO. |
|---|---|
| 1WS–17460–00 | 16 – 40 |
| 1WS–18101–00 | 18 – 4 |
| 1WS–18110–00 | 35 – 32 |
| 1WS–18112–00 | 18 – 14 |
| 1WS–18113–00 | 35 – 33 |
| | 36 – 18 |
| 5A8–18115–00 | 35 – 38 |
| 5VX–18116–00 | 35 – 28 |
| 1D7–18127–00 | 18 – 3 |
| 1WS–18140–00 | 18 – 7 |
| 5VX–18154–00 | 35 – 29 |
| 2C0–18175–00 | 18 – 6 |
| 1WS–18511–00 | 17 – 4 |
| 1WS–18512–00 | 17 – 5 |
| 1WS–18513–00 | 17 – 6 |
| 20S–18535–00 | 17 – 7 |
| 1WS–18536–00 | 17 – 8 |
| 1WS–18540–00 | 17 – 1 |
| 3D7–18542–00 | 17 – 2 |
| 1WS–21110–10 | 19 – 1 |
| 1WS–21110–30 | 19 – 1 |
| 1WS–2112B–01 | 19 – 16 |
| 1WS–21131–00 | 28 – 8 |
| 1WS–21158–00 | 19 – 24 |
| 23P–2117K–00 | 28 – 18 |
| 1WS–2117N–00 | 19 – 18 |
| 1WS–2117R–00 | 19 – 39 |
| 1WS–2117T–00 | 19 – 41 |
| 1WS–21315–00 | 19 – 9 |
| 1WS–21316–00 | 19 – 10 |
| 4XV–21376–00 | 19 – 32 |
| 1WS–2137W–00 | 27 – 5 |
| 1WS–2137X–00 | 27 – 25 |
| 2S3–21398–00 | 28 – 25 |
| 20S–21445–01 | 11 – 7 |
| 1WS–2144G–00 | 37 – 19 |
| 1WS–21511–00 | 20 – 1 |
| 1WS–21512–10 | 20 – 9 |
| 1WS–21513–00–P2 | 20 – 12 |
| 1WS–21513–00–P3 | 20 – 12 |
| 1WS–21514–00–P2 | 20 – 15 |
| 1WS–21514–00–P3 | 20 – 15 |
| 1XC–21568–00 | 27 – 57 |
| 1WS–21612–10 | 20 – 10 |
| 1WS–2161G–00 | 20 – 35 |
| 1WS–2161J–00 | 19 – 35 |
| 1WS–21629–00 | 20 – 28 |
| 1WS–21639–00 | 20 – 19 |

| PART NO. | REF. NO. |
|---|---|
| 1WS–2163A–00 | 20 – 37 |
| 1WS–21642–00 | 20 – 26 |
| 1WS–2164F–00 | 20 – 31 |
| 1WS–2164G–00 | 20 – 32 |
| 1WS–21650–00 | 22 – 25 |
| 1WS–21651–00 | 21 – 29 |
| 1TP–21668–00 | 22 – 33 |
| 1WS–21682–00 | 20 – 33 |
| 1WS–21711–00–P0 | 21 – 1 |
| 1WS–2171A–00–P3 | 27 – 40 |
| 1WS–2171A–00–P5 | 27 – 40 |
| 1WS–2171E–00–P0 | 21 – 19 |
| 1WS–2171J–00 | 21 – 25 |
| 1WS–2171K–00 | 21 – 27 |
| 1WS–2171X–00–P0 | 21 – 21 |
| 1WS–21721–00–P0 | 21 – 10 |
| 1WS–2172W–00 | 6 – 20 |
| 1WS–21731–00 | 6 – 28 |
| 1WS–21741–00 | 6 – 29 |
| 1WS–21746–00 | 20 – 34 |
| 1WS–2175U–00 | 19 – 37 |
| 1WS–21781–30 | 21 – 31 |
| 1WS–21781–50 | 21 – 31 |
| 1WS–21782–30 | 21 – 32 |
| 1WS–21782–50 | 21 – 32 |
| 1WS–21816–00 | 6 – 18 |
| 26H–21828–00 | 6 – 14 |
| 1WS–21871–00 | 6 – 13 |
| 3P6–21875–00 | 6 – 16 |
| 1WS–2191B–00 | 19 – 2 |
| 1WS–21946–01 | 19 – 15 |
| 1WS–22110–00 | 22 – 1 |
| 4FN–22141–00 | 31 – 27 |
| 1UY–22141–10 | 22 – 7 |
| 1WS–22151–00 | 22 – 24 |
| 1WS–22174–00 | 31 – 23 |
| 1WS–22175–00 | 31 – 24 |
| 1WS–2217A–00 | 22 – 10 |
| 1WS–2217F–00 | 22 – 18 |
| 1WS–22184–00 | 22 – 23 |
| 1WS–22189–00 | 22 – 17 |
| 30X–2219X–00 | 22 – 4 |
| 1WS–22210–00 | 23 – 1 |
| 1WS–22210–90 | 23 – 1 |
| 1WS–23102–09 | 25 – 21 |
| 1WS–23103–09 | 25 – 1 |
| 1WS–23110–00 | 25 – 3 |
| | 25 – 23 |

| PART NO. | REF. NO. |
|---|---|
| 1D0–23111–00 | 25 – 17 |
| | 25 – 37 |
| 3FW–23118–00 | 25 – 16 |
| | 25 – 36 |
| 1WS–23121–00 | 24 – 19 |
| 4KM–23123–01 | 25 – 44 |
| 4FM–23125–40 | 25 – 9 |
| | 25 – 29 |
| 1WS–23126–00 | 25 – 22 |
| 1WS–23131–00 | 24 – 21 |
| 1WS–23136–00 | 25 – 2 |
| 1WS–23141–00 | 25 – 14 |
| | 25 – 34 |
| 4EB–23144–00 | 25 – 5 |
| | 25 – 25 |
| 4EB–23145–01 | 25 – 7 |
| | 25 – 27 |
| 36Y–23146–10 | 25 – 8 |
| | 25 – 28 |
| 3EN–23149–50 | 25 – 15 |
| | 25 – 35 |
| 26H–23156–00 | 25 – 6 |
| | 25 – 26 |
| 509–23158–L0 | 25 – 12 |
| | 25 – 32 |
| 1WS–23170–00 | 25 – 10 |
| | 25 – 30 |
| 5BN–23171–00 | 25 – 4 |
| | 25 – 24 |
| 4YR–23173–00 | 25 – 11 |
| | 25 – 31 |
| 278–23181–50 | 25 – 13 |
| | 25 – 33 |
| 43F–23188–10 | 25 – 18 |
| | 25 – 38 |
| 1WS–2318U–00 | 24 – 20 |
| 1WS–2331G–00 | 25 – 20 |
| | 25 – 39 |
| 1WS–23340–00 | 25 – 40 |
| 1WS–2334G–00 | 24 – 14 |
| 1WS–2334H–00 | 24 – 24 |
| 1WS–23357–00 | 24 – 3 |
| 1W1–23416–00 | 24 – 2 |
| 1WS–23430–00 | 24 – 4 |
| 1E6–23441–10–P0 | 24 – 12 |
| 1WS–23442–00–P0 | 24 – 8 |
| 3FV–23462–00 | 25 – 41 |
| 1WS–24110–00 | 26 – 1 |
| 1WS–24129–00–P3 | 27 – 1 |
| 1WS–24129–00–P5 | 27 – 1 |
| 1WS–2412Y–00 | 26 – 2 |
| 1WS–24135–00 | 26 – 26 |
| 1WS–24139–00–P3 | 27 – 21 |
| 1WS–24139–00–P5 | 27 – 21 |
| 1RC–2413B–00 | 27 – 59 |
| | 27 – 60 |
| 1WS–2413Y–00 | 26 – 9 |
| 3HA–24141–00 | 19 – 45 |
| 1WS–2414H–00 | 26 – 31 |
| 1WS–2414J–00 | 26 – 32 |
| 1WS–2414P–00 | 27 – 4 |
| 1WS–2414R–00 | 27 – 24 |
| 3D7–24188–00 | 26 – 34 |
| 1WS–2419A–00 | 35 – 13 |
| 1WS–2419F–00 | 26 – 28 |
| 1WS–2424A–00 | 27 – 64 |
| 1WS–2424B–00 | 27 – 65 |
| 1WS–24312–00 | 26 – 24 |
| 1WS–24318–00 | 26 – 22 |
| 3D7–24339–00 | 26 – 3 |
| 1RC–24486–00 | 26 – 16 |
| 1WS–24491–00 | 26 – 15 |
| 1WS–24602–00 | 26 – 18 |
| 1WS–2463E–00 | 27 – 55 |
| 1WS–2464E–00 | 27 – 45 |
| 1WS–2470F–00 | 28 – 2 |
| 1WS–24710–00 | 28 – 1 |
| 3UF–24737–00 | 19 – 26 |
| 1WS–24750–00 | 28 – 12 |
| 1WS–24780–00 | 28 – 14 |
| 1WS–2478E–00 | 28 – 16 |
| 2PP–25117–00 | 29 – 2 |
| 1WS–25168–00–1X | 29 – 1 |
| 3MA–25181–10 | 29 – 9 |
| 2PP–25317–00 | 31 – 5 |
| 1RC–25338–00–2X | 31 – 1 |
| 5SL–25364–00 | 31 – 6 |
| 5JJ–25366–00 | 31 – 10 |
| 1WS–2537W–00 | 31 – 17 |
| 1RC–25383–00 | 31 – 12 |
| 1WS–25388–00 | 31 – 22 |
| 1WS–2538D–00 | 31 – 30 |
| 1WS–2538N–00 | 31 – 31 |
| 5MT–25398–00 | 29 – 7 |
| | 31 – 9 |
| 5MT–25398–10 | 29 – 7 |
| 5MT–25398–10 | 31 – 9 |
| 5MT–25398–20 | 29 – 7 |
| | 31 – 9 |
| 1WS–25443–00 | 31 – 14 |
| 4SV–25802–00 | 30 – 6 |
| | 30 – 18 |
| 5SL–25802–00 | 32 – 4 |
| 4SV–25802–10 | 30 – 4 |
| | 30 – 16 |
| 5SL–25803–00 | 32 – 5 |
| 3GM–25803–10 | 30 – 5 |
| | 30 – 17 |
| 3MA–25803–10 | 30 – 7 |
| | 30 – 19 |
| 1WS–25805–00 | 30 – 8 |
| | 30 – 20 |
| 5VX–25806–00 | 32 – 12 |
| 1WS–25807–00 | 34 – 2 |
| 1WS–2580A–00 | 34 – 1 |
| 1WS–2580T–00 | 30 – 3 |
| 1WS–2580U–00 | 30 – 15 |
| 1RC–2580W–00 | 32 – 3 |
| 1WS–2581K–00 | 37 – 20 |
| 1WS–2581T–00 | 30 – 1 |
| 1J3–25824–00 | 30 – 12 |
| | 30 – 24 |
| 1UY–25824–51 | 32 – 16 |
| 306–25825–01 | 30 – 13 |
| | 30 – 25 |
| 1UY–25825–51 | 32 – 17 |
| 5SL–25827–00 | 32 – 18 |
| 5SL–25827–10 | 32 – 19 |
| 5SL–25828–01 | 32 – 20 |
| 2D1–2582A–00 | 37 – 3 |
| 1WS–2582E–00 | 37 – 23 |
| 1WS–2582W–00 | 32 – 1 |
| 5SL–25838–00 | 32 – 7 |
| 2D1–2583V–00 | 37 – 1 |
| 2C0–25852–00 | 37 – 11 |
| 5VS–25852–00 | 34 – 3 |
| 20S–25854–00 | 34 – 5 |
| 2VN–25854–00 | 37 – 12 |
| 2VN–25855–00 | 37 – 13 |
| 5VS–25855–00 | 34 – 4 |
| 4BP–2585F–01 | 37 – 4 |
| 5VS–25867–00 | 34 – 11 |
| 1WS–25872–00 | 34 – 16 |
| 1WS–25873–00 | 34 – 17 |
| 1WS–25875–00 | 34 – 21 |
| 1WS–25876–00 | 34 – 23 |
| 1WS–2587A–00 | 34 – 22 |
| 1WS–25886–00 | 34 – 24 |
| 1WS–25887–00 | 22 – 29 |
| 1WS–2588F–00 | 22 – 30 |
| 14B–25894–00 | 37 – 10 |
| 1WS–25895–00 | 37 – 17 |
| 5VS–2589F–00 | 34 – 7 |
| 5VS–2589H–00 | 34 – 6 |
| 5SL–25914–00 | 32 – 9 |
| 5DH–25916–00 | 32 – 14 |
| 3JD–25917–00 | 32 – 11 |
| 5SL–25917–00 | 32 – 6 |
| 13S–25919–00 | 30 – 9 |
| | 30 – 21 |
| 5SL–25919–00 | 32 – 8 |
| 1RC–25921–50 | 32 – 10 |
| 4SV–25924–00 | 30 – 10 |
| | 30 – 22 |
| 8CR–25924–00 | 32 – 13 |
| 3GM–25925–00 | 30 – 11 |
| | 30 – 23 |
| 1RC–25926–00 | 32 – 15 |
| 1WS–26111–00 | 33 – 1 |
| 1WS–2612E–00 | 33 – 12 |
| 23P–26133–00 | 33 – 15 |
| | 33 – 17 |
| 1WS–26240–00 | 33 – 3 |
| 4YR–26241–02 | 33 – 2 |
| 5RU–26246–00 | 33 – 4 |
| 39P–2627E–00 | 33 – 7 |
| 1RC–26280–00 | 33 – 14 |
| 1WS–26281–00 | 33 – 8 |
| 1WS–26282–00 | 33 – 9 |
| 1RC–26290–00 | 33 – 16 |
| 1WS–26296–00 | 34 – 26 |
| 1WS–26301–00 | 33 – 5 |
| 2C0–26326–00 | 37 – 15 |
| 5VS–26332–00 | 34 – 10 |
| 1WS–26335–00 | 33 – 11 |
| 157–27114–00 | 28 – 10 |
| 1D7–27114–00 | 28 – 4 |
| 278–27114–00 | 28 – 13 |
| 371–27114–00 | 28 – 3 |
| 5RU–27114–00 | 28 – 9 |
| 5VX–27114–00 | 35 – 27 |
| | 36 – 14 |
| 1WS–27211–00 | 36 – 17 |
| 4BP–27222–02 | 37 – 5 |
| 1WS–27311–00 | 35 – 3 |
| 5VX–27315–00 | 35 – 11 |
| 1WS–27321–00 | 35 – 16 |
| 5VX–27351–00 | 35 – 10 |
| 3YX–27413–00 | 35 – 22 |
| | 36 – 9 |
| 36Y–27414–00 | 35 – 26 |
| | 36 – 13 |
| 1HX–27415–00 | 19 – 28 |
| | 19 – 40 |
| | 19 – 42 |
| 1WS–2741L–01 | 35 – 54 |
| 1WS–27425–00 | 35 – 49 |
| | 36 – 30 |
| 1WS–2742L–01 | 36 – 35 |
| 3VR–27431–01 | 35 – 53 |
| 4BP–27434–01 | 35 – 36 |
| | 36 – 20 |
| 5VX–27437–00 | 35 – 57 |
| | 36 – 38 |
| 3VR–27441–01 | 36 – 34 |
| 1WS–27442–00 | 35 – 25 |
| 1WS–27443–00 | 36 – 12 |
| 1WS–27445–00 | 35 – 30 |
| 1WS–27446–00 | 36 – 15 |
| 1WS–27451–00 | 35 – 18 |
| 1WS–27453–00 | 35 – 45 |
| 1WS–27461–00 | 36 – 5 |
| 1WS–27463–00 | 36 – 26 |
| 1WS–27475–00–P0 | 35 – 52 |
| | 36 – 33 |
| 1WS–274A3–00 | 35 – 1 |
| 1WS–274A4–00 | 36 – 1 |
| 1WS–28100–00 | 28 – 24 |
| 2H7–28151–00 | 28 – 21 |
| 137–28152–00 | 28 – 22 |
| 14B–28164–00 | 28 – 20 |
| 23P–28164–00 | 28 – 23 |
| 2S3–2817K–10 | 27 – 58 |
| 4KG–28186–10 | 28 – 26 |
| 1WS–28219–00 | 27 – 43 |
| 1WS–28328–00 | 27 – 63 |
| 1WS–2834E–00 | 21 – 2 |
| 1WS–2834F–00 | 21 – 11 |
| 1WS–2836K–00 | 27 – 8 |
| 1WS–2836L–00 | 27 – 28 |
| 5DM–28371–00 | 19 – 29 |
| 1WS–28376–00 | 42 – 20 |
| 1WS–2837N–00 | 27 – 11 |
| 1WS–2837R–00 | 27 – 30 |
| 4D9–81168–00 | 46 – 12 |
| 1WS–81315–00 | 46 – 10 |
| 1WS–81410–00 | 38 – 1 |
| 1WS–81450–00 | 38 – 2 |
| 1WS–81662–00 | 46 – 22 |
| 18P–81801–00 | 39 – 6 |
| 1WS–81815–00 | 39 – 7 |
| 18P–81826–00 | 39 – 5 |
| 4XV–8182A–00 | 39 – 4 |
| | 39 – 9 |
| 4B5–81844–00 | 39 – 2 |
| 1FK–81847–00 | 39 – 3 |
| 4B5–81871–00 | 39 – 8 |
| 1WS–81890–00 | 39 – 1 |
| 1WS–81916–00 | 45 – 21 |
| 1XC–81940–00 | 45 – 3 |
| 1TP–81950–00 | 45 – 30 |
| 5VK–81950–50 | 45 – 28 |
| 5EA–81952–00 | 45 – 31 |
| 27D–81960–00 | 45 – 25 |
| 5VY–82100–00 | 45 – 1 |
| 5SL–82113–01 | 46 – 18 |
| 1WS–82115–01 | 45 – 7 |
| 5SL–82119–10 | 45 – 5 |
| 1WS–8212B–00 | 20 – 18 |
| 1WS–82131–00 | 45 – 2 |
| 1AE–82151–00 | 45 – 4 |
| 5JJ–82151–00 | 45 – 10 |
| 5JJ–82151–10 | 45 – 12 |
| 5JJ–82151–30 | 45 – 11 |
| 5JJ–82151–80 | 45 – 9 |
| 1WS–82309–00 | 46 – 14 |
| 1WS–82310–00 | 46 – 3 |
| 1WS–82380–00 | 46 – 1 |
| 1WS–8246B–00 | 45 – 29 |
| 1WS–82504–00 | 46 – 9 |
| 5SL–82511–08 | 46 – 19 |
| 1WS–82530–00 | 37 – 18 |
| 1WS–82540–00 | 46 – 4 |
| 1WS–8255P–00 | 46 – 17 |
| 1WS–82566–00 | 35 – 12 |
| 5PS–82576–01 | 45 – 32 |
| 1WS–82590–01 | 45 – 8 |
| 1UA–82591–00 | 45 – 19 |

| PART NO. | REF. NO. |
|---|---|
| 1B3–82911–00 | 44 – 1 |
| 3YX–82917–01 | 44 – 8 |
| 1WS–83310–00 | 40 – 1 |
| 1KB–83311–00 | 40 – 2 |
| | 40 – 6 |
| | 40 – 11 |
| | 40 – 15 |
| 3D7–83318–10 | 40 – 9 |
| | 40 – 18 |
| 1WS–83320–00 | 40 – 5 |
| 1WS–83330–00 | 40 – 10 |
| 1KB–8333A–00 | 40 – 3 |
| | 40 – 16 |
| 1WS–83340–00 | 40 – 14 |
| 1KB–8334A–00 | 40 – 7 |
| | 40 – 12 |
| 3XV–83350–21 | 46 – 23 |
| 1WS–83371–00 | 46 – 24 |
| 1WS–83500–00 | 41 – 1 |
| 3C3–83513–00 | 24 – 16 |
| 5PS–83513–00 | 41 – 3 |
| 1WS–83559–00 | 41 – 4 |
| 4P9–83591–00 | 46 – 7 |
| 1WS–83755–00 | 46 – 11 |
| 5EB–83912–03 | 44 – 2 |
| 5JJ–83913–00 | 44 – 11 |
| 5VS–83922–00 | 34 – 9 |
| 4XV–83929–00 | 44 – 7 |
| 2C0–83945–00 | 44 – 3 |
| 5LV–83951–00 | 44 – 6 |
| 1WS–83972–00 | 44 – 12 |
| 1WS–83975–00 | 44 – 15 |
| 1HP–83980–01 | 34 – 12 |
| 1WS–84118–00–P0 | 42 – 11 |
| 1WS–84119–00–P0 | 42 – 13 |
| 1WS–84136–00 | 24 – 7 |
| 1WS–84300–00 | 42 – 1 |
| 1RC–84314–00 | 42 – 3 |
| 1RC–84347–00 | 42 – 4 |
| 1TP–84347–00 | 43 – 9 |
| 1WS–84359–00 | 42 – 7 |
| 1WS–84396–00 | 42 – 19 |
| 1RC–84397–00 | 42 – 2 |
| 1WS–84526–00 | 42 – 5 |
| 1WS–84527–00 | 24 – 15 |
| 1WS–84547–00 | 43 – 8 |
| 1WS–8454J–00 | 42 – 6 |
| 1WS–84710–00 | 43 – 1 |
| 1WS–84740–00 | 43 – 7 |
| 4AG–85111–00 | 46 – 26 |
| 1WS–85112–00 | 46 – 27 |
| 1WS–85122–00 | 46 – 28 |
| 3Y6–85130–02 | 20 – 39 |
| 1WS–85801–00 | 10 – 5 |
| 3B4–85885–00 | 10 – 15 |
| 5YU–85886–00 | 26 – 5 |
| 1WS–8591A–00 | 46 – 16 |
| 1WS–8592A–00 | 11 – 4 |
| 54P–E416A–00 | 10 – 6 |
| 3D9–H3333–10 | 40 – 4 |
| | 40 – 8 |
| | 40 – 13 |
| | 40 – 17 |
| 5VX–W0042–51 | 37 – 2 |
| 2TV–W2470–00 | 28 – 17 |
| 1WS–W8250–00 | 46 – 15 |
| 90101–06043 | 12 – 11 |
| 90101–10025 | 35 – 4 |
| 90101–12049 | 22 – 19 |
| 90105–05024 | 1 – 19 |
| 90105–06027 | 1 – 5 |
| 90105–06206 | 20 – 36 |
| 90105–07006 | 4 – 3 |
| | 4 – 8 |
| 90105–08164 | 11 – 8 |
| 90105–10212 | 23 – 5 |
| 90105–10219 | 19 – 3 |
| 90105–10283 | 23 – 2 |
| 90105–102A6 | 22 – 11 |
| 90105–10349 | 19 – 4 |
| 90105–10445 | 2 – 21 |
| 90105–10638 | 30 – 14 |
| | 30 – 26 |
| 90105–12092 | 19 – 7 |
| 90105–126A8 | 2 – 11 |
| 90109–06100 | 12 – 18 |
| 90109–06202 | 20 – 20 |
| 90109–06245 | 21 – 4 |
| | 21 – 13 |
| 90109–06293 | 1 – 10 |
| 90109–06295 | 4 – 20 |
| 90109–064G6 | 30 – 2 |
| 90109–066F0 | 1 – 21 |
| 90109–08045 | 32 – 2 |
| 90109–08196 | 46 – 20 |
| 90109–086F8 | 35 – 24 |
| 90109–086F8 | 36 – 11 |
| 90110–05067 | 46 – 6 |
| 90110–05071 | 35 – 14 |
| 90110–05112 | 26 – 19 |
| 90110–06081 | 1 – 13 |
| 90110–06087 | 27 – 13 |
| | 27 – 32 |
| 90110–06122 | 20 – 7 |
| 90110–06152 | 5 – 8 |
| 90110–06163 | 6 – 23 |
| 90110–06168 | 7 – 6 |
| 90110–06172 | 26 – 7 |
| | 28 – 7 |
| 90110–06173 | 7 – 11 |
| 90110–06177 | 38 – 3 |
| 90110–06274 | 5 – 39 |
| 90110–06388 | 13 – 8 |
| | 13 – 15 |
| 90110–06389 | 13 – 9 |
| | 13 – 18 |
| 90110–06395 | 12 – 22 |
| 90110–06396 | 4 – 17 |
| | 13 – 12 |
| 90110–08062 | 21 – 5 |
| | 21 – 14 |
| 90110–08071 | 35 – 41 |
| | 36 – 24 |
| 90110–08111 | 19 – 12 |
| 90110–08231 | 35 – 60 |
| | 36 – 41 |
| 90110–10044 | 19 – 11 |
| 90111–05003 | 27 – 7 |
| | 27 – 10 |
| | 27 – 17 |
| | 27 – 27 |
| | 27 – 29 |
| | 27 – 36 |
| 90111–05007 | 27 – 44 |
| | 27 – 46 |
| 90111–05037 | 27 – 18 |
| | 27 – 37 |
| 90111–06038 | 42 – 8 |
| 90111–06060 | 11 – 3 |
| 90111–06084 | 26 – 12 |
| | 27 – 50 |
| 90111–06089 | 20 – 30 |
| 90111–06095 | 41 – 5 |
| 90111–06101 | 33 – 13 |
| 90111–06119 | 22 – 27 |
| | 26 – 30 |
| 90111–06122 | 19 – 34 |
| 90111–06137 | 43 – 2 |
| 90111–06150 | 42 – 15 |
| 90111–06151 | 6 – 31 |
| | 20 – 5 |
| 90111–10006 | 35 – 2 |
| | 36 – 2 |
| 90111–10059 | 35 – 17 |
| 90116–08087 | 1 – 8 |
| 90116–10048 | 31 – 15 |
| 90119–06209 | 19 – 20 |
| 90119–06263 | 15 – 10 |
| 90119–09014 | 12 – 12 |
| 90119–10056 | 1 – 12 |
| 90149–06030 | 28 – 19 |
| 90149–06105 | 20 – 13 |
| | 20 – 16 |
| | 35 – 48 |
| | 36 – 29 |
| 90149–06109 | 38 – 4 |
| 90149–06158 | 17 – 9 |
| 90149–06189 | 16 – 16 |
| 90149–06302 | 42 – 21 |
| 90149–08030 | 14 – 3 |
| 90157–05025 | 35 – 23 |
| | 36 – 10 |
| 90160–05013 | 9 – 10 |
| 90164–05001 | 41 – 2 |
| 90170–06026 | 35 – 39 |
| 90170–08010 | 37 – 6 |
| 90179–06072 | 42 – 22 |
| 90179–08410 | 11 – 6 |
| 90179–10024 | 19 – 5 |
| 90179–20007 | 15 – 16 |
| 90179–22018 | 16 – 42 |
| 90183–04039 | 20 – 23 |
| 90183–05042 | 21 – 7 |
| | 21 – 16 |
| | 43 – 5 |
| 90183–05076 | 21 – 9 |
| | 21 – 18 |
| | 27 – 2 |
| | 27 – 6 |
| | 27 – 22 |
| | 27 – 26 |
| | 27 – 41 |
| 90183–05076 | 27 – 49 |
| 90183–05M02 | 21 – 26 |
| | 21 – 28 |
| | 27 – 12 |
| | 27 – 31 |
| 90183–060A6 | 45 – 26 |
| 90183–061A7 | 42 – 10 |
| 90185–10023 | 35 – 8 |
| 90185–16002 | 22 – 9 |
| 90185–18009 | 31 – 28 |
| 90201–04030 | 45 – 34 |
| 90201–054K4 | 43 – 13 |
| 90201–06029 | 42 – 18 |
| 90201–064K6 | 9 – 21 |
| 90201–08053 | 35 – 37 |
| | 36 – 22 |
| 90201–08070 | 37 – 8 |
| 90201–10029 | 15 – 20 |
| 90201–10035 | 19 – 6 |
| | 35 – 7 |
| 90201–10043 | 24 – 10 |
| 90201–10045 | 22 – 12 |
| | 31 – 18 |
| 90201–12008 | 2 – 12 |
| 90201–12051 | 35 – 34 |
| | 36 – 21 |
| 90201–12575 | 18 – 12 |
| 90201–13020 | 19 – 8 |
| 90201–164H4 | 22 – 8 |
| 90201–17018 | 35 – 5 |
| 90201–177G4 | 18 – 8 |
| 90201–18021 | 31 – 29 |
| 90201–20008 | 16 – 43 |
| 90201–20030 | 15 – 14 |
| 90202–05088 | 27 – 19 |
| | 27 – 38 |
| 90206–12074 | 35 – 35 |
| | 36 – 19 |
| 90208–20001 | 15 – 15 |
| 90208–22002 | 16 – 41 |
| 90209–08295 | 35 – 42 |
| | 36 – 25 |
| 90209–21332 | 16 – 4 |
| | 16 – 8 |
| 90209–21351 | 16 – 12 |
| 90209–22352 | 16 – 11 |
| 90209–28008 | 16 – 24 |
| | 16 – 28 |
| 90209–28008 | 16 – 35 |
| 90214–28002 | 16 – 32 |
| 90214–29002 | 16 – 31 |
| 90240–08005 | 37 – 7 |
| 90269–05055 | 24 – 22 |
| 90269–06002 | 19 – 23 |
| | 20 – 27 |
| 90269–06008 | 6 – 21 |
| | 21 – 6 |
| | 21 – 15 |
| | 21 – 30 |
| 90269–07007 | 22 – 28 |
| 90269–07008 | 20 – 38 |
| 90269–07077 | 19 – 38 |
| | 27 – 16 |
| | 27 – 35 |
| | 27 – 42 |
| | 27 – 53 |
| 90269–08008 | 35 – 51 |
| | 36 – 32 |
| 90280–05029 | 2 – 10 |
| 90282–04001 | 2 – 20 |
| 90331–16001 | 4 – 6 |
| 90338–06018 | 20 – 21 |
| | 41 – 6 |
| 90338–15004 | 19 – 31 |
| 90338–16262 | 12 – 5 |
| 90340–14132 | 8 – 6 |
| 90340–18002 | 1 – 6 |
| 90340–36005 | 13 – 2 |
| 90380–16158 | 22 – 6 |
| 90387–05028 | 37 – 14 |
| 90387–05042 | 43 – 11 |
| 90387–06024 | 6 – 22 |
| 90387–06026 | 24 – 17 |
| 90387–06057 | 35 – 47 |
| | 36 – 28 |
| 90387–06066 | 20 – 8 |
| 90387–06107 | 20 – 14 |
| | 20 – 17 |
| 90387–0611W | 27 – 47 |
| 90387–06130 | 6 – 30 |
| 90387–06136 | 26 – 4 |
| 90387–06170 | 42 – 9 |
| 90387–06287 | 26 – 11 |
| 90387–062M9 | 19 – 44 |
| 90387–06300 | 9 – 19 |
| 90387–06301 | 42 – 16 |

| PART NO. | REF. NO. |
|---|---|
| 90387–06372 | 19 – 22 |
| | 20 – 29 |
| | 22 – 26 |
| | 35 – 43 |
| 90387–067V1 | 43 – 3 |
| 90387–07042 | 27 – 51 |
| 90387–07391 | 6 – 6 |
| | 28 – 6 |
| 90387–08079 | 20 – 6 |
| 90387–08101 | 21 – 8 |
| | 21 – 17 |
| 90387–1001B | 19 – 19 |
| 90387–10050 | 35 – 6 |
| 90387–10107 | 27 – 15 |
| | 27 – 34 |
| 90387–1012A | 22 – 16 |
| | 23 – 4 |
| 90387–17017 | 29 – 8 |
| 90387–20035 | 31 – 20 |
| 90387–20036 | 31 – 19 |
| 90387–21003 | 16 – 10 |
| 90387–25008 | 16 – 39 |
| 90387–250R3 | 16 – 3 |
| 90387–28004 | 16 – 30 |
| | 16 – 34 |
| 90387–30012 | 16 – 19 |
| 90387–31003 | 16 – 23 |
| 90401–10020 | 37 – 21 |
| | 37 – 26 |
| 90401–10042 | 34 – 19 |
| 90401–10172 | 34 – 18 |
| 90401–20009 | 8 – 3 |
| 90430–06014 | 5 – 5 |
| 90430–08143 | 13 – 5 |
| 90430–10004 | 46 – 8 |
| 90430–10005 | 34 – 20 |
| | 37 – 22 |
| | 37 – 27 |
| 90445–08010 | 9 – 30 |
| 90445–08020 | 6 – 15 |
| 90445–11M08 | 6 – 26 |
| 90450–35001 | 5 – 12 |
| | 6 – 12 |
| 90450–56011 | 9 – 2 |
| | 9 – 14 |
| 90450–56012 | 9 – 3 |
| 90462–10064 | 12 – 19 |
| 90464–07M40 | 6 – 27 |
| 90464–07M40 | 45 – 13 |
| 90464–11007 | 26 – 29 |
| 90464–13073 | 44 – 14 |
| | 44 – 18 |
| | 45 – 23 |
| 90464–14010 | 45 – 17 |
| | 45 – 22 |
| | 45 – 24 |
| 90464–17008 | 37 – 25 |
| 90464–18002 | 20 – 22 |
| | 34 – 25 |
| 90464–18007 | 45 – 16 |
| 90464–18011 | 45 – 18 |
| 90464–20191 | 45 – 15 |
| 90464–65001 | 45 – 20 |
| 90465–08045 | 13 – 16 |
| | 36 – 3 |
| 90465–13275 | 20 – 25 |
| 90465–13M24 | 46 – 21 |
| 90467–08003 | 6 – 25 |
| 90467–08075 | 6 – 17 |
| | 6 – 24 |
| 90467–090A2 | 26 – 23 |
| | 26 – 25 |
| 90467–11044 | 37 – 16 |
| 90467–13083 | 9 – 16 |
| 90467–160A2 | 9 – 33 |
| 90467–170A6 | 5 – 21 |
| | 5 – 23 |
| 90467–17128 | 9 – 32 |
| 90467–290A0 | 5 – 11 |
| | 5 – 13 |
| | 6 – 11 |
| 90468–15139 | 33 – 6 |
| 90480–01558 | 27 – 20 |
| | 27 – 39 |
| 90480–01559 | 27 – 3 |
| | 27 – 23 |
| | 27 – 54 |
| 90480–10003 | 43 – 6 |
| 90480–12015 | 42 – 17 |
| 90480–12023 | 43 – 12 |
| 90480–13001 | 43 – 4 |
| 90480–13010 | 7 – 9 |
| 90480–13018 | 27 – 48 |
| 90480–14003 | 35 – 46 |
| | 36 – 27 |
| 90480–14100 | 20 – 24 |
| 90480–14452 | 27 – 52 |
| 90480–14604 | 28 – 5 |
| 90480–15001 | 9 – 17 |
| 90480–15014 | 9 – 18 |
| 90480–15363 | 6 – 5 |
| 90480–16003 | 26 – 10 |
| 90480–17007 | 27 – 14 |
| | 27 – 33 |
| 90480–30167 | 19 – 30 |
| 90501–06022 | 17 – 3 |
| 90501–12743 | 35 – 55 |
| | 36 – 36 |
| 90501–22721 | 2 – 17 |
| 90501–230E4 | 15 – 9 |
| 90506–18021 | 18 – 1 |
| 90506–23008 | 36 – 23 |
| 90506–23018 | 35 – 9 |
| 90508–18056 | 35 – 21 |
| | 36 – 8 |
| 90508–18132 | 15 – 19 |
| 90508–29040 | 18 – 5 |
| 90520–01002 | 20 – 2 |
| | 20 – 3 |
| | 20 – 4 |
| 90520–01004 | 19 – 25 |
| 90520–02011 | 26 – 33 |
| 90520–05018 | 42 – 12 |
| 90520–05019 | 42 – 14 |
| 90520–06004 | 21 – 22 |
| 90520–06005 | 21 – 3 |
| | 21 – 12 |
| 90520–09002 | 27 – 56 |
| 90520–10023 | 27 – 9 |
| 90520–10024 | 21 – 20 |
| 90520–20003 | 19 – 14 |
| 90520–20004 | 19 – 13 |
| 91312–04025 | 45 – 33 |
| 91312–05010 | 26 – 17 |
| 91312–05020 | 46 – 2 |
| 91312–06016 | 46 – 13 |
| 91312–06025 | 39 – 10 |
| 91312–06030 | 8 – 9 |
| 91314–06014 | 5 – 7 |
| 91314–08030 | 24 – 5 |
| | 25 – 43 |
| 91314–08040 | 25 – 19 |
| 91314–10035 | 24 – 6 |
| 91317–03006 | 6 – 9 |
| 91317–05010 | 26 – 20 |
| 91317–05040 | 33 – 10 |
| 91317–06020 | 18 – 15 |
| 91380–06012 | 45 – 14 |
| 91401–20012 | 37 – 9 |
| 91401–25015 | 35 – 59 |
| | 36 – 40 |
| 91402–25015 | 35 – 20 |
| | 36 – 7 |
| 91701–08040 | 35 – 19 |
| | 36 – 6 |
| 91702–08040 | 35 – 58 |
| | 36 – 39 |
| 91808–16023 | 1 – 3 |
| | 1 – 4 |
| 92012–06010 | 19 – 17 |
| 92012–06012 | 26 – 13 |
| 92012–06020 | 35 – 44 |
| 92014–06012 | 35 – 31 |
| 92014–06016 | 22 – 31 |
| 92014–08025 | 36 – 16 |
| 92017–06010 | 19 – 36 |
| | 22 – 32 |
| | 26 – 27 |
| 92017–08012 | 13 – 4 |
| 92902–04100 | 34 – 14 |
| 92902–04600 | 34 – 15 |
| 92902–08600 | 31 – 26 |
| 92902–10200 | 24 – 9 |
| 92907–05600 | 34 – 28 |
| 92907–08600 | 5 – 26 |
| 93101–12173 | 5 – 34 |
| 93102–12106 | 18 – 11 |
| 93102–15212 | 5 – 30 |
| 93102–25017 | 29 – 4 |
| 93102–28022 | 31 – 3 |
| 93102–40030 | 16 – 21 |
| 93106–22019 | 22 – 3 |
| 93106–40013 | 31 – 13 |
| 93108–35004 | 22 – 5 |
| 93109–17071 | 22 – 15 |
| | 22 – 22 |
| 93210–04092 | 12 – 3 |
| 93210–07540 | 12 – 14 |
| 93210–12790 | 12 – 6 |
| 93210–16325 | 12 – 9 |
| 93210–207A0 | 7 – 8 |
| 93210–21001 | 46 – 5 |
| 93210–235A1 | 5 – 2 |
| | 5 – 6 |
| 93210–27194 | 13 – 20 |
| 93210–33786 | 5 – 15 |
| 93210–357A3 | 13 – 3 |
| 93210–40M10 | 24 – 23 |
| 93306–00006 | 14 – 8 |
| 93306–00106 | 5 – 32 |
| | 15 – 8 |
| 93306–00416 | 31 – 4 |
| 93306–20352 | 29 – 3 |
| 93306–20464 | 16 – 14 |
| | 16 – 44 |
| 93306–20480 | 31 – 2 |
| 93306–205B5 | 31 – 11 |
| 93306–20663 | 16 – 18 |
| 93310–232R9 | 15 – 12 |
| 93315–21570 | 5 – 29 |
| 93315–31758 | 22 – 14 |
| 93317–11096 | 5 – 28 |
| | 14 – 7 |
| 93317–11295 | 18 – 10 |
| 93317–22262 | 22 – 2 |
| 93317–31771 | 22 – 21 |
| 93399–99931 | 24 – 1 |
| 93399–99932 | 25 – 42 |
| 93440–25186 | 16 – 5 |
| | 16 – 7 |
| 93440–31187 | 16 – 25 |
| | 16 – 27 |
| | 16 – 36 |
| 93440–64199 | 16 – 20 |
| 93450–19052 | 2 – 9 |
| 93501–04011 | 1 – 7 |
| | 35 – 56 |
| | 36 – 37 |
| 93603–12007 | 5 – 38 |
| 93605–10090 | 2 – 18 |
| 93900–00030 | 29 – 6 |
| | 31 – 8 |
| 94112–17121 | 29 – 5 |
| 94118–17080 | 31 – 7 |
| 94581–79060 | 7 – 4 |
| 94582–40108 | 31 – 21 |
| 94591–61134 | 4 – 12 |
| 94701–00436 | 1 – 9 |
| 95022–06008 | 45 – 6 |
| 95022–06010 | 5 – 4 |
| 95022–06010 | 20 – 11 |
| | 36 – 4 |
| 95022–06020 | 45 – 27 |
| 95022–08035 | 24 – 13 |
| 95027–06020 | 44 – 5 |
| 95302–08600 | 31 – 25 |
| 95314–06700 | 35 – 40 |
| 95602–05200 | 20 – 40 |
| | 35 – 15 |
| | 43 – 10 |
| 95602–10100 | 24 – 11 |
| 95602–10200 | 22 – 13 |
| | 23 – 3 |
| | 23 – 6 |
| | 31 – 16 |
| 95602–12200 | 22 – 20 |
| 95607–06200 | 44 – 4 |
| 95617–06100 | 34 – 8 |
| 95702–06500 | 19 – 33 |
| | 28 – 15 |
| | 46 – 29 |
| 95707–05500 | 9 – 23 |
| | 9 – 26 |
| | 37 – 24 |
| 95707–06500 | 46 – 25 |
| 95802–06010 | 35 – 50 |
| | 36 – 31 |
| 95802–06025 | 6 – 7 |
| 95807–06012 | 19 – 43 |
| 95812–06010 | 28 – 11 |
| 95812–06020 | 5 – 16 |
| 95812–06040 | 7 – 3 |
| | 12 – 16 |
| 95812–06060 | 12 – 17 |
| 95812–08065 | 12 – 15 |
| 95817–06020 | 5 – 19 |
| 95817–06025 | 9 – 20 |
| 95817–08100 | 26 – 8 |
| 95822–06012 | 19 – 21 |
| 95824–06016 | 11 – 9 |
| 95827–06025 | 24 – 18 |
| 97027–05012 | 34 – 27 |
| 97702–50012 | 21 – 23 |
| 97707–50016 | 21 – 24 |
| 98502–04012 | 34 – 13 |
| 98502–05012 | 26 – 6 |
| 98502–06012 | 10 – 8 |
| 98507–04010 | 44 – 10 |

| PART NO. | REF. NO. | PART NO. | REF. NO. | PART NO. | REF. NO. | PART NO. | REF. NO. | PART NO. | REF. NO. | PART NO. | REF. NO. |
|---|---|---|---|---|---|---|---|---|---|---|---|
| 98507–04020 | 44 – 16 | | | | | | | | | | |
| 98507–04025 | 44 – 13 | | | | | | | | | | |
| 98507–04030 | 44 – 17 | | | | | | | | | | |
| 98704–03020 | 44 – 9 | | | | | | | | | | |
| 99001–07600 | 5 – 27 | | | | | | | | | | |
| 99002–10600 | 18 – 13 | | | | | | | | | | |
| 99009–10400 | 15 – 21 | | | | | | | | | | |
| 99009–12400 | 5 – 35 | | | | | | | | | | |
| 99009–15500 | 7 – 2 | | | | | | | | | | |
| 99009–17400 | 18 – 9 | | | | | | | | | | |
| 99246–00100 | 27 – 61 | | | | | | | | | | |
| | 27 – 62 | | | | | | | | | | |
| 99530–08012 | 13 – 7 | | | | | | | | | | |
| | 13 – 14 | | | | | | | | | | |
| 99530–10014 | 12 – 4 | | | | | | | | | | |
| 99530–10114 | 1 – 15 | | | | | | | | | | |